

[Manuals.plus](#) /

› [Prestige](#) /

› Prestige Marvel Plus 2 Burner Glass Top Gas Stove (GTM 02) Manual Ignition User Manual

Prestige GTM 02

Prestige Marvel Plus 2 Burner Glass Top Gas Stove (GTM 02) Manual Ignition User Manual

Model: GTM 02

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Prestige Marvel Plus 2 Burner Glass Top Gas Stove (Model GTM 02). Please read this manual thoroughly before installation, operation, or maintenance to ensure proper functioning and to prevent potential hazards. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: Failure to follow these instructions may result in fire, explosion, electric shock, or property damage, personal injury, or death.

- Ensure the gas stove is installed by a qualified technician in accordance with local regulations and standards.
- Use only the type of gas specified for this appliance (LPG).
- Do not store or use flammable materials near the gas stove.
- Ensure adequate ventilation in the kitchen area during operation.
- Keep children and pets away from the appliance during use.
- Do not leave the gas stove unattended while cooking.
- If you smell gas, immediately turn off the gas supply, open windows and doors, and do not operate any electrical switches or appliances. Contact your gas supplier or emergency services.
- Do not use abrasive cleaners or sharp objects on the glass top to avoid scratches or damage.
- Ensure all burners are completely off after use by turning the knobs to the 'OFF' position.

PRODUCT OVERVIEW

The Prestige Marvel Plus 2 Burner Gas Stove is designed for efficient and convenient cooking. Familiarize yourself with its components and features.



Image: The Prestige Marvel Plus 2 Burner Gas Stove in a kitchen setting, showcasing its compact design and two active burners with cooking pans.



Image: Top-down view of the gas stove with dimensions indicated: 64.5 cm width, 38.5 cm depth, and 13 cm height.

Design For Durability & Convenience

Perfect For Indian Cooking



Tri-Pin Brass Burner

Highly durable & corrosion-resistant for tadkas



Heavy Duty Pan Support

Extremely durable & tough



Drip Tray

Prevents drips and spillage on the stove



Image: Detailed view highlighting the Tri-Pin Brass Burner for durability, Heavy Duty Pan Support for stability, and Drip Tray for spill prevention.

Efficient Hassle-free Cooking

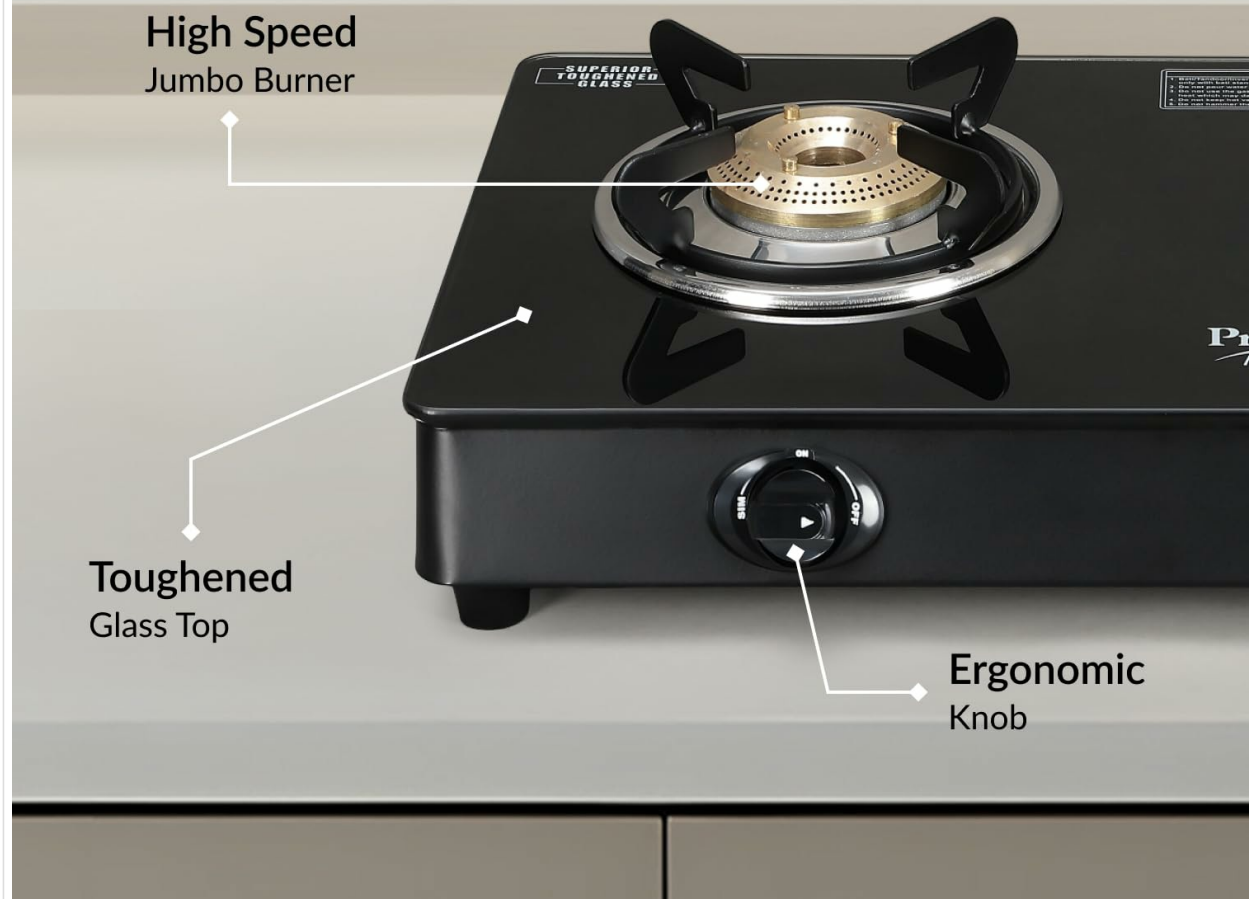


Image: Detailed view showing the High Speed Jumbo Burner for faster cooking, the Toughened Glass Top for resistance to wear, and an Ergonomic Knob for control.

Key Features:

- **High Speed Jumbo Burner:** Designed to accelerate the cooking process.
- **Spill-proof Design:** Facilitates hassle-free cooking and maintains a cleaner kitchen.
- **Tri-pin Burners:** Ensures high efficiency and faster cooking.
- **Additional Drip-tray:** Each burner includes a drip tray for easy cleaning and cooking convenience.
- **Superior Toughened Glass Top:** Resists scratches and withstands daily wear and tear.

SETUP

1. **Unpacking:** Carefully remove the gas stove from its packaging. Inspect for any damage. Report any damage to the retailer immediately.
2. **Placement:** Place the gas stove on a stable, flat, and non-combustible surface. Ensure there is adequate clearance from walls and overhead cabinets as per local safety standards.
3. **Gas Connection:**

- Ensure the gas cylinder valve is closed.
 - Connect the gas hose to the gas stove's inlet nozzle and secure it with a hose clamp.
 - Connect the other end of the hose to the gas regulator on the gas cylinder, ensuring a tight and secure fit.
 - Check all connections for leaks using a soap solution (apply to joints; bubbles indicate a leak). If a leak is detected, tighten connections or replace the hose/regulator. Do not use an open flame to check for leaks.
4. **Burner Assembly:** Ensure the Tri-pin burners and pan supports are correctly placed on their respective positions.

OPERATING INSTRUCTIONS

1. **Before Use:** Ensure the gas cylinder valve is open.
2. **Lighting a Burner:**
 - Push down and turn the corresponding burner knob counter-clockwise to the 'ON' position.
 - Immediately bring a lit matchstick or gas lighter to the burner.
 - Once the flame ignites, adjust the flame intensity by rotating the knob between the 'SIM' (simmer) and 'HIGH' positions.
 - If the burner does not light within a few seconds, turn the knob to 'OFF', wait for a few moments for gas to disperse, and then repeat the lighting process.
3. **Turning Off a Burner:** Turn the burner knob clockwise to the 'OFF' position until you hear a click and the flame extinguishes.
4. **After Cooking:** Always ensure all burner knobs are in the 'OFF' position and close the main gas cylinder valve.

MAINTENANCE

Regular cleaning and maintenance will prolong the life of your gas stove and ensure safe operation.

- **Daily Cleaning:**
 - Allow the stove to cool completely before cleaning.
 - Wipe the toughened glass top with a soft cloth and mild detergent. Avoid abrasive pads or harsh chemicals.
 - Clean the burner drip trays regularly to remove food spills.
- **Burner Cleaning:**
 - Remove the burners and pan supports. Wash them with warm soapy water.
 - Ensure burner holes are not clogged. Use a thin wire or brush if necessary.
 - Dry all parts thoroughly before reassembling.
- **Gas Hose Inspection:** Periodically check the gas hose for cracks, leaks, or damage. Replace if any signs of wear are observed.
- **Professional Servicing:** It is recommended to have your gas stove inspected by a qualified technician at least once a year.

TROUBLESHOOTING

Refer to the following table for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Burner does not light.	Gas supply off, clogged burner holes, faulty lighter.	Open gas cylinder valve. Clean burner holes. Use a working lighter.
Weak or uneven flame.	Clogged burner holes, low gas pressure.	Clean burner holes. Check gas regulator.
Gas smell.	Gas leak from connections or hose.	Immediately turn off gas supply. Ventilate area. Check for leaks with soap solution. Contact technician if leak persists.
Knob is stiff.	Food residue or dirt accumulation.	Clean around the knob area. Do not force the knob.

SPECIFICATIONS

- **Model Number:** 40094 (GTM 02)
- **Colour:** Black
- **Material:** Toughened Glass (Top)
- **Number of Heating Elements:** 2
- **Controls Type:** Knob
- **Heating Element:** LPG
- **Power Source Type:** Gas Powered
- **Item Dimensions (D x W x H):** 72D x 45W x 16H Centimeters
- **Item Weight:** 8.45 Kilograms
- **Included Components:** 1 unit of GTM 02 SS Plus Gas Stove
- **Country of Origin:** India

WARRANTY AND SUPPORT

Your Prestige Marvel Plus 2 Burner Glass Top Gas Stove comes with a manufacturer's warranty.

- **Warranty Description:** 2 Years Warranty
- **Customer Care No:** 080-46824000
- **Email:** Customercare@ttkprestige.com
- **Manufacturer:** Prestige, TTK Prestige Limited
- **Registered Office:** PLOT NO. 38.SIPCOT INDUSTRIAL COMPLEX, HOSUR- 635126, INDIA.

For any service requests, technical assistance, or warranty claims, please contact the customer care team using the details provided above. Please have your model number (GTM 02) and purchase details ready when contacting support.

PRODUCT VIDEOS

No relevant official product videos from the seller were found to embed based on the provided criteria.