

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [RFIVER](#) /

› [RFIVER TF3001 TV Floor Stand Instruction Manual for 32-65 Inch TVs](#)

RFIVER TF3001

RFIVER TF3001 TV Floor Stand Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your RFIVER TF3001 TV Floor Stand. Please read these instructions carefully before installation to ensure safe and correct usage. This stand is designed for televisions ranging from 32 to 65 inches, with a maximum VESA pattern of 400x400mm and a weight capacity of up to 35 kg (77 lbs).

SAFETY INFORMATION

- Do not exceed the maximum weight capacity of 35 kg (77 lbs).
- Ensure your TV's VESA pattern is compatible (100x100mm to 400x400mm).
- Always assemble the stand on a soft, clean surface to prevent scratches.
- Verify all screws and bolts are securely tightened before placing the TV on the stand.
- Keep children and pets away during assembly.
- Do not attempt to modify the stand in any way.

PACKAGE CONTENTS

Please check that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact customer support.

- Main Support Pole
- Tempered Glass Base
- TV Mounting Bracket
- VESA Adapter Plates (if applicable)
- Hardware Kit (screws, washers, spacers, nuts)
- Cable Management Clips
- Assembly Tools (e.g., Allen wrench)
- Instruction Manual

SETUP INSTRUCTIONS

Follow these steps carefully for proper assembly.

Step 1: Assemble the Base and Support Pole

Attach the main support pole to the tempered glass base using the provided hardware. Ensure the pole is securely fastened to the base for stability.



Image: The assembled RFIVER TF3001 TV Floor Stand, ready for TV mounting.

Step 2: Determine VESA Pattern and Attach Brackets to TV

Identify your TV's VESA mounting pattern (the distance between the mounting holes on the back of your TV). Select the appropriate screws, washers, and spacers from the hardware kit. Attach the TV mounting

brackets to the back of your television. Ensure the brackets are level and securely tightened.



Image: Example of VESA mounting holes on a TV back panel.

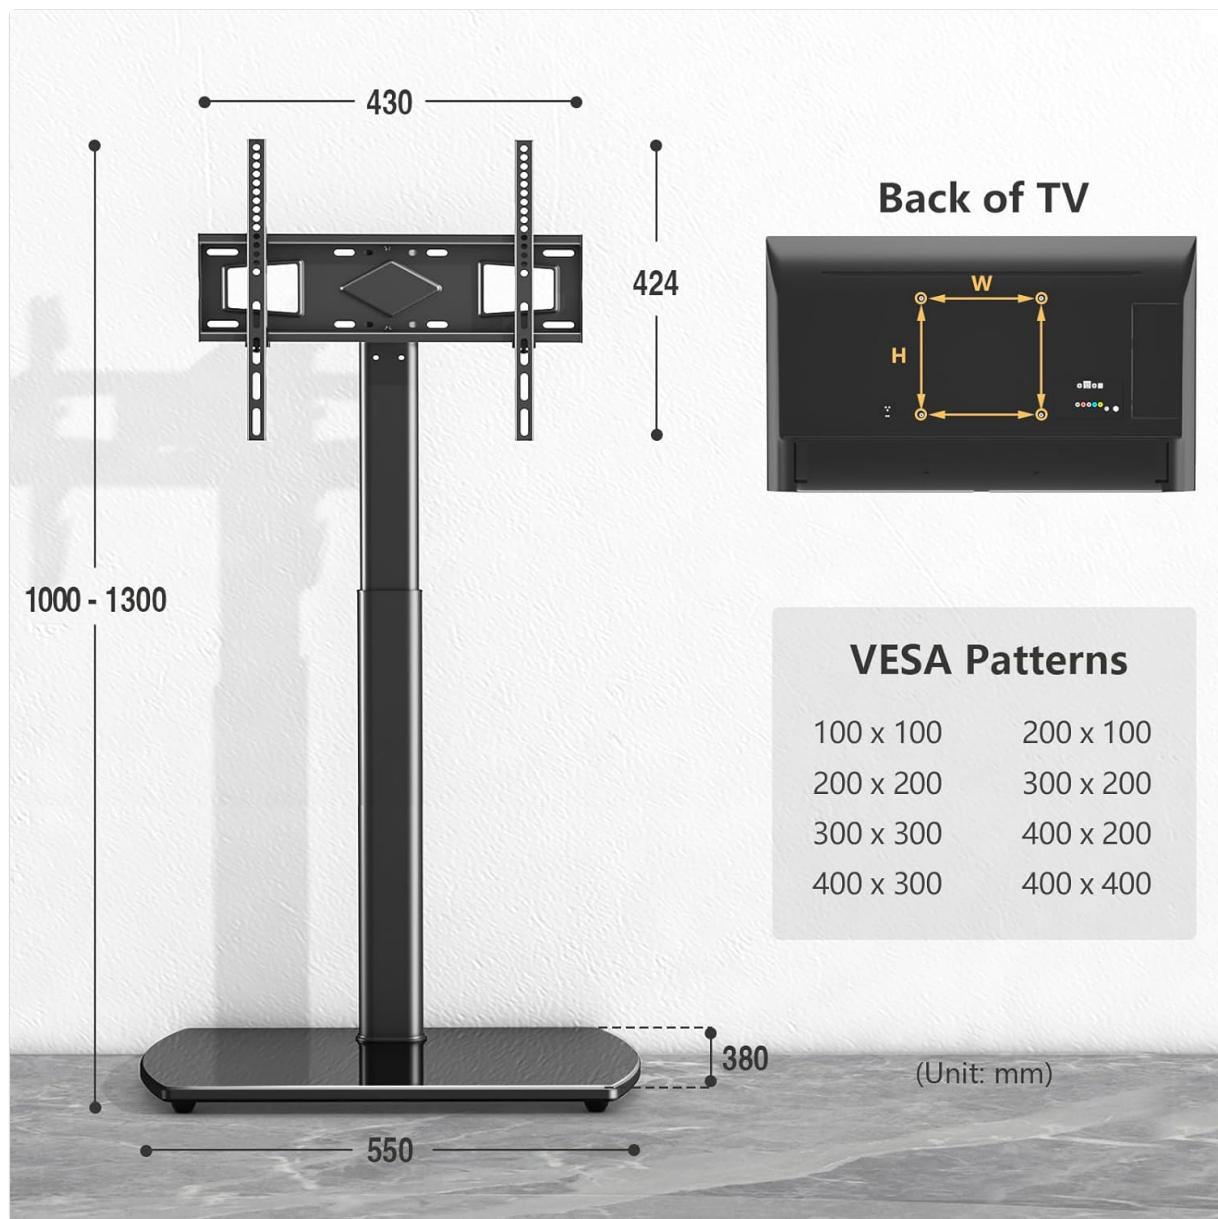


Image: VESA compatibility chart and stand dimensions.

Step 3: Mount the TV to the Stand

Carefully lift the TV (with assistance if necessary) and hook the attached brackets onto the mounting plate of the stand. Ensure the TV is centered and level. Secure the TV using the safety lock mechanism to

prevent accidental dislodgement.



Image: Detail of the safety lock for securing the TV.

OPERATING INSTRUCTIONS

Height Adjustment

The TV stand allows for height adjustment between 1000mm and 1300mm. To adjust the height, loosen the securing bolts on the main support pole, carefully raise or lower the TV to the desired position, and then securely tighten the bolts. Always ensure the TV is stable after adjustment.

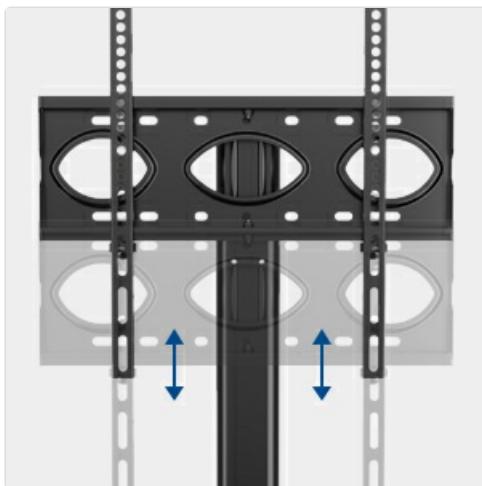


Image: Illustration of the height adjustment mechanism.

Swivel Function

The TV mounting bracket can swivel 60 degrees (30 degrees left and 30 degrees right) to provide optimal viewing angles. Gently rotate the TV to your preferred position. No tools are required for this adjustment.



60° SWIVEL TO INCREASE VIEWING ANGLES

Image: Visual representation of the 60-degree swivel range.

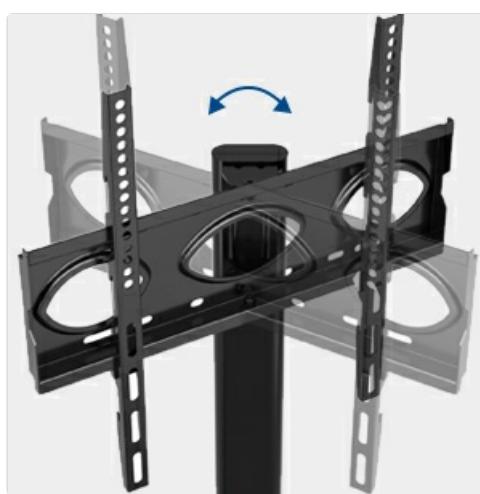


Image: Close-up of the swivel joint.

Cable Management

Utilize the integrated cable management clips on the rear of the main support pole to organize and conceal TV cables. This helps maintain a tidy appearance and prevents cable clutter.



Image: Cable management clips on the stand's pole.

MAINTENANCE

- **Cleaning:** Wipe the stand with a soft, damp cloth. Avoid abrasive cleaners or solvents that may damage the finish.
- **Periodic Checks:** Periodically check all screws and bolts to ensure they remain tight. Re-tighten if necessary.
- **Glass Base Care:** The tempered glass base is durable but can be scratched. Use coasters for items placed on it and avoid dropping heavy objects.

TROUBLESHOOTING

Problem	Possible Cause	Solution
TV is not level.	Mounting brackets are not aligned or tightened unevenly.	Re-check the alignment of the TV mounting brackets and ensure all screws are tightened evenly.
Stand feels unstable.	Loose connections or uneven floor surface.	Verify all assembly bolts are securely tightened. Ensure the stand is placed on a flat, stable surface. Check non-slip feet.
TV cannot be mounted.	Incorrect VESA pattern or TV size/weight.	Confirm your TV's VESA pattern and weight are within the stand's specifications (Max VESA 400x400mm, Max 35kg/77lbs).

SPECIFICATIONS





Brand:	RFIVER
Model:	TF3001
Compatible TV Sizes:	32 - 65 inches
Max VESA Compatibility:	400x400mm (also supports 100x100, 100x200, 200x100, 200x200, 300x200, 200x300, 300x300, 400x200, 400x300)


Max Weight Capacity:	35 kg (77 lbs)
Height Adjustment Range:	1000mm - 1300mm
Swivel Angle:	±30 degrees (60 degrees total)
Material:	Alloy Steel, Tempered Glass
Color:	Black
Product Dimensions (L x W x H):	55 x 38 x 130 cm (approximate, at max height)
Product Weight:	8.8 kg

WARRANTY AND SUPPORT

RFIVER products are designed for durability and performance. For any questions, missing parts, or support needs, please contact RFIVER customer service. Please retain your proof of purchase for warranty claims. For further assistance, please visit the official RFIVER website or contact their customer support channels.

Related Documents - TF3001

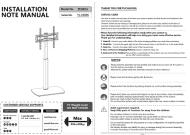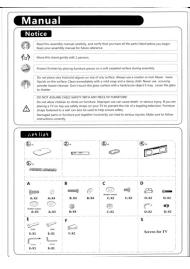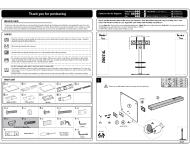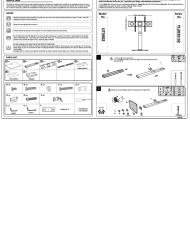	<p>RFIVER TF3001U TV Stand Installation Manual</p> <p>Detailed installation guide for the RFIVER TF3001U TV Stand, including parts list, step-by-step assembly instructions, VESA compatibility chart, and safety guidelines. Learn how to safely mount your TV.</p>
	<p>Rfiver Universal Swivel Tabletop TV Stand Assembly Manual</p> <p>Assembly manual for the Rfiver Universal Swivel Tabletop TV Stand, Model UT2001. Provides step-by-step instructions and parts list for safe and proper installation.</p>
	<p>Rfiver TF2002 TV Stand Assembly Instructions and User Guide</p> <p>Comprehensive guide for assembling the Rfiver TF2002 TV stand. Includes parts list, step-by-step instructions, safety warnings, and cable management tips for your floor TV mount.</p>
	<p>RFIVER UT5002 TV Stand Assembly Instructions and User Guide</p> <p>This document provides assembly instructions, parts list, and safety notices for the RFIVER UT5002 TV Stand. Learn how to safely assemble and install your TV stand for optimal viewing.</p>

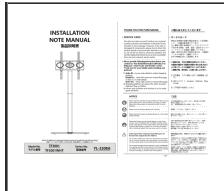

[TF3001 TV Stand Installation Manual](#)

Comprehensive installation guide for the TF3001 TV stand, featuring VESA compatibility, height adjustment, and safety instructions. Includes parts list, assembly steps, and customer support information.