

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [CHUNGHOP](#) /

› [CHUNGHOP RMT-VB201U Remote Control User Manual](#)

CHUNGHOP RMT-VB201U

CHUNGHOP RMT-VB201U Remote Control User Manual

Replacement Remote Control for Sony Blu-ray Disc DVD Players

INTRODUCTION

This manual provides instructions for the CHUNGHOP RMT-VB201U replacement remote control. This remote is designed to function with various Sony Blu-ray Disc and DVD players, offering a direct replacement for your original remote without requiring any programming.

Compatible Sony Models:

- BDP-BX370, BDP-S1700, BDP-S3700, BDP-S6700
- UBP-X700, BDP-S1700ES, 149312311
- BDP-BX150, BDP-BX350, BDP-BX550, BDP-BX650
- BDP-S1500, BDP-S2500, BDP-S2900, BDP-S3500, BDP-S4500, BDP-S5500, BDP-S6500

SETUP

Battery Installation

The RMT-VB201U remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



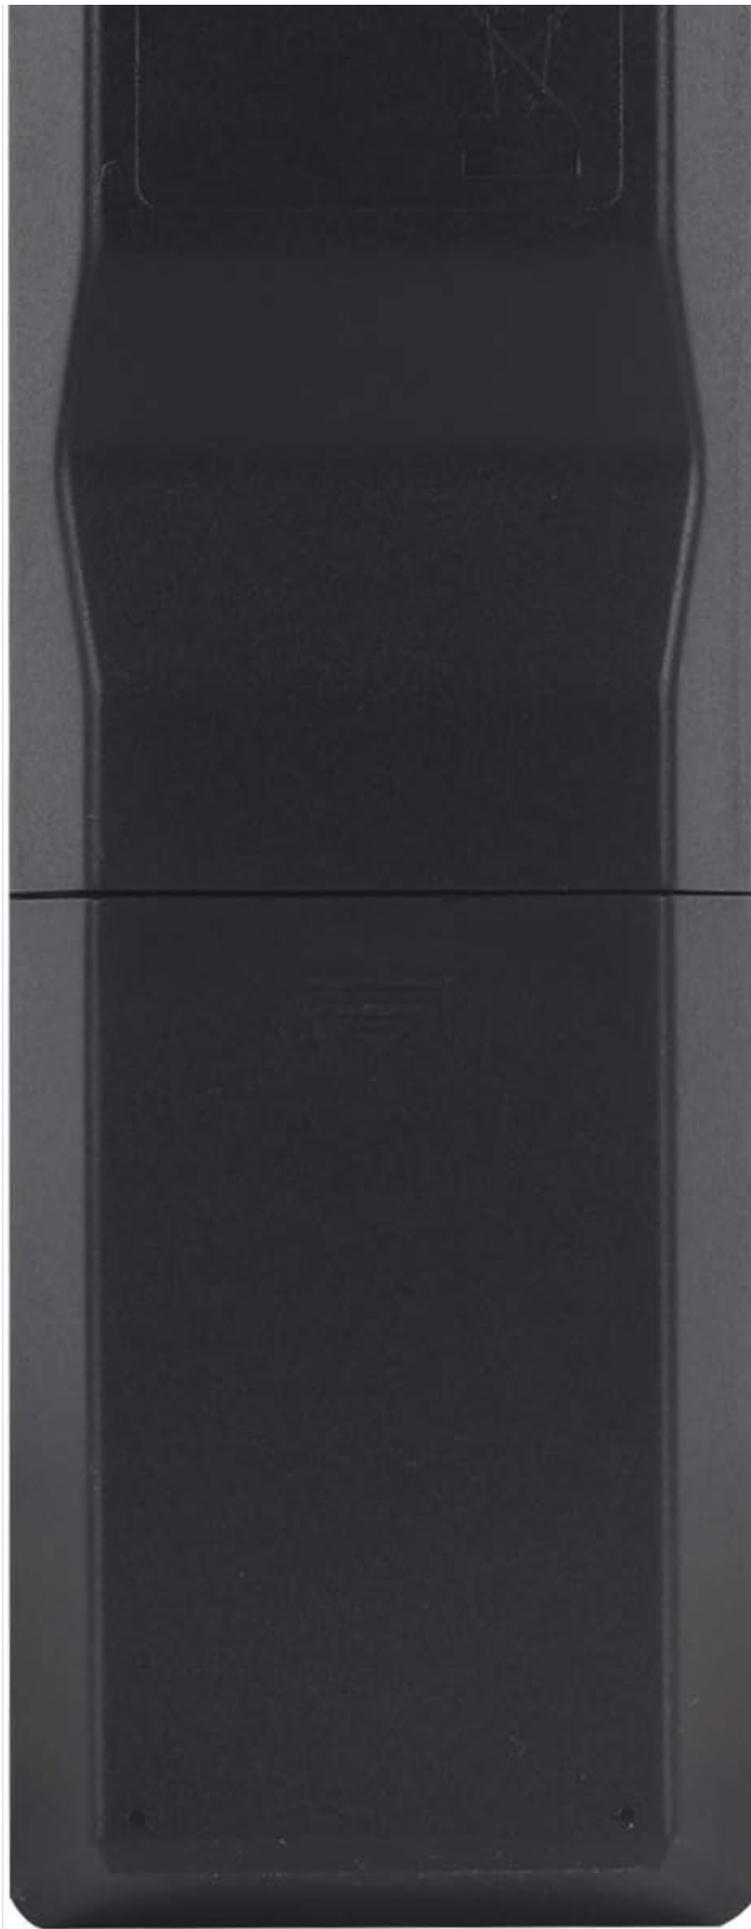


Image: Back view of the RMT-VB201U remote control, illustrating the battery compartment for installation. Once batteries are installed, the remote is ready for use with compatible Sony Blu-ray/DVD players.

OPERATING INSTRUCTIONS

The RMT-VB201U remote control is designed to replicate the functions of your original Sony remote. No programming is required; simply point the remote at your Blu-ray/DVD player and operate as usual.

Key Functions Overview



Image: Front view of the RMT-VB201U remote control, displaying all buttons and their labels.

- **OPEN/CLOSE:** Opens or closes the disc tray.
- **INPUT / TV:** Switches input source on your TV or controls basic TV functions.
- **Directional Pad (Up, Down, Left, Right) & ENTER:** Navigates menus and confirms selections.
- **TOP MENU / POP UP/MENU:** Accesses the disc's top menu or pop-up menu.
- **RETURN:** Goes back to the previous screen or menu.
- **OPTIONS:** Displays context-sensitive options.
- **HOME:** Returns to the main home screen of the player.
- **FAVORITE / NETFLIX:** Direct access buttons for specific functions or streaming services.
- **PLAY / PAUSE / STOP / PREV / NEXT:** Standard media playback controls.
- **SUBTITLE / AUDIO / TV VOL / DISPLAY:** Controls for subtitles, audio tracks, TV volume, and display information.
- **MUTING:** Mutes the audio output.



Image: Side view of the RMT-VB201U remote control, highlighting its profile and button layout.

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

Remove batteries if the remote control will not be used for an extended period to prevent potential battery leakage and damage.

TROUBLESHOOTING

- **Remote not responding:**

- Ensure the remote is pointed directly at the Blu-ray/DVD player's infrared sensor.
- Check if the batteries are correctly installed with the correct polarity (+/-).
- Replace the batteries with fresh AAA batteries.
- Ensure there are no obstructions between the remote and the player.

- **Specific buttons not working:**

- This remote is a replacement and may not support all functions of every Sony player model. Verify your player model is listed in the compatible models section.
- Clean the remote's surface, especially around the unresponsive buttons, to ensure no debris is interfering.

- **Interference:**

- Bright light sources, such as direct sunlight or fluorescent lights, can interfere with the remote's infrared signal. Try operating the remote in a different lighting condition.

SPECIFICATIONS

Brand	CHUNGHOP
Model	RMT-VB201U
Compatible Devices	Sony Blu-ray Disc DVD Players (specific models listed in Introduction)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Special Feature	No Programming Required

WARRANTY INFORMATION

Specific warranty details for this CHUNGHOP product may vary. Please refer to the product packaging or contact the seller directly for information regarding warranty coverage and terms.

SUPPORT

For any questions, concerns, or assistance with your CHUNGHOP RMT-VB201U remote control, please contact the seller or manufacturer directly. They are available to provide support and address any issues you may encounter.