

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [ORNIN](#) /
- › [ORNIN D1005 Cordless Phone User Manual](#)

ORNIN D1005

ORNIN D1005 Cordless Phone User Manual

Model: D1005

1. INTRODUCTION

Thank you for choosing the ORNIN D1005 Cordless Phone. This manual provides detailed instructions for setting up, operating, and maintaining your new phone. Please read this manual thoroughly before use to ensure proper functionality and to maximize your user experience.

The ORNIN D1005 is designed for both home and office environments, offering clear communication and convenient features. Its rubber oil injection finish provides a soft touch and comfortable grip.





Figure 1.1: ORNIN D1005 Cordless Phone and Base Unit.

Key Features:

- Rubber oil injection for a soft and smooth tactile experience.
- Predial and edit functions before making a call.
- Redial capability for the last 10 outgoing calls.
- Call Waiting and Call Forwarding support for internal systems.
- Excellent sound quality with adjustable volume.
- Hands-free speakerphone function.
- Hearing-aid compatible.
- Quiet Mode for silent operation.
- Energy-Saving ECO Mode for reduced power consumption.
- Up to 50 meters talking range from the DECT base.

2. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- 1 x Telephone Handset
- 1 x Cordless Telephone Base
- 1 x User Manual (this document)
- 1 x Set of Batteries (2 AA batteries included)

3. SETUP

Follow these steps to set up your ORNIN D1005 Cordless Phone:

3.1. Battery Installation

1. Locate the battery compartment on the back of the handset.
2. Slide the battery compartment cover downwards to open it.
3. Insert the two AA batteries (included) into the compartment, ensuring correct polarity (+ and -).
4. Close the battery compartment cover by sliding it upwards until it clicks into place.

Up to 10 hours talking time



Plug in and start making calls



1 Connect to
power supply

2 Connect the RJ11
telephone line

NOTE : The Ornin cordless phone is not going to work when the power is off

Figure 3.1: Handset battery installation and base unit connection points.

This image illustrates how to insert the batteries into the handset and shows the power and telephone line connection ports on the base unit.

3.2. Connecting the Base Unit

1. **Connect to Power Supply:** Plug the small end of the power adapter into the DC IN jack on the back of the telephone base. Plug the large end of the power adapter into a standard electrical outlet.
2. **Connect the RJ11 Telephone Line:** Plug one end of the telephone line cord into the TEL LINE jack on the back of the telephone base. Plug the other end of the telephone line cord into a telephone wall jack.

Note: The ORNIN cordless phone will not function when the power is off.

3.3. Initial Charging

Place the handset on the telephone base. The handset will begin charging. For optimal battery performance, allow the handset to charge for at least 12-16 hours before its first use, even if the battery indicator shows a full charge.

4. OPERATING INSTRUCTIONS

4.1. Making and Receiving Calls

- **Making a Call:**
 - Press the **Call** button (green phone icon).
 - Dial the desired phone number.
 - To end the call, press the **End Call** button (red phone icon).
- **Redial and Edit:** You can dial a number first, then press the **Call** button to initiate the call. If you make a mistake, use the **Delete** button to correct digits before calling.
- **Receiving a Call:** When the phone rings, press the **Call** button to answer.
- **Redial:** To redial the last number called, press the **Redial** button. The phone stores the last 10 calls made.

4.2. Volume Adjustment

During a call, press the **Vol. ▲** button to increase the earpiece or speaker volume, or the **Vol. ▼** button to decrease it.

4.3. Speakerphone Function

To activate the speakerphone during a call, press the **Speakerphone** button (speaker icon). Press it again to switch back to the earpiece.



Figure 4.1: Key features of the ORNIN D1005, highlighting the hands-free speaker and 1.6-inch LCD Caller ID display.

This image illustrates the hands-free speaker, mute function, call waiting, 1.6-inch LCD Caller ID display, and quiet mode features.

4.4. Caller ID Display

The 1.6-inch LCD display shows incoming caller information (if subscribed to Caller ID service from your telephone provider). The phone stores up to 30 Caller ID memories.



Backlit Display

Figure 4.2: The backlit display of the ORNIN D1005, showing "CALL LOG".

This image demonstrates the phone's backlit display, which improves visibility in various lighting conditions.



- 30 Caller ID memories**
- 10 Last number redials (32 digits max.)**
- 50 Phone book memories**

Figure 4.3: Memory capacities of the ORNIN D1005.

This image highlights the phone's ability to store 30 Caller ID memories, 10 last number redials (up to 32 digits), and 50 phone book memories.

4.5. Mute Function

During a call, press the **Mute** button (microphone with a slash through it) to temporarily mute your microphone. The other party will not hear you. Press it again to unmute.

4.6. Quiet Mode

The phone features a Quiet Mode to silence the ringer. Refer to the on-screen menu for activation and deactivation of this feature.

4.7. Phonebook

The phonebook allows you to store frequently called numbers. The D1005 can store up to 50 phone book memories. Consult the on-screen menu for instructions on adding, editing, and deleting contacts.

4.8. Call Waiting and Call Forwarding

The phone supports Call Waiting and Call Forwarding to internal systems. Availability and activation of these features depend on your telephone service provider.

4.9. Operating Range

The ORNIN D1005 offers a talking range of up to 50 meters (approximately 164 feet) away from the DECT base unit, depending on environmental conditions and obstacles.



**Talking up to 50 Meters away
from the DECT base**

Figure 4.4: The ORNIN D1005 allows talking up to 50 meters away from the DECT base.

This image illustrates the effective operating range of the cordless phone from its base unit within a typical home environment.

5. MAINTENANCE

Proper care and maintenance will ensure the longevity of your ORNIN D1005 Cordless Phone.

5.1. Cleaning

- Wipe the phone and base unit with a soft, damp cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Avoid getting moisture into any openings.



Figure 5.1: Important care instruction: Keep away from water.

This image emphasizes the importance of keeping the phone away from water to prevent damage.

5.2. Battery Care

- Always use the specified AA batteries.
- If the phone will not be used for an extended period, remove the batteries to prevent leakage.
- Dispose of used batteries according to local regulations.

5.3. General Care

- Avoid dropping the phone or subjecting it to strong impacts.
- Keep the phone away from extreme temperatures, direct sunlight, and sources of heat.
- Do not attempt to disassemble the phone or base unit. This will void the warranty.

6. TROUBLESHOOTING

If you encounter any issues with your ORNIN D1005, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No dial tone.	Telephone line cord is disconnected or faulty. Power adapter is disconnected.	Ensure the telephone line cord is securely plugged into both the base unit and the wall jack. Verify the power adapter is connected to the base unit and a working electrical outlet.
Poor sound quality (static, low volume).	Handset is too far from the base unit. Interference from other electronic devices. Low battery.	Move closer to the base unit. Relocate the base unit away from other electronic devices (e.g., Wi-Fi routers, microwaves). Charge the handset battery. Adjust call volume using the Vol. ▲/▼ buttons.
Ringer does not work or is too quiet.	Ringer volume is set too low or Quiet Mode is active.	Check the ringer volume settings in the phone's menu. Deactivate Quiet Mode if it is enabled.
Handset does not charge.	Handset not properly seated on the base. Charging contacts are dirty. Faulty batteries.	Ensure the handset is correctly placed on the base unit. Clean the charging contacts on both the handset and base with a dry cloth. Replace batteries if they are old or damaged.
Display is blank or unreadable.	Low battery. Phone is off.	Charge the handset. Ensure the phone is powered on.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	D1005
Product Dimensions	2.95 x 3.15 x 6.3 inches (7.5 x 8 x 16 cm)
Item Weight	12 ounces (340 grams)
Display	1.6 inch LCD, Backlit
Visible Screen Diagonal	2 inches / 5 cm
Batteries	2 x AA batteries (included)
Power Source	Battery Powered (with AC adapter for base)
Material	Rubber (for oil injection finish)
Color	Black
Telephone Type	Cordless Telephone
Answering System Type	Digital (Note: This D1005 model does not include an integrated answering machine.)
Caller ID Memory	30 entries
Redial Memory	10 last numbers (max 32 digits)
Phonebook Memory	50 entries
Country of Origin	China

8. WARRANTY AND SUPPORT

ORNIN products are manufactured to high-quality standards. For information regarding warranty coverage and customer support, please refer to the warranty card included with your purchase or visit the official ORNIN website. Please retain your proof of purchase for warranty claims.

For technical assistance or further inquiries, please contact ORNIN customer service.