

[Manuals.plus](#) /

> [LAMAX](#) /

> LAMAX Sentinel2 Bluetooth Speaker User Manual

LAMAX Sentinel2 (LMXSE2)

LAMAX Sentinel2 Bluetooth Speaker User Manual

Model: Sentinel2 (LMXSE2)

1. INTRODUCTION

Thank you for purchasing the LAMAX Sentinel2 Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your device. Please read it carefully to ensure optimal performance and longevity of your speaker.



Figure 1: LAMAX Sentinel2 Bluetooth Speaker. This image shows the speaker from a slight angle, highlighting its compact, rectangular design with a prominent front grille and control buttons on the top surface.

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures or direct sunlight.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble or attempt to repair the device yourself. This will void the warranty.

- Keep the speaker away from children and pets.
- Use only the specified charging cable and power adapter.
- Ensure all port covers are securely closed when using the speaker near water to maintain its IP67 water resistance.

3. PACKAGE CONTENTS

Please check the package for the following items:

- LAMAX Sentinel2 Bluetooth Speaker
- USB-C Charging Cable
- Audio Cable (AUX)
- User Manual

4. DEVICE OVERVIEW

Familiarize yourself with the buttons and ports on your LAMAX Sentinel2 speaker.



Figure 2: Top view of the LAMAX Sentinel2 speaker, showing the control panel. From left to right, the buttons are: Power, Previous Track/Volume Down, Play/Pause, Next Track/Volume Up, and Mode (M).



Figure 3: Front view of the LAMAX Sentinel2 speaker, displaying the large grille with the LAMAX logo embossed in the center.

Controls:

- **Power Button:** Press and hold to power on/off. Short press to check battery status.
- **Previous Track / Volume Down:** Short press for previous track. Press and hold to decrease volume.
- **Play / Pause:** Short press to play/pause music. Short press to answer/end calls. Press and hold to reject calls.

- **Next Track / Volume Up:** Short press for next track. Press and hold to increase volume.
- **Mode (M) Button:** Short press to switch between Bluetooth, AUX, and MicroSD card modes. Press and hold to activate TWS pairing.

Ports:

- **USB-C Port:** For charging the speaker.
- **AUX-in Port:** For wired audio connection.
- **MicroSD Card Slot:** For playing music directly from a memory card.

5. SETUP

5.1 Charging the Speaker

1. Connect the USB-C charging cable to the speaker's USB-C port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status. It will turn off or change color when fully charged.

5.2 Powering On/Off

- To power on, press and hold the Power button until you hear an audible prompt.
- To power off, press and hold the Power button again until you hear an audible prompt.

5.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing blue LED). If not, press the 'M' button to switch modes.
2. Enable Bluetooth on your device (smartphone, tablet, etc.).
3. Search for available Bluetooth devices and select "LAMAX Sentinel2" from the list.
4. Once paired, the LED indicator will stop flashing and remain solid blue, and you will hear a confirmation sound.

5.4 True Wireless Stereo (TWS) Pairing

TWS allows you to connect two LAMAX Sentinel2 speakers for a stereo sound experience.

1. Ensure both LAMAX Sentinel2 speakers are powered on and not connected to any other Bluetooth device.
2. On one of the speakers (this will be the primary speaker), press and hold the 'M' button until you hear a TWS pairing prompt.
3. The two speakers will automatically search for and connect to each other. Once connected, you will hear a confirmation sound.
4. Now, connect your device to the primary speaker via Bluetooth as described in section 5.3.

5.5 Connecting via AUX

1. Connect one end of the 3.5mm audio cable to the AUX-in port on the speaker.
2. Connect the other end to the audio output of your device.
3. Press the 'M' button on the speaker to switch to AUX mode.

5.6 MicroSD Card Playback

1. Insert a MicroSD card (with music files) into the MicroSD card slot.
2. The speaker will automatically switch to MicroSD card mode and begin playing music. If not, press the 'M' button to switch modes.

6. OPERATING

6.1 Music Playback

- **Play/Pause:** Short press the Play/Pause button.
- **Volume Up:** Press and hold the Next Track / Volume Up button.
- **Volume Down:** Press and hold the Previous Track / Volume Down button.
- **Next Track:** Short press the Next Track / Volume Up button.
- **Previous Track:** Short press the Previous Track / Volume Down button.

6.2 Hands-Free Calling

When connected via Bluetooth, the speaker's built-in microphone allows for hands-free calls.

- **Answer Call:** Short press the Play/Pause button.
- **End Call:** Short press the Play/Pause button during a call.
- **Reject Call:** Press and hold the Play/Pause button when a call comes in.

7. MAINTENANCE

7.1 Cleaning

- Wipe the speaker with a soft, dry, or slightly damp cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.

7.2 Storage

- Store the speaker in a cool, dry place away from direct sunlight.
- If storing for an extended period, charge the battery to approximately 50% every few months to preserve battery life.

7.3 Water Resistance (IP67)

- The LAMAX Sentinel2 is IP67 rated, meaning it is dust-tight and can withstand immersion in water up to 1 meter for 30 minutes.
- Ensure all port covers are firmly sealed before exposing the speaker to water.
- After exposure to water, dry the speaker thoroughly before charging or opening any ports.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on	Low battery; Device malfunction	Charge the speaker; Contact support if issue persists
Cannot pair via Bluetooth	Speaker not in pairing mode; Device Bluetooth off; Too far apart	Ensure speaker is in Bluetooth mode (flashing LED); Enable Bluetooth on your device; Move devices closer (within 10m)
No sound	Volume too low; Incorrect mode; Device not connected	Increase volume on speaker and device; Press 'M' to select correct mode; Re-pair Bluetooth or check AUX connection

Problem	Possible Cause	Solution
TWS pairing fails	Speakers already paired to other devices; Too far apart	Ensure both speakers are disconnected from other devices; Place speakers close together for TWS pairing

9. SPECIFICATIONS

Feature	Detail
Model Name	LMXSE2
Output Power	20 Watts
Bluetooth Version	5.0
Wireless Range	Up to 20 meters
Battery Capacity	3600 mAh
Playback Time	Up to 24 hours (at 50% volume)
Charging Port	USB-C
Water Resistance	IP67
Dimensions (L x W x H)	20 x 8 x 8 cm
Weight	720 grams
Connectivity	Bluetooth, AUX, USB (for charging)
Audio Output Mode	Stereo

10. WARRANTY AND SUPPORT

Your LAMAX Sentinel2 speaker is covered by a manufacturer's warranty. For detailed warranty terms and conditions, please refer to the warranty card included in your package or visit the official LAMAX website.

For technical support, troubleshooting assistance, or service inquiries, please contact LAMAX customer support through their official channels. Contact information can typically be found on the product packaging or the LAMAX website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B086WZ4YRQ>

More documents and user manuals: <https://manuals.plus/>