

VOKSUN S300

VOKSUN S300 Portable Vintage Turntable Instruction Manual

Model: S300

1. INTRODUCTION

Thank you for purchasing the VOKSUN S300 Portable Vintage Turntable. This device combines classic aesthetics with modern functionality, allowing you to enjoy your vinyl records and digital music. Please read this manual carefully before use to ensure proper operation and to maximize your listening experience. The VOKSUN S300 features a portable suitcase design, 3-speed playback, built-in stereo speakers, Bluetooth In/Out connectivity, USB playback, AUX input, and RCA output.



Image 1.1: VOKSUN S300 Portable Vintage Turntable in blue suitcase design.

2. PRODUCT OVERVIEW

2.1 Components and Controls

Familiarize yourself with the various parts of your VOKSUN S300 turntable:

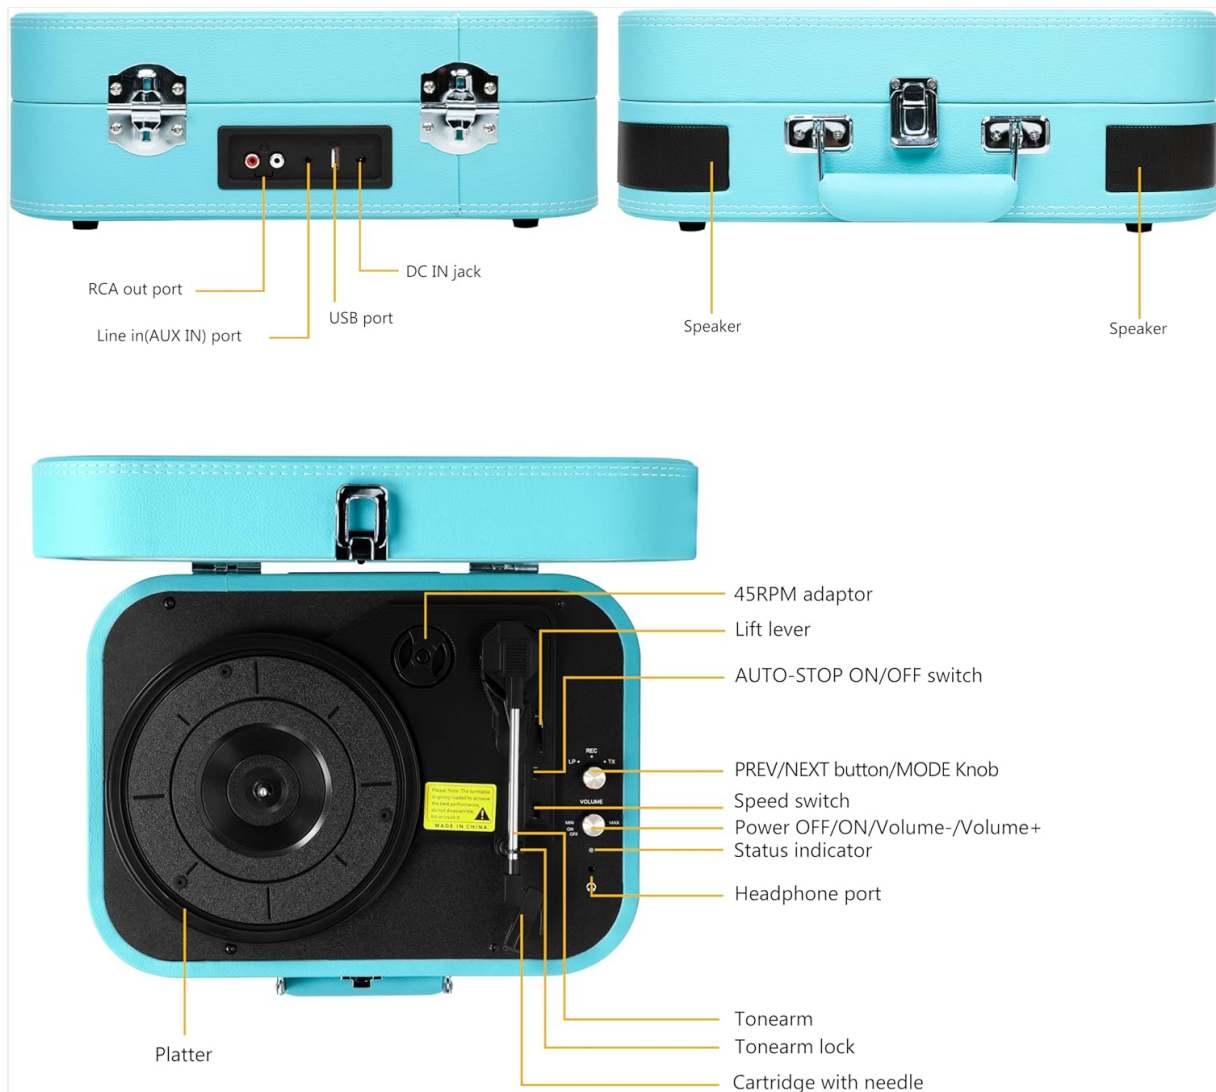


Image 2.1: Detailed diagram of the VOKSUN S300 turntable's components and controls.

1. **Platter:** Where the vinyl record rests.
2. **45 RPM Adaptor:** Used for playing 7-inch records with a large center hole.
3. **Lift Lever:** Raises and lowers the tonearm.
4. **AUTO-STOP ON/OFF Switch:** Enables or disables the automatic stop function at the end of a record.
5. **PREV/NEXT button/MODE Knob:** Controls track selection (USB/Bluetooth) and mode switching.
6. **Speed Switch:** Selects playback speed (33, 45, or 78 RPM).
7. **Power OFF/ON/Volume-/Volume+:** Controls power and volume.
8. **Status Indicator:** Shows the current operating status.
9. **Headphone Port:** For private listening with headphones.
10. **Tonearm:** Holds the cartridge and needle.
11. **Tonearm Lock:** Secures the tonearm when not in use.
12. **Cartridge with Needle:** Reads the grooves of the record.
13. **RCA Out Port:** Connects to external speakers or amplifiers.
14. **Line in (AUX IN) Port:** Connects external audio devices.
15. **USB Port:** For playing music from a USB flash drive.
16. **DC IN Jack:** Power input.
17. **Speakers:** Built-in stereo speakers for audio output.

3. SETUP

3.1 Unpacking and Placement

- Carefully remove the turntable from its packaging.
- Place the turntable on a stable, level surface away from direct sunlight, heat sources, and excessive dust or vibrations.
- Ensure adequate ventilation around the unit.

3.2 Power Connection

- Connect the power adapter to the DC IN Jack on the back of the turntable.
- Plug the power adapter into a suitable wall outlet.

3.3 Initial Preparation

- Unlock the tonearm by gently pushing the tonearm lock to the side.
- Remove the protective cap from the stylus (needle) if present.

4. OPERATING INSTRUCTIONS

4.1 Playing Vinyl Records



7/10/12 Inches

33-1/3 RPM 45RPM 78RPM



Image 4.1: The VOKSUN S300 turntable demonstrating its 3-speed selectable feature for various record sizes.

1. Open the turntable lid.
2. Place a vinyl record on the platter. If playing a 7-inch record with a large center hole, place the 45 RPM adaptor on the spindle first.
3. Select the appropriate speed (33, 45, or 78 RPM) using the Speed Switch.
4. Turn the Power OFF/ON/Volume knob clockwise to power on the unit and adjust the volume.
5. Push the Lift Lever up to raise the tonearm.
6. Manually move the tonearm over the desired starting point of the record.
7. Push the Lift Lever down to gently lower the tonearm onto the record. Playback will begin.
8. To stop playback, push the Lift Lever up to raise the tonearm, then return the tonearm to its rest and secure it with the tonearm lock.
9. If the AUTO-STOP switch is ON, the platter will automatically stop spinning when the record finishes. If OFF, the platter will continue to spin.

4.2 Bluetooth Function (In & Out)



Image 4.2: The VOKSUN S300 turntable demonstrating wireless Bluetooth connectivity with a smartphone.

4.2.1 Bluetooth Input (Streaming to Turntable)

1. Turn on the turntable.
2. Rotate the MODE knob to select Bluetooth Input mode. The status indicator will flash blue.
3. Enable Bluetooth on your smartphone, tablet, or other device and search for "VOKSUN S300".
4. Select "VOKSUN S300" to pair. Once connected, the status indicator will glow solid blue.
5. You can now play music from your device through the turntable's built-in speakers.

4.2.2 Bluetooth Output (Streaming from Turntable)

This feature allows you to stream audio from your vinyl records to an external Bluetooth speaker or headphones.

1. Ensure your external Bluetooth speaker/headphones are in pairing mode.
2. Turn on the turntable and select Phono mode (for playing records).
3. Start playing a vinyl record.
4. Rotate the MODE knob to select Bluetooth Output mode. The turntable will automatically search for nearby Bluetooth devices.
5. Once connected, the audio from the record will play through your external Bluetooth device.

4.3 AUX Input

3.5MM AUX IN & Headphone

Support headphone, speaker or earphone connection, enjoy personal private vinyl music



Image 4.3: A user enjoying private listening with headphones connected to the VOKSUN S300 via the 3.5mm AUX input. Connect external audio devices (e.g., MP3 player, smartphone) to the turntable using a 3.5mm audio cable (not included) plugged into the AUX IN port. Rotate the MODE knob to select AUX mode. Audio from the connected device will play through the turntable's speakers.

4.4 USB Playback

Reproducción y grabación USB

Reproducción directa de canciones almacenadas en el U-DISK ON del tocadiscos.



Image 4.4: Diagram illustrating the USB port connection on the VOKSUN S300 turntable for direct playback from a USB flash drive.

Insert a USB flash drive containing MP3 audio files into the USB port. Rotate the MODE knob to select USB mode. The turntable will automatically begin playing the audio files. Use the PREV/NEXT buttons to skip tracks.

4.5 RCA Output



Image 4.5: Rear panel connections of the VOKSUN S300, highlighting RCA output for external speakers. To connect the turntable to external speakers or an amplifier for a louder or higher-quality sound experience, use an RCA cable (not included) to connect the RCA Out ports on the turntable to the corresponding input ports on your external audio system.

4.6 Headphone Use

For private listening, plug your 3.5mm headphones into the Headphone Port on the turntable. The built-in speakers will automatically mute.

5. MAINTENANCE

5.1 Cleaning the Turntable

- Wipe the turntable casing with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the dust cover closed when not in use to prevent dust accumulation on the platter and stylus.

5.2 Stylus Care

- Gently clean the stylus periodically with a soft brush designed for stylus cleaning, brushing from back to front.
- Avoid touching the stylus with your fingers.
- A worn stylus can damage records and degrade sound quality. Replace the stylus when necessary.

5.3 Record Care

- Handle records by their edges to avoid transferring oils from your skin.
- Store records vertically in their sleeves in a cool, dry place.
- Clean records regularly with a dedicated record cleaning brush or solution to remove dust and static.

6. TROUBLESHOOTING

If you encounter issues with your VOKSUN S300 turntable, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power adapter not connected; Power outlet not working; Unit not turned on.	Ensure power adapter is securely connected and plugged into a working outlet. Turn the Power knob clockwise.
No sound from speakers	Volume too low; Headphones connected; Incorrect mode selected.	Increase volume. Disconnect headphones. Ensure correct mode (Phono, Bluetooth, AUX, USB) is selected.
Record skips	Record is dirty or scratched; Stylus is dirty or worn; Turntable not level; Excessive vibration.	Clean the record. Clean or replace the stylus. Place turntable on a level, stable surface. Avoid placing near vibrating objects.
Bluetooth pairing fails	Turntable not in pairing mode; Device Bluetooth off; Device too far.	Ensure turntable is in Bluetooth pairing mode (flashing blue indicator). Enable Bluetooth on your device. Move device closer to turntable.
Auto-stop not working	AUTO-STOP switch is OFF.	Ensure the AUTO-STOP switch is set to ON. Note that some records may not trigger auto-stop correctly due to variations in groove design.

7. SPECIFICATIONS

- **Model:** S300
- **Brand:** VOKSUN
- **Dimensions (L x W x H):** 40.5 x 30.5 x 19.5 cm (15.9 x 12.0 x 7.7 inches)
- **Weight:** 2.91 kg (6.42 lbs)
- **Playback Speeds:** 33 1/3, 45, 78 RPM

- **Compatible Record Sizes:** 7, 10, 12 inches
- **Motor Type:** Belt-Drive
- **Connectivity:** Bluetooth In/Out, AUX In (3.5mm), USB Playback, RCA Out
- **Special Features:** Built-in Stereo Speakers, Auto-Stop Function, Headphone Jack
- **Power Source:** AC Power Adapter (Cable Electric)
- **Power Consumption:** 78 Watts
- **Material:** PVC Leather (Casing)
- **Included Components:** Dust cover, power cable, 45 RPM adapter

8. WARRANTY AND SUPPORT

VOKSUN products are designed for reliability and performance. For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. If you require technical assistance or have questions not covered in this manual, please contact VOKSUN customer support through the retailer's platform or the official VOKSUN website.

Please note that the provided JSON did not contain specific video URLs with creator type information, therefore no product videos could be embedded in this manual.