



Manuals.plus /

› Easytry123 /

› Easytry123 Replacement Remote Control User Manual for Philips DVD Players

Easytry123 Easytry9752

Easytry123 Replacement Remote Control User Manual

For Philips DVD Player Models: RC-5610DVP3000, DVP3670, DVP3680, DVP3680/F7, DVP3620/55, DVP3620/F7, VP3680/55, DVP3680KX, DVP3600

INTRODUCTION

This document provides essential instructions for the Easytry123 Replacement Infrared Remote Control. This remote is designed to function as a direct replacement for your original Philips DVD player remote, compatible with the models listed above. No programming is required; simply insert batteries and begin use.

SETUP: BATTERY INSTALLATION

To prepare your remote control for use, you will need to install two AAA alkaline batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to remove it.
3. Insert two new AAA alkaline batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect polarity can prevent the remote from functioning.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.



Figure 1: Battery compartment with cover removed, showing space for two AAA batteries.

Note: Always use fresh batteries for optimal performance. If the remote will not be used for an extended period, remove the batteries to prevent potential leakage and damage.

OPERATING INSTRUCTIONS

This remote control operates using infrared (IR) technology. For proper function, ensure a clear line of sight between the remote control and the infrared receiver on your Philips DVD player.

- **Point and Operate:** Direct the front of the remote control towards your DVD player.
- **Button Functions:** The buttons on this replacement remote are designed to replicate the functions of your original Philips remote. Press the corresponding button for the desired action (e.g., Play, Pause, Stop, Menu, Volume, Channel).
- **Range:** The effective operating range is typically up to 20 feet (6 meters) without obstructions.

Refer to your Philips DVD player's original user manual for detailed information on specific functions and features of your device.

MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote's surface. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the remote.
- **Battery Replacement:** Replace batteries when the remote's response becomes inconsistent, weak, or stops working entirely. Always replace both batteries at the same time with new ones.

- **Storage:** Store the remote in a dry place, away from extreme temperatures and direct sunlight.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you experience issues with your Easytry123 replacement remote control, please follow these troubleshooting steps:

1. Remote Not Responding:

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-).
- **Replace Batteries:** Install two fresh AAA alkaline batteries. Weak or dead batteries are a common cause of remote control failure.

2. Intermittent Functionality:

- **Clear Obstructions:** Make sure there are no objects blocking the line of sight between the remote's IR emitter and the DVD player's IR receiver.
- **Operating Distance:** Ensure you are within the effective operating range of the remote.

3. Specific Functions Not Working:

- **Compatibility:** Verify that your Philips DVD player model is explicitly listed as compatible with this remote control. This remote is a direct replacement and does not require programming.
- **Original Manual:** Consult your DVD player's original manual to confirm the expected function of the button you are pressing.

4. Testing IR Signal:

- You can test if the remote is sending an IR signal using a smartphone camera. Open your phone's camera app, point the front of the remote at the camera lens, and press any button on the remote. If the remote is working, you should see a small light flash on your phone screen (this light is invisible to the naked eye).

SPECIFICATIONS

Feature	Description
Brand	Easytry123
Model Number	Easytry9752
Compatible Devices	Philips DVD Players (Specific models listed in title)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Number of Batteries Required	2
Battery Type	AAA Alkaline

WARRANTY AND SUPPORT

This Easytry123 remote control comes with a **90-day quality warranty**. This warranty covers manufacturing defects and ensures the product functions as intended under normal use.

For any issues, support inquiries, or to initiate a warranty claim, please contact the seller directly through the platform where the purchase was made. Refer to your purchase details for specific return and support procedures. Please have your order number ready when contacting support.