



[Manuals.plus](#) /

> [Xtrasaver](#) /

> Xtrasaver Universal IR Remote Control for Onn, TCL, Element, Hisense Roku TVs - Model 100007147 Instruction Manual

Xtrasaver 100007147

Xtrasaver Universal IR Remote Control Instruction Manual

Model: 100007147

1. INTRODUCTION

The Xtrasaver Universal IR Remote Control (Model 100007147) is designed to provide seamless control for various Roku TV brands. This remote offers a straightforward, no-programming setup, allowing immediate use with compatible televisions. It features dedicated shortcut keys for popular streaming services, enhancing user convenience.



Figure 1: Xtrasaver Universal IR Remote Control

This image displays the front view of the Xtrasaver Universal IR Remote Control, highlighting its ergonomic design and clearly labeled buttons, including the directional pad and streaming service shortcut keys.

2. COMPATIBILITY

This remote control is compatible with a wide range of Roku TVs from various manufacturers. It is specifically designed for:

- All ONN Roku TVs
- All TCL Roku TVs
- All Element Roku TVs
- All Hisense Roku TVs

Specific compatible model numbers include, but are not limited to: 100007147, 3226000858, 100012584, 100012585, 100012586, 100012587, 100012589, 100012590, 100018971, 100005395, 100005396, 100005397, 3226000738, RC439, 100021261, 100021258.

Important Note: This remote control is NOT compatible with Roku Stick devices or Roku Player Boxes. It

functions exclusively with televisions that have Roku TV functionality built-in.



Figure 2: Roku TV Compatibility Overview

This image visually clarifies the compatibility of the remote, showing a checkmark next to an ONN Roku TV and an 'X' over Roku Stick and Roku Player Box devices, indicating non-compatibility.

3. SETUP

3.1 Battery Installation

The remote requires two (2) AAA batteries (not included in the package). To install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 3: Battery Compartment

This image illustrates the open battery compartment of the remote control, showing the correct orientation for inserting two AAA batteries.

3.2 Initial Use

This Xtrasaver Universal IR Remote Control requires **NO programming or pairing**. Once the batteries are correctly installed, it is ready for immediate use with your compatible Roku TV.



Figure 4: Plug and Play Functionality

This image highlights the 'No Program Or Setup Need' feature of the remote, emphasizing its ease of use right out of the box.

4. OPERATING INSTRUCTIONS

The remote control features standard Roku TV buttons for navigation and media playback, along with dedicated shortcut keys for quick access to popular streaming applications.

4.1 Button Functions

- **Power Button (●):** Turns the TV on or off.
- **Directional Pad (Up, Down, Left, Right):** Navigates menus and selects options.
- **OK Button:** Confirms selections.
- **Back Button:** Returns to the previous screen.
- **Home Button:** Returns to the Roku TV home screen.
- **Volume Up/Down:** Adjusts the TV volume (located on the side of the remote).
- **Mute Button:** Mutes or unmutes the TV sound (located on the side of the remote).
- **Play/Pause:** Controls media playback.
- **Fast Forward/Rewind:** Skips forward or backward in media playback.
- **Replay:** Replays the last few seconds of content.
- **Star Button (*):** Accesses options within certain apps or menus.

4.2 Streaming Service Shortcut Keys

The remote includes four dedicated shortcut buttons for instant access to popular streaming applications:

- **NETFLIX**
- **Hulu**
- **Disney Plus**
- **VUDU**

Simply press the corresponding button to launch the desired streaming service directly.



Figure 5: Quick Access Streaming Buttons

This image highlights the four dedicated shortcut buttons (Netflix, Disney+, Hulu, Sling) on the remote, illustrating how users can quickly jump to their preferred streaming applications.

5. SPECIFICATIONS

Product Dimensions	5.5 x 1.6 x 0.8 inches
Item Weight	1.76 ounces
Item Model Number	100007147
Batteries Required	2 AAA batteries (not included)
Special Feature	No Programming Required
Color	Black
Max Number of Supported Devices	1 (Roku TV)

6. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote Not Responding:** Ensure batteries are correctly installed with proper polarity. Replace old batteries with new ones if necessary.
- **Intermittent Functionality:** Check for any obstructions between the remote and the TV's IR receiver. Ensure the remote is pointed directly at the TV.
- **Specific Buttons Not Working:** Verify that the remote is compatible with your specific Roku TV model (refer to Section 2). Some advanced features or specific app buttons may vary slightly across TV models.
- **Remote Not Controlling Roku Stick/Box:** This remote is designed exclusively for Roku TVs and is not compatible with Roku Stick or Roku Box devices.

7. MAINTENANCE

To ensure the longevity and optimal performance of your remote control:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Battery Care:** Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the remote or exposing it to excessive force, as this may damage internal components.



Figure 6: Remote Material Quality

This image highlights the remote's construction from healthy, non-toxic, and durable ABS material, ensuring safety and longevity.

8. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Xtrasaver Universal IR Remote Control, please contact the manufacturer directly. Specific warranty details are typically provided with your purchase documentation.