

[Manuals.plus](#) /

› [WINIA](#) /

› Winia KOR-1N4HWDT 1.1 Cu. Ft. Microwave Oven User Manual

WINIA KOR-1N4HWDT

Winia KOR-1N4HWDT 1.1 Cu. Ft. Microwave Oven User Manual

Model: KOR-1N4HWDT

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Winia KOR-1N4HWDT 1.1 Cu. Ft. Microwave Oven. Please read these instructions thoroughly before using the appliance and retain them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy, observe the following basic precautions:

- Read all instructions before using the appliance.
- Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found in your physical manual.
- This appliance must be grounded. Connect only to properly grounded outlets. See "GROUNDING INSTRUCTIONS" in your physical manual.
- Install or locate this appliance only in accordance with the provided installation instructions.
- Do not heat whole eggs or sealed containers, such as closed glass jars, as they may explode.
- Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Do not cover or block any openings on the appliance.
- Do not store this appliance outdoors. Do not use this product near water.
- Do not immerse cord or plug in water.
- Keep the cord away from heated surfaces.
- Do not let cord hang over edge of table or counter.
- Only use utensils that are suitable for use in microwave ovens.
- When cleaning door and oven surfaces that come together on closing the door, use only mild, non-abrasive soaps, or detergents applied with a sponge or soft cloth.

PRODUCT OVERVIEW

The Winia KOR-1N4HWDT microwave oven features a modern design and advanced cooking technologies for convenient meal preparation.



Figure 1: Front view of the Winia KOR-1N4HWDT microwave oven. This image displays the appliance's elegant white exterior, the transparent door, and the digital control panel located on the right side, featuring a clock and various function buttons.



Figure 2: Angled front view of the Winia KOR-1N4HWDT microwave oven. This perspective highlights the sleek design, the reflective tempered glass door, and the user-friendly digital interface.



Figure 3: Interior view of the Winia KOR-1N4HWDT microwave oven with the door open. This image showcases the spacious interior cavity and the removable glass turntable, designed for even cooking.

Key Features:

- **Elegant Design:** White crystal cabinet with a 1.1 cubic foot capacity.
- **Tempered Glass Door:** Features a mirror finish and stainless steel accents.
- **Digital Control Panel:** New, larger display for improved readability and ease of use.
- **Smart ZerOn Technology:** Enhances energy efficiency.
- **CRS Cooking Technology:** Ensures even and consistent cooking results.
- **Steam Cleaning Function:** Innovative technology designed to eliminate 99.99% of bacteria for a hygienic interior.

SETUP AND INSTALLATION

1. **Unpacking:** Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.
2. **Placement:** Place the microwave oven on a flat, stable surface strong enough to hold its weight. Ensure there is adequate ventilation space: at least 4 inches (10 cm) of space above, 4 inches (10 cm) at the rear, and 2 inches (5 cm) on each side for proper airflow. Do not block air vents.
3. **Electrical Connection:** Plug the power cord into a standard 3-prong, 120V, 60Hz grounded electrical outlet. Do not use an extension cord or adapter. Ensure the outlet is dedicated to the microwave to prevent circuit overload.
4. **Turntable Installation:** Place the turntable ring inside the oven cavity, then position the glass turntable plate securely on top of the ring. Ensure it rotates freely.

OPERATING YOUR MICROWAVE OVEN

Basic Operation:

- **Setting the Clock:** Press the "Clock" button, then use the number pad to enter the current time. Press "Clock" again to confirm.
- **Quick Start:** For quick heating, simply press the "Start" button. Each press adds 30 seconds of cooking time at full power.
- **Manual Cooking:**
 - a. Place food in a microwave-safe container inside the oven.
 - b. Close the door securely.
 - c. Press the "Power Level" button repeatedly to select the desired power level (e.g., P100 for 100% power, P70 for 70% power).
 - d. Use the number pad to enter the desired cooking time.
 - e. Press "Start" to begin cooking.
- **Stopping/Pausing:** Press the "Stop/Cancel" button once to pause cooking, or twice to cancel the program and clear the display.

Special Functions:

- **Defrost:** Press the "Defrost" button, enter the weight of the food using the number pad, then press "Start". The oven will automatically calculate the defrosting time.
- **Auto Cook Menus:** Your microwave includes pre-programmed settings for common foods (e.g., popcorn, pizza, beverages). Refer to the control panel for specific menu options. Select the desired menu and quantity, then press "Start".
- **Steam Cleaning:** This feature helps loosen food residue for easier cleaning. Consult the physical manual for detailed instructions on using the steam cleaning function. Typically, a small amount of water is placed in a microwave-safe bowl inside the oven, and the steam cleaning cycle is activated.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Interior Cleaning:** After each use, wipe the interior with a damp cloth. For stubborn food splatters, use a mild detergent or the steam cleaning function. Do not use abrasive cleaners or scouring pads.
- **Exterior Cleaning:** Clean the exterior surfaces with a soft, damp cloth. Avoid harsh chemicals.

- **Door and Seal:** Keep the door seals and adjacent parts clean. Use a mild, non-abrasive soap and a soft cloth.
- **Turntable:** The glass turntable and turntable ring can be removed and washed in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Odor Removal:** To remove odors, combine 1 cup of water with several lemon slices or 2 tablespoons of white vinegar in a microwave-safe bowl. Heat on high for 5 minutes, then let it sit in the oven for 10-15 minutes before wiping clean.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Oven does not start.	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure cord is securely plugged in; Close door firmly; Check household fuse or reset circuit breaker.
Food is not heating.	Door not closed properly; Cooking time/power level not set correctly; Food container not microwave-safe.	Close door firmly; Verify cooking settings; Use only microwave-safe dishes.
Turntable does not rotate.	Turntable not properly seated; Debris under turntable ring.	Ensure turntable and ring are correctly positioned; Clean any debris from under the ring.
Sparkling or arcing inside oven.	Metal or foil in oven; Food residue on oven walls.	Remove any metal objects; Clean oven interior thoroughly.

If the problem persists after attempting these solutions, please contact customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	WINIA
Model Number	KOR-1N4HWDT
Color	White
Capacity	1.1 Cubic Feet
Power Output	1000 Watts
Material	Stainless Steel, Tempered Glass
Product Weight	14 Kilograms (approx. 30.8 lbs)
Installation Type	Countertop
Control Type	Button, Touch
Dimensions (L x W x H)	88.9 x 106.68 x 144.78 cm

Note: The provided dimensions (88.9 x 106.68 x 144.78 cm) may refer to shipping package dimensions. Actual product dimensions for a 1.1 Cu. Ft. microwave are

typically smaller. Please refer to the product packaging for precise unit dimensions.

WARRANTY AND CUSTOMER SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Winia website. If you encounter any issues that cannot be resolved using the troubleshooting guide, please contact Winia customer support for assistance.

Winia Customer Support: Please refer to the contact information provided in your physical user manual or on the official Winia website for your region.

© 2023 WINIA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0871QBRCS>

More documents and user manuals: <https://manuals.plus/>