

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HandFan](#) /

› [HandFan 6 Inch Handheld Fan with 4000mAh Battery User Manual](#)

## HandFan HF361

# HandFan 6 Inch Handheld Fan (Model HF361) User Manual

Your guide to optimal use and care.

## INTRODUCTION

---

Thank you for choosing the HandFan 6 Inch Handheld Fan, Model HF361. This versatile device is designed to provide personal cooling with its powerful airflow and long-lasting battery. It functions as both a handheld and a desk fan, offering convenience and portability for various environments. This manual will guide you through the setup, operation, and maintenance of your new fan.

## PRODUCT OVERVIEW

---

The HandFan HF361 features a 6-inch fan head with 5 optimized blades, powered by a brushless motor for quiet operation. It includes a 4000mAh rechargeable battery, offering extended working times and the ability to function as a portable power bank. The fan's 180° foldable design enhances its portability and allows for flexible positioning.



Image: The HandFan 6 Inch Handheld Fan shown in handheld mode, desk mode with its removable base, and demonstrating its power bank feature by charging a smartphone.

## SETUP

### Unfolding and Positioning

- **Handheld Use:** Hold the fan by its handle. The fan head can be adjusted up to 180 degrees for optimal airflow direction.
- **Desk Fan Use:** To convert to a desk fan, unfold the handle to a 90-degree angle. Insert the fan's handle into the provided removable base. Ensure it is securely seated. The base provides stability for desktop use.

## Fast Charge

It will cost only  
**1.5 hours**  
for fully charge



Image: The HandFan 6 Inch Handheld Fan displaying its dimensions and folded configuration, highlighting its compact and portable design.

## OPERATING INSTRUCTIONS

### Power On/Off and Speed Adjustment

1. **Power On:** Press the power button located on the handle once to turn on the fan. It will start at the lowest speed setting.
2. **Adjust Speed:** Repeatedly press the power button to cycle through the 6 available speed settings. Each press will increase the fan speed.
3. **Natural Wind Mode:** The first speed setting is a "natural wind" mode, which cycles between different intensities to simulate natural breezes.
4. **Power Off:** After the highest speed setting, pressing the button again will turn the fan off. Alternatively, long-press the power button to turn off the fan from any speed setting.

### Battery Indicator

The LED indicator lights on the handle display the current battery level. Monitor these lights to know when recharging is necessary.

# 6 Adjustable Speed

Long Press to Close the Fan Powerful Airflow & Long Working Time



Image: A visual representation of the HandFan's 6 adjustable speed settings, indicating the corresponding working hours for each speed.

Your browser does not support the video tag.

Video: A demonstration of the HandFan's power button functionality, showing how to turn it on, adjust speeds, and turn it off. The video also highlights the battery indicator lights and the fan's ability to be placed in its base or folded.

## CHARGING

### Recharging the Fan

To charge the fan, connect the provided USB-C charging cable to the fan's USB-C port and plug the other end into a compatible USB power source (e.g., PC, power bank, USB socket, car charger). The battery indicator lights will show charging progress. A full charge takes approximately 1.5 hours.

### Using as a Power Bank

The fan can also serve as a portable power bank. Connect your device's charging cable to the fan's USB-A output port to charge your smartphone or other USB-powered devices.



Image: The HandFan 6 Inch Handheld Fan being charged via its USB-C port, illustrating various compatible power sources like a power bank, wall socket, laptop, and car charger.

## MAINTENANCE

### Cleaning the Fan

The front mesh cover of the fan is removable for easy cleaning. Gently twist or unclip the cover to remove it. Wipe the blades and the inside of the cover with a soft, dry cloth. Ensure all parts are completely dry before reattaching the cover.

# Removable mesh cover for easy cleaning



Image: The HandFan 6 Inch Handheld Fan with its front mesh cover removed, demonstrating the ease of cleaning the fan blades.

## TROUBLESHOOTING

- **Fan not turning on:** Ensure the battery is charged. Connect the fan to a power source using the USB-C cable.
- **Weak airflow:** Check the selected speed setting and increase if necessary. Ensure the fan blades are clean and free from obstructions.
- **Charging issues:** Verify that the charging cable is securely connected to both the fan and the power source. Try a different USB-C cable or power adapter if issues persist.

## SPECIFICATIONS

Feature	Detail
Brand	HandFan
Model Name	HF361

Power Source	Battery Powered
Battery Capacity	4000mAh Lithium Polymer
Number of Power Levels	6
Working Time	5-34 hours (depending on speed)
Charging Time	Approx. 1.5 hours
Main Power Connector Type	USB Type C (for charging fan)
Output Port	USB Type A (for power bank function)
Special Feature	Foldable, Removable Base, Power Bank Function
Product Dimensions	1.42"D x 6.42"W x 11.18"H
Item Weight	1.23 pounds (0.56 kg)
Noise Level	55 Decibels (max)

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the product packaging or contact HandFan customer service directly. Keep your purchase receipt for warranty claims.