

gtdiffusion TXP-433-A01

TELECO TXP-433-A01 Remote Control for Roller Shutters User Manual

Model: TXP-433-A01 | Brand: gtdiffusion

1. INTRODUCTION

This manual provides essential instructions for the proper use, setup, and maintenance of your TELECO TXP-433-A01 remote control for roller shutters. Please read this manual carefully before operating the device.

Important Compatibility Notice: The TELECO TXP-433-A01 model has been replaced by the TELECO A04. This manual specifically pertains to the TXP-433-A01 model.

Critical Compatibility Warning: This remote control is not compatible with systems marked Elero, Tousek, or Crawford. Furthermore, if the ring around the buttons on your existing remote control is the same color as the rest of the casing (dark gray), then this TXP-433-A01 model is not compatible. Your original remote control must be strictly identical to the one pictured below for compatibility.



Image 1: Visual representation of the compatibility requirement. Your existing remote control must match this design exactly.



Image 2: Front view of the TELECO TXP-433-A01 Remote Control.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Open the compartment cover using a small screwdriver or by sliding it open, depending on the design.
3. Insert the required alkaline battery, ensuring the correct polarity (+/-) as indicated inside the compartment. This device uses non-rechargeable alkaline batteries.
4. Close the battery compartment cover securely.

2.2 Pairing with Your Roller Shutter System

The pairing procedure for the TELECO TXP-433-A01 remote control typically involves a sequence of actions on both the remote and the receiver unit of your roller shutter system. Due to variations in roller shutter systems, specific pairing instructions are usually provided with the receiver unit or the roller shutter motor itself.

General Steps (Consult your receiver's manual for exact details):

1. Ensure the roller shutter system is powered on.
2. Locate the programming button or function on your roller shutter receiver unit. This may be a small button on the motor housing or a specific sequence of power cycles.
3. Activate the programming mode on the receiver (e.g., press and hold the programming button until an indicator light flashes).
4. While the receiver is in programming mode, press a button on your new TELECO TXP-433-A01 remote control (e.g., the 'Up' or 'Stop' button).
5. The receiver's indicator light should change or stop flashing, confirming successful pairing.
6. Test the remote control's functions to ensure proper operation.

If you encounter difficulties, refer to the instruction manual of your specific roller shutter motor or receiver unit, or contact your installer.

3. OPERATING THE REMOTE CONTROL

The TELECO TXP-433-A01 remote control is designed for intuitive operation of your roller shutters. While specific button layouts may vary slightly, the general functions are as follows:

- **Up Button:** Typically used to open or raise the roller shutter.
- **Down Button:** Typically used to close or lower the roller shutter.
- **Stop Button:** Used to halt the roller shutter at any desired position during movement.
- **Programming/Function Button (if present):** May be used for advanced settings or pairing, as described in the setup section.

Press the desired button firmly and release. Ensure you are within the operational range of the receiver (up to 10 meters).

4. MAINTENANCE

4.1 Battery Replacement

When the remote control's range decreases or it becomes unresponsive, it is likely time to replace the battery. Follow the steps outlined in Section 2.1 "Battery Installation" to replace the old battery with a new alkaline battery of the correct type.

Disposal: Dispose of used batteries responsibly according to local regulations. Do not dispose of batteries in household waste.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or wet cloths, as these can damage the casing or internal electronics.

4.3 Storage

Store the remote control in a dry place, away from direct sunlight, extreme temperatures, and high humidity. Avoid dropping the remote control or exposing it to strong impacts.

5. TROUBLESHOOTING

- **Remote Control Not Responding:**
 - Check the battery. Replace it if necessary.
 - Ensure you are within the operational range (up to 10 meters) and there are no significant obstructions.
 - Verify that the remote is correctly paired with your roller shutter system (refer to Section 2.2).
- **Reduced Range:**
 - Replace the battery.
 - Check for sources of radio interference in the vicinity (e.g., other wireless devices, large metal objects).
- **Roller Shutter Moves Erratically:**
 - This may indicate an issue with the roller shutter motor or receiver, not the remote control. Consult the roller shutter system's manual or contact a qualified technician.

If troubleshooting steps do not resolve the issue, please contact customer support.

6. SPECIFICATIONS

Brand	gtdiffusion
Model Number	TXP-433-A01 (Compatible with systems like 'somfy volet 3')
Connectivity Technology	Radio Frequency (433 MHz implied by model)
Controller Type	Remote Control
Maximum Range	10 Meters
Compatible Devices	teleco txp 868 a01 (Note: This specification from the source may indicate cross-compatibility or a typo, as the product is 433-A01. Verify compatibility with your specific receiver.)
Battery Composition	Alkaline
Rechargeable Battery	No
Color	Varies by arrival (selon arrivage)

7. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. For warranty details, technical support, or any inquiries regarding your TELECO TXP-433-A01 remote control, please contact the seller, [gtdiffusion](#), directly.

It is recommended to retain your proof of purchase for any warranty claims.

© 2023 gtdiffusion. All rights reserved.