

Sharp QW-V615-SS3

Sharp Dishwasher QW-V615-SS3 User Manual

Model: QW-V615-SS3

INTRODUCTION

Thank you for choosing the Sharp QW-V615-SS3 Electric Stainless Steel Dishwasher. This appliance is designed to provide efficient and convenient dishwashing for your home. Featuring 6 wash programs, an A++ energy rating, and a generous 15 place setting capacity with an additional 3rd basket and 3 spray arms, this dishwasher offers superior cleaning performance.

Please read this manual carefully before using your dishwasher to ensure safe and optimal operation. Keep this manual for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged or malfunctioning.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Do not touch the heating element during or immediately after use.
- Always unplug the dishwasher before cleaning or performing maintenance.
- Sharp objects should be loaded with points down to prevent injury.

SETUP AND INSTALLATION

The Sharp QW-V615-SS3 is a freestanding dishwasher. Proper installation is crucial for its performance and safety.

Unpacking

- Carefully remove all packaging materials.
- Inspect the dishwasher for any shipping damage. Report any damage immediately to your dealer.
- Ensure all accessories are present: cutlery basket, user manual, etc.

Placement

- Place the dishwasher on a flat, stable surface.
- Ensure there is adequate space for door opening and closing.
- Avoid placing the dishwasher near heat sources or in direct sunlight.

Electrical Connection

- Connect the dishwasher to a dedicated, grounded electrical outlet (230 Volts).
- Do not use extension cords or adapter plugs.
- Consult a qualified electrician if you are unsure about the electrical connection.

Water Connection

- Connect the water inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa.
- Ensure all connections are tight to prevent leaks.
- Connect the drain hose to a suitable drain pipe or sink trap, ensuring it is properly secured and elevated to prevent backflow.



Image: Front view of the Sharp QW-V615-SS3 Dishwasher, showing its stainless steel finish and control panel.

OPERATING INSTRUCTIONS

Follow these steps for effective and efficient dishwashing.

Loading the Dishwasher

- Scrape off large food particles from dishes.
- Place larger items in the lower basket and smaller items, glasses, and cups in the upper basket.
- Utilize the additional 3rd basket for cutlery or small utensils.
- Ensure dishes do not block the spray arms.



Image: Interior view of the Sharp QW-V615-SS3 Dishwasher, showing the upper, lower, and 3rd cutlery baskets, and spray arms.

Adding Detergent and Rinse Aid

- Fill the detergent dispenser with the recommended amount of dishwasher detergent.
- Check the rinse aid indicator and refill the rinse aid dispenser as needed. Rinse aid helps with drying and prevents spots.

Program Selection

The Sharp QW-V615-SS3 offers 6 wash programs. Select the appropriate program based on the soil level of your dishes.

1. **Intensive:** For heavily soiled dishes, pots, and pans.
2. **Normal:** For normally soiled daily dishes.
3. **Eco:** Energy-saving program for normally soiled dishes.
4. **Glass:** For lightly soiled glassware and delicate items.
5. **90 Min:** For lightly soiled dishes that need a quick wash.
6. **Rapid:** A very short program for lightly soiled dishes without drying.

Starting a Wash Cycle

- Close the dishwasher door firmly.
- Press the Power button to turn on the dishwasher.
- Use the Program Selection button to choose your desired wash cycle.
- Press the Start/Pause button to begin the cycle.

MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

Cleaning the Filters

- The filter system consists of a coarse filter, a main filter, and a micro filter.
- Regularly check and clean the filters to prevent blockages and ensure efficient cleaning.
- Twist the filter assembly counter-clockwise to remove it. Rinse under running water to remove food particles.
- Reassemble and replace the filter system, ensuring it clicks into place.

Cleaning the Spray Arms

- Check the spray arm nozzles for blockages. Use a thin wire to clear any debris.
- The spray arms can be removed for thorough cleaning if necessary.

Exterior and Interior Cleaning

- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners.
- Clean the interior of the dishwasher periodically with a dishwasher cleaner or a mixture of vinegar and baking soda to remove grease and odors.

TROUBLESHOOTING

Before contacting service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly until it latches; Check household fuse/circuit breaker.
Dishes are not clean	Improper loading; Clogged spray arms; Insufficient detergent; Clogged filters.	Reload dishes correctly; Clean spray arm nozzles; Add more detergent; Clean filters.
Water not draining	Clogged drain hose; Clogged filter; Drain pump malfunction.	Check and clear drain hose; Clean filters; Contact service if pump is faulty.
Excessive foam	Incorrect detergent used; Too much rinse aid.	Use only automatic dishwasher detergent; Reduce rinse aid setting.

SPECIFICATIONS


Feature	Detail
Brand	Sharp
Model Name	QW-V615-SS3
Product Type	Dishwasher
Material	Stainless Steel
Installation Type	Freestanding
Capacity	15 Place Settings
Number of Programs	6
Energy Rating	A++
Voltage	230 Volts
Dimensions (HxWxD)	85x60x60 cm (from description)
Special Features	Additional 3rd Basket, 3 Spray Arms, Smart



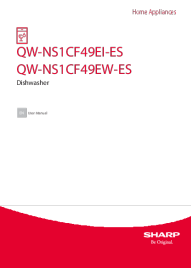


WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or contact Sharp customer service. Keep your purchase receipt as proof of purchase. For further assistance, you may visit the official Sharp website or contact their authorized service centers in your region.

© 2023 Sharp Corporation. All rights reserved.

Related Documents - QW-V615-SS3

	<p>Sharp Dishwasher User Manual: QW-NA1CF47ES-EU & QW-NA1CF47EW-EU</p> <p>User manual for Sharp dishwashers, models QW-NA1CF47ES-EU and QW-NA1CF47EW-EU. Provides comprehensive guidance on installation, operation, safety, maintenance, and troubleshooting for optimal appliance use.</p>
---	--

	<p>Sharp Dishwasher User Manual: QW-NA26F39DI-DE & QW-NA26F39DW-DE</p> <p>Comprehensive user manual for Sharp dishwashers, models QW-NA26F39DI-DE and QW-NA26F39DW-DE. Includes installation, operation, safety, maintenance, and troubleshooting guides.</p>
	<p>Sharp Dishwasher QW-NA26F39DI-DE / QW-NA26F39DW-DE User Manual</p> <p>Comprehensive user manual for Sharp dishwashers, models QW-NA26F39DI-DE and QW-NA26F39DW-DE. Provides essential safety, installation, operation, maintenance, and troubleshooting guidance.</p>
	<p>Sharp Dishwasher User Manual: QW-NS1CF49EI-ES, QW-NS1CF49EW-ES</p> <p>Comprehensive user manual for Sharp dishwashers models QW-NS1CF49EI-ES and QW-NS1CF49EW-ES, covering installation, safety, operation, maintenance, and troubleshooting.</p>
	<p>Sharp QW-NA1CF47EW-FR Dishwasher User Manual</p> <p>User manual for the Sharp QW-NA1CF47EW-FR dishwasher, providing detailed instructions on safety, installation, operation, cleaning, maintenance, and troubleshooting.</p>
	<p>Sharp QW-NA25GU44BS-DE Dishwasher User Manual</p> <p>This user manual provides essential safety information and instructions for operating and maintaining the Sharp QW-NA25GU44BS-DE dishwasher. Learn about installation, usage, cleaning, and troubleshooting.</p>