

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HADEN](#) /

› [Haden Heritage 1.7 Liter Electric Kettle User Manual](#)

HADEN Heritage

HADEN Heritage 1.7 Liter Electric Kettle User Manual

Model: Heritage

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the kettle.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and personal injury, do not immerse cord, plugs, or the kettle base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact manufacturer for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Always ensure the lid is securely closed during operation. Scalding may occur if the lid is removed during boiling.
- Do not fill above the "MAX" line or below the "MIN" line indicated on the water gauge.
- The kettle must only be used with the power base provided.
- This appliance is for household use only.

PRODUCT OVERVIEW

Familiarize yourself with the components of your HADEN Heritage Electric Kettle.

HADEN

HERITAGE
IVORY & CHROME

Electric Kettle



1.7-liter (7-cup)
ample capacity
for boiling
water.



Water gauge
allows easy
monitoring of
water level for
accuracy.



Indicator light
illuminates when
the water is
boiling.



Boasts 1500W
of power with a
30" power cord.

Image: Haden Heritage Electric Kettle with key features highlighted, including 1.7-liter capacity, water gauge for accurate level monitoring, an indicator light that illuminates during boiling, and 1500W power with a 30-inch power cord.

HADEN



Premium coated stainless steel housing.



Automatic shut off upon reaching boiling point with boil-dry protection.



Removable filter for convenient cleaning and maintenance.



360-Degrees Base ensures stability and prevents tipping.

Image: Detailed view of the Haden Heritage Electric Kettle, illustrating its premium coated stainless steel housing, the automatic shut-off feature with boil-dry protection, the removable filter for easy cleaning, and the stable 360-degree rotational power base.

Components:

- **Kettle Body:** The main stainless steel vessel for heating water.
- **Lid:** Removable lid for filling and cleaning.
- **Handle:** Ergonomically designed for safe pouring.
- **Spout:** For controlled pouring of hot water.
- **Water Level Indicator:** Transparent window with markings for MIN and MAX fill levels.
- **Power Switch:** Located at the base of the kettle, with an indicator light.
- **Removable Filter:** Located behind the spout, helps prevent limescale from being poured into your cup.
- **360-Degree Power Base:** Provides power to the kettle and allows for cordless placement from any angle.

SETUP

1. **Unpack:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future storage or disposal.

2. **Initial Cleaning:** Before first use, fill the kettle with clean water to the MAX level. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, stable, and heat-resistant surface. Ensure the power cord is not dangling or in a position where it can be tripped over.
4. **Power Connection:** Plug the power base into a grounded electrical outlet.

OPERATING INSTRUCTIONS

1. **Fill the Kettle:** Remove the lid and fill the kettle with the desired amount of fresh water. Do not fill below the MIN mark or above the MAX mark on the water level indicator.



Image: Close-up view of the kettle's side, highlighting the water level indicator with clear MIN (0.5L) and MAX (1.7L) markings, and the power switch at the bottom.

2. **Secure the Lid:** Place the lid back onto the kettle, ensuring it is securely closed.
3. **Place on Power Base:** Position the kettle onto the 360-degree power base.

4. **Switch On:** Press the power switch down. The indicator light will illuminate, signifying that the kettle is heating.
5. **Automatic Shut-Off:** The kettle will automatically switch off once the water has reached boiling point. The indicator light will turn off.
6. **Pouring:** Carefully lift the kettle from the power base and pour the hot water. Always pour slowly and steadily to avoid splashing.
7. **Re-boiling:** If you need to re-boil water, wait a few moments for the internal thermostat to reset before pressing the power switch again.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your kettle.

General Cleaning:

- Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the finish.
- Never immerse the kettle body or power base in water or any other liquid.

Cleaning the Removable Filter:

- The filter located behind the spout can be removed for cleaning.



Image: A hand demonstrating the removal of the mesh filter from the interior of the kettle's spout, indicating ease of access for cleaning.

- Gently pull the filter upwards to detach it.
- Rinse the filter under running water and brush gently with a soft brush if necessary to remove any mineral deposits.
- Reinsert the filter by aligning it with the guides and pushing it back into place until it clicks.

Descaling:

Over time, mineral deposits (limescale) can build up inside the kettle, affecting its performance. Descale your kettle regularly, especially in hard water areas.

- Fill the kettle with a mixture of one part white vinegar and two parts water.
- Bring the mixture to a boil and then let it stand for at least 30 minutes, or longer for heavy buildup.
- Pour out the mixture and rinse the kettle thoroughly with fresh water several times.
- For stubborn deposits, you may need to repeat the process or use a commercial descaling solution designed for kettles, following the product's instructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat up.	<p>Kettle not properly seated on base.</p> <p>Power cord not plugged in.</p> <p>No power at the outlet.</p> <p>Kettle has activated boil-dry protection.</p>	<p>Ensure kettle is correctly placed on the power base.</p> <p>Check if the power cord is securely plugged into a working outlet.</p> <p>Test the outlet with another appliance or check your circuit breaker.</p> <p>Remove kettle from base, let it cool for 10-15 minutes, then refill and try again.</p>
Water takes too long to boil.	<p>Limescale buildup inside the kettle.</p> <p>Overfilling the kettle.</p>	<p>Descale the kettle as per the "Maintenance and Cleaning" section.</p> <p>Ensure you are not filling above the MAX line.</p>
Kettle switches off before boiling.	<p>Limescale buildup affecting the thermostat.</p> <p>Kettle is underfilled.</p>	<p>Descale the kettle.</p> <p>Ensure water level is above the MIN line.</p>
Steam escaping from areas other than the spout.	<p>Lid not properly closed.</p>	<p>Ensure the lid is securely placed and fully closed before boiling.</p>

SPECIFICATIONS

Model Name: Heritage

Item Model Number: Heritage017342750951

Capacity: 1.7 Liters (7 Cups)

Material: Stainless Steel with Polished Finish

Color: Ivory & Chrome

Wattage: 1500 watts

Special Features: Automatic Shut-Off, Boil Dry Protection, 360-Degree Swivel Base, Removable Filter

Product Dimensions: 9.5" L x 7" W x 10.5" H

Item Weight: 3.69 pounds

Manufacturer: HADEN

HADEN



Image: Diagram showing the dimensions of the Haden Heritage Electric Kettle, including its height (11.75 inches), width (9.5 inches), depth (7 inches), and indicating a 7-cup capacity.

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the warranty card included with your product or visit the official HADEN website. Do not attempt to repair the appliance yourself, as this will void the warranty.

For assistance, please contact HADEN customer service.