

PRITECH PR-2888

PRITECH PR-2888 Electric Trimmer User Manual

Comprehensive guide for your PRITECH rechargeable electric trimmer, designed for versatile grooming needs.

1. SAFETY INFORMATION

Warning: This product contains sharp blades that can cause skin irritation or injury. Keep away from eyes to avoid eye injury. Handle with care to prevent electrical shock. Do not use on infants. Rinse blades under running water after use, but keep away from other water sources. Store in a cool, dry place. Follow recommended cleaning and maintenance procedures.

2. PRODUCT OVERVIEW

2.1. What's Included

Your PRITECH PR-2888 Electric Trimmer package includes:

- PRITECH Electric Trimmer (Main Device)
- Styling Comb
- Cleaning Brush
- Instruction Manual
- USB-connected Charger
- Four ABS plastic protective attachments (3mm, 6mm, 9mm, 12mm)
- Standing Charging Dock



Figure 2.1: PRITECH PR-2888 Electric Trimmer and included accessories.

2.2. Product Features

- **Safe and Convenient Standing Charging Base:** Keeps the trimmer upright and tidy, ensuring blades stay dry and clean.
- **Precise Blades:** Stainless steel blades prevent fraying, with chamfered edges to prevent skin scratches.
- **Long Battery Life:** Rechargeable 1200mAh lithium-ion battery provides up to 150 minutes of operation time from a 2-hour charge.
- **Waterproof Design:** IPX6 waterproof rating allows for both dry and wet shaving.

3. SETUP

3.1. Charging Your Trimmer

1. Remove the hair trimmer from its packaging.
2. Place the trimmer on the standing charging base.
3. Connect the USB cable to the charging base and a suitable USB power source (e.g., wall adapter, computer, power bank).
4. Charge the trimmer for approximately 2 hours before the first use to ensure a full charge. The indicator light will show charging status.



Figure 3.1: Trimmer on its standing charging dock.

YOU CAN CHARGE WITH



Figure 3.2: Various USB charging options for the trimmer.

3.2. Attaching Guide Combs

1. Select the appropriate guide comb attachment (3/6/9/12mm) for your desired hair length.
2. Align the teeth of the guide comb with the trimmer blade and slide it securely onto the trimmer head until it clicks into place.

REMOVABLE AND WASHABLE



WASHABLE



**BLADES CAN
BE REMOVED**



Figure 3.3: Included guide comb attachments for different hair lengths.

4. OPERATING INSTRUCTIONS

4.1. General Trimming

1. Turn on the trimmer using the power button.
2. Adjust the trimmer's length settings if necessary (by changing guide combs).
3. Trim your hair or beard by moving the trimmer against the direction of hair growth for efficient cutting.



POWERFUL & DURABLE MOTOR

QUIET

LOW NOISE

NO PULLING HAIR



Precision Self - Sharpening Blades


Figure 4.1: Using the trimmer for beard grooming.

4.2. Versatile Grooming

The PRITECH PR-2888 Electric Trimmer is suitable for various grooming needs, including:


- Beard trimming and shaping
- Sideburn shaping
- Self-haircutting
- Body grooming, including the groin area

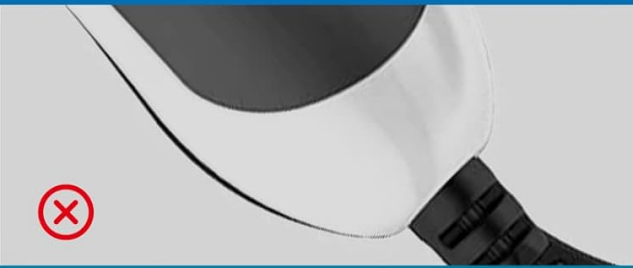 RECHARGEABLE AND CORDLESS



LIGHTWEIGHT AND EASY TO MANEUVER

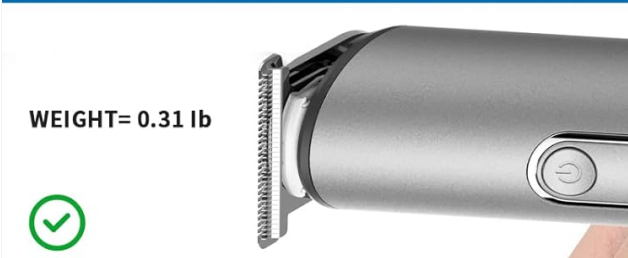 WEIGHT= 0.31 lb



Wide>50mm

Weight>0.45 lb



WATERPROOF AND WASHABLE



THE PRICE



**PRICE < \$24
WITH COUPON**



PRICE > \$30

Figure 4.2: The trimmer's versatility for different body areas.

Your browser does not support the video tag.

Video 4.1: Official PRITECH demonstration of the hair clippers and beard trimmer in use.

5. MAINTENANCE

5.1. Cleaning the Trimmer

Regular cleaning ensures the longevity and performance of your trimmer. The PR-2888 features an IPX6 waterproof rating, allowing for easy cleaning.

1. After each use, turn off the trimmer and disconnect it from the charging base.
2. Remove any attached guide combs.
3. Gently tap or shake out any accumulated hair from the blade and comb.
4. Rinse the blades under running lukewarm water. Do not use compressed air, scouring pads, abrasive cleaning agents, or aggressive liquids like petrol or acetone.

- 5. Use the provided cleaning brush to remove stubborn hair particles.
- 6. Ensure the trimmer head and any attachments are completely dry before storing or reattaching.
- 7. Periodically check and replace the blades for optimal performance.

SAFE USB STANDING RECHARGE BASE
Keep the trimmer powered at all times.



Figure 5.1: Rinsing the trimmer head under running water.

6. TROUBLESHOOTING

6.1. Common Issues and Solutions

Issue	Possible Cause	Solution
Trimmer not turning on or low power	Low battery; improper charging connection	Ensure trimmer is fully charged (2 hours). Check USB cable and power source connection.

Issue	Possible Cause	Solution
Poor cutting performance or pulling hair	Blades are dull or clogged with hair; incorrect technique	Clean blades thoroughly. Ensure blades are lubricated. Trim against the direction of hair growth. Consider replacing blades if dull.
Trimmer gets hot during use	Extended continuous use; insufficient lubrication	Allow trimmer to cool down. Apply lubricating oil to blades. Avoid prolonged continuous operation.
Charging indicator light not working	Faulty cable/adapter; issue with charging dock or trimmer	Try a different USB cable and power adapter. Ensure trimmer is correctly seated on the charging dock. If issue persists, contact customer support.



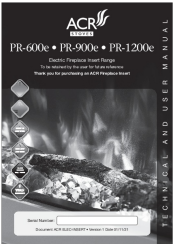
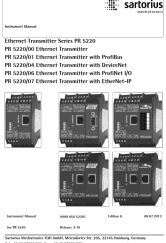
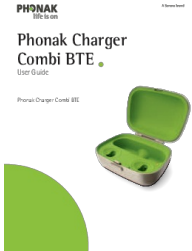
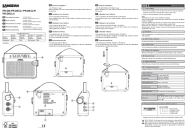
7. SPECIFICATIONS

- **Model Number:** PR-2888
- **Brand:** PRITECH
- **Color:** Darkgray
- **Product Dimensions:** 1.38 x 1.38 x 5.91 inches
- **Item Weight:** 4.96 ounces (0.31 Pounds)
- **Battery:** 1200mAh Lithium-ion (1 A battery required)
- **Charging Time:** Approximately 2 hours
- **Operating Time:** Up to 150 minutes
- **Waterproof Rating:** IPX6
- **Manufacturer:** WENZHOU PRITECH INDUSTRIAL CO., LTD.
- **First Available Date:** April 15, 2020

8. WARRANTY AND SUPPORT

PRITECH offers a **24-month warranty** for this product. For any support inquiries, troubleshooting assistance beyond this manual, or warranty claims, please contact PRITECH customer service or visit the official PRITECH store.

Visit the official PRITECH Store: [PRITECH Store on Amazon](#)

	<p>Poweramp PR Series Dock Leveler Owner's Manual Installation, Operation, Maintenance</p> <p>Comprehensive Owner's/User's Manual for the Poweramp PR Series Dock Leveler. Includes detailed guides on installation, operation, maintenance, safety precautions, and troubleshooting for industrial loading dock systems.</p>
	<p>Brother Home Sewing Machine Parts Reference List for Optional Accessories</p> <p>Comprehensive parts reference list for Brother Home Sewing Machines, detailing optional accessories including various embroidery frames, bobbin winder set, cut work set, and dedicated stands. Includes part numbers, descriptions, and model compatibility.</p>
	<p>ACR PR-600e, PR-900e, PR-1200e Electric Fireplace Insert User Manual</p> <p>Comprehensive user and technical manual for ACR Heat Products' PR-600e, PR-900e, and PR-1200e electric fireplace inserts, covering operation, installation, maintenance, and warranty information.</p>
	<p>Sartorius PR 5220 Ethernet Transmitter Series Instrument Manual</p> <p>Comprehensive instrument manual for the Sartorius PR 5220 Ethernet Transmitter series, detailing installation, configuration, operation, and specifications for models supporting ProfiBus, DeviceNet, ProfiNet I/O, and EtherNet-IP.</p>
	<p>Phonak Charger Combi BTE User Guide: Charging and Operation</p> <p>Official user guide for the Phonak Charger Combi BTE. Learn how to charge your hearing aids, use the optional power pack, and find important safety and maintenance information from Phonak.</p>
	<p>Sangean PR-D6 Series Portable Radio: Operating Instructions and Specifications</p> <p>Comprehensive operating instructions and technical specifications for the Sangean PR-D6, PR-D6CL, PR-D6CLP, and PR-D6CLX portable FM/AM radios. Learn about setup, operation, and features.</p>