

[Manuals.plus](#) /

> [Tefal](#) /

> Tefal Actifry Extra FZ7228 Healthy Air Fryer User Manual

Tefal FZ722815

Tefal Actifry Extra FZ7228 Healthy Air Fryer User Manual

Model: FZ722815

INTRODUCTION

The Tefal Actifry Extra FZ7228 is a healthy air fryer designed for low-oil cooking, offering a 1.2 kg capacity suitable for preparing meals for up to 6 people. This appliance utilizes high-speed air circulation and an automatic stirring paddle to ensure even cooking and a crisp finish with significantly less added fat, minimizing oil odors.



Image: The Tefal Actifry Extra FZ7228 air fryer shown alongside plates of air-fried samosas, chicken, and potato wedges, demonstrating its cooking versatility.

SETUP

Before first use, ensure all packaging materials are removed from the appliance. Clean all removable parts thoroughly before assembly.

Unpacking and Initial Cleaning:

1. Remove the air fryer from its packaging.
2. Carefully remove all internal and external packaging materials, including any protective films or stickers.
3. Disassemble the removable components: the lid, the stirring paddle, and the cooking pan.
4. Wash the lid, stirring paddle, and cooking pan with warm, soapy water. These components are also dishwasher safe for convenience.
5. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.
6. Ensure all parts are completely dry before reassembly.

Assembly:

1. Place the cooking pan securely into the main unit.
2. Insert the stirring paddle into its designated slot in the center of the cooking pan. The paddle is designed for easy removal and insertion.
3. Close the clear glass lid firmly until it clicks into place.



Image: The main components of the Tefal Actifry Extra air fryer laid out: the lid, the measuring spoon, the stirring paddle, and the cooking pan, illustrating their detachability for cleaning and assembly.

OPERATING INSTRUCTIONS

The Tefal Actifry Extra is designed for simple operation. Follow these steps to prepare your meals.

Basic Operation:

1. **Prepare Ingredients:** Cut your ingredients to the desired size. For best results, ensure pieces are uniform.
2. **Add Ingredients:** Open the lid and place your ingredients into the cooking pan.
3. **Add Oil (Optional):** For many recipes, only a small amount of oil (e.g., one teaspoon) is needed, or none at all. Use the provided measuring spoon for precise oil addition.
4. **Close Lid:** Close the clear glass lid securely.
5. **Set Time:** Use the '+' and '-' buttons on the control panel to set the desired cooking time. The display will show the remaining time.
6. **Start Cooking:** Press the power button to begin the air frying process. The stirring paddle will automatically rotate to ensure even cooking.
7. **Monitoring:** The clear glass lid allows you to monitor the cooking progress without opening the appliance.
8. **Completion:** The appliance will automatically stop when the set time has elapsed. Carefully open the lid and remove your cooked food.

Note on Temperature: The Tefal Actifry Extra FZ7228 features intelligent temperature regulation for optimal cooking. The temperature is automatically controlled and cannot be manually adjusted by the user.

Using the Actifry App:

Enhance your cooking experience with the Actifry App, available for Android and iOS devices. The app provides access to over 300 healthy recipe ideas tailored for your Actifry air fryer.

- Download the "Actifry" app from your device's app store.
- Follow the in-app instructions to connect your appliance (if applicable) and explore a wide range of recipes.



Image: The Tefal Actifry Extra air fryer positioned on a kitchen counter, with a smartphone next to it showing the Actifry recipe application, highlighting its smart features.

MAINTENANCE & CLEANING

Regular cleaning ensures optimal performance and longevity of your Tefal Actifry Extra.

Cleaning Instructions:

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Remove the lid, stirring paddle, and cooking pan.
3. These removable components are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge.
4. Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads.
5. Ensure all parts are thoroughly dry before reassembling or storing the appliance.

Caution: Never immerse the main unit of the appliance in water or any other liquid.



Image: The Tefal Actifry Extra air fryer with its lid open, revealing the cooking pan and the central stirring paddle, illustrating its design for

easy access and cleaning.

TROUBLESHOOTING

If you encounter issues with your Tefal Actifry Extra, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; lid not properly closed.	Ensure the power cord is securely plugged into a working outlet. Check that the lid is fully closed and latched.
Food is not cooked evenly.	Too much food in the pan; ingredients not cut uniformly.	Do not overload the pan. Ensure ingredients are cut into similar sizes for consistent cooking. The automatic stirring paddle helps with evenness.
Food is not crispy.	Too much moisture; insufficient cooking time.	Pat ingredients dry before cooking. Increase cooking time slightly if needed. Ensure oil is used if the recipe calls for it.
Unusual odors during operation.	First use; food residue.	A slight odor may occur during first use. Ensure the appliance is clean and free of food residue from previous uses.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Brand: Tefal

Model Name: FZ7228 ActiFry Extra

Item Model Number: FZ722815

Capacity: 1.2 Kilograms (suitable for up to 6 people)

Color: Black

Material: Stainless Steel (Inner and Outer)

Has Nonstick Coating: Yes

Output Wattage: 1550 Watts

Voltage: 2.3E+2 Volts (AC)

Product Dimensions: 17.05"D x 17.05"W x 9.37"H (43.2 x 30.2 x 24 cm)

Item Weight: 4.08 Kilograms (8.98 pounds)

Air Frying Technology: Heat air circulation with automatic stirring paddle

Control Method: App (iOS) and manual buttons

Is Dishwasher Safe: Yes (removable components)

WARRANTY & SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Tefal website. Keep your purchase receipt as proof of purchase for any warranty claims.

Online Resources:

- Visit the [T-Fal Store on Amazon](#) for more products and information.
- Explore the Actifry App for recipes and tips (available on Android and iOS app stores).

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08755429T>

More documents and user manuals: <https://manuals.plus/>