

Tefal NEU GC705D OptiGrill Contact Grill User Manual

Model: GC705D

1. INTRODUCTION

The Tefal NEU GC705D OptiGrill is an innovative contact grill designed to deliver perfect cooking results tailored to your preferences. Featuring "Automatic Sensor Cooking" technology and predefined programs, the OptiGrill automatically adjusts cooking temperature and cycles based on the thickness and type of food. The light indicator shows the cooking status of your grilled items, from rare to medium to well-done. It also includes a defrost mode and a manual mode for versatile cooking. This manual provides essential information for the safe and efficient operation of your appliance.

Key features include:

- **Automatic Sensor Cooking:** Ensures precise cooking by adapting to food thickness and type.
- **Light Indicator & Audible Signals:** Guides you through the cooking process, from rare to well-done.
- **6 Predefined Programs:** Optimized settings for burgers, poultry, sandwiches, sausages, steaks, and fish.
- **Manual & Defrost Modes:** Offers versatility for various food types and frozen items.
- **Easy Cleaning:** Non-stick, removable, and dishwasher-safe cooking plates and drip tray.
- **Powerful Performance:** 2000W for efficient grilling indoors or outdoors.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off

parts, and before cleaning the appliance.

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your OptiGrill:

- **Main Unit:** The body of the grill housing the heating elements and controls.
- **Cooking Plates:** Two removable, non-stick, grooved plates for grilling.
- **Drip Tray:** Collects excess fat and juices during cooking.
- **Control Panel:** Features program selection buttons, power button, and the cooking level indicator.
- **Handle:** For opening and closing the grill.



Image: The Tefal OptiGrill GC705D with its lid open, revealing the upper and lower grooved cooking plates and the removable drip tray positioned at the front. The control panel is visible on the handle.

4. SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials, stickers, and accessories from the grill.
2. **Clean Plates:** Before first use, wash the cooking plates and drip tray with warm, soapy water. Rinse thoroughly and dry completely. The plates and drip tray are dishwasher safe.
3. **Install Plates:** Ensure the cooking plates are correctly installed in the grill. They click into place.
4. **Position Drip Tray:** Slide the drip tray into its designated slot at the front of the grill.
5. **Placement:** Place the grill on a stable, heat-resistant, and dry surface. Ensure there is adequate space around the appliance for ventilation.
6. **Power Connection:** Plug the power cord into a grounded electrical outlet.



Image: A detailed view of the Tefal OptiGrill's upper and lower cooking plates, highlighting their non-stick coating and grooved design for efficient fat drainage.

5. OPERATING INSTRUCTIONS

5.1. Automatic Sensor Cooking Programs

The OptiGrill features an automatic sensor that detects food thickness and adjusts cooking time accordingly. The cooking level indicator on the handle changes color to show progress.

- 1. Preheat:** Plug in the grill. Press the power button. Select one of the 6 predefined programs (e.g., Steak, Burger). The indicator light will flash blue, then green, indicating preheating.

2. **Place Food:** Once the grill beeps and the light is solid green, indicating preheating is complete, open the grill and place your food on the cooking plate. Close the lid.

3. **Monitor Cooking:** The indicator light will progress through colors:

- **Blue:** Preheating
- **Green:** Start of cooking / Rare
- **Yellow:** Medium Rare
- **Orange:** Medium
- **Red:** Well Done

The grill will beep at each stage.

4. **Remove Food:** When your desired cooking level is reached, open the grill and remove the food. Unplug the appliance.

5.2. Predefined Programs

The OptiGrill offers specific programs for optimal results:

- **Burgers:** For ground meat patties.
- **Poultry:** For chicken breasts, thighs, etc.
- **Sandwiches:** For paninis, grilled cheese, etc.
- **Sausages:** For various types of sausages.
- **Steaks:** For beef, lamb, or pork steaks.
- **Fish:** For fillets or whole fish.

5.3. Manual Mode

For foods not covered by the automatic programs or for specific preferences:

1. Plug in the grill and press the power button.
2. Select the manual mode button. The indicator light will be purple.
3. Preheat the grill. Once preheated, place your food.
4. Monitor cooking visually and remove food when desired doneness is achieved.

5.4. Defrost Mode

To grill frozen food:

1. Plug in the grill and press the power button.
2. Select the defrost mode button. The indicator light will be light blue.
3. Follow the preheating and cooking steps as for automatic programs. The defrost cycle will automatically extend the cooking time.



Image: The Tefal OptiGrill actively grilling strips of bacon, with a prepared breakfast plate featuring eggs, beans, and mushrooms visible next to it on a wooden table.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your OptiGrill.

- 1. Unplug and Cool:** Always unplug the grill from the power outlet and allow it to cool completely before cleaning.
- 2. Remove Drip Tray:** Empty and wash the drip tray with warm, soapy water. It is dishwasher safe.
- 3. Remove Cooking Plates:** Press the plate release buttons and carefully remove the cooking plates. Wash them with warm, soapy water or place them in the dishwasher. Avoid using abrasive sponges or harsh detergents that could damage the non-stick coating.
- 4. Clean Main Unit:** Wipe the exterior of the grill with a damp cloth. Do not immerse the main unit in water or any other liquid.
- 5. Storage:** Once clean and dry, store the grill in a dry place.

7. TROUBLESHOOTING

If you encounter issues with your OptiGrill, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Grill does not turn on.	Not plugged in, power outlet issue, or power button not pressed.	Ensure the grill is securely plugged into a working outlet. Press the power button firmly.

Problem	Possible Cause	Solution
Food not cooking evenly.	Plates not properly installed, food unevenly placed, or grill not fully preheated.	Check that plates are correctly clicked into place. Distribute food evenly. Always wait for the green light indicating preheating is complete.
Smoke or unusual odor during cooking.	Food residue on plates, excessive fat, or first use odor.	Clean plates thoroughly. Ensure drip tray is in place. A slight odor on first use is normal. If excessive, unplug and contact support.
Indicator light not changing color.	Sensor malfunction or incorrect program selection.	Ensure the correct program is selected. If the issue persists, unplug and restart the grill. If problem continues, contact customer support.

If the problem persists after attempting these solutions, please contact Tefal customer support.

8. SPECIFICATIONS

Model Number:	GC705D
Brand:	Tefal
Power:	2000 Watts
Voltage:	110 Volts
Dimensions (L x W x H):	36.2 x 36 x 16.5 cm
Weight:	4.58 kg (approx. 10.1 lbs)
Cooking Surface:	600 cm ²
Material:	Stainless Steel (finish), Plastic (handle)
Special Features:	Power indicator light, Preheating indicator light, Automatic Sensor Cooking

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official Tefal website. Keep your proof of purchase for any warranty claims.

For customer support, spare parts, or further assistance, please visit the official Tefal website or contact their customer service department directly. You can find contact details on the Tefal website or in your product packaging.

Official Tefal Website: www.tefal.com

