

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Gueray](#) /

› [Gueray YR-Q100 Portable CD Player User Manual - Bluetooth, FM Radio, Wall Mountable](#)

Gueray YR-Q100

Gueray YR-Q100 Portable CD Player User Manual

Model: YR-Q100 | Brand: Gueray

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Gueray YR-Q100 Portable CD Player. Please read this manual thoroughly before use and retain it for future reference. This device offers multiple playback options including CD, Bluetooth, FM Radio, USB, TF card, and AUX input, along with built-in HiFi speakers and an IR remote control.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Gueray YR-Q100 Portable CD Player
- IR Remote Control
- USB Power Adapter
- USB Power Cable
- 3.5mm AUX Audio Cable
- Wall Mounting Plate and Screws
- Desktop Stand
- User Manual

Package List



Image: All components included in the Gueray YR-Q100 package, including the CD player, remote control, power adapter, cables, wall mount, and desktop stand.

PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your CD player:

Front View

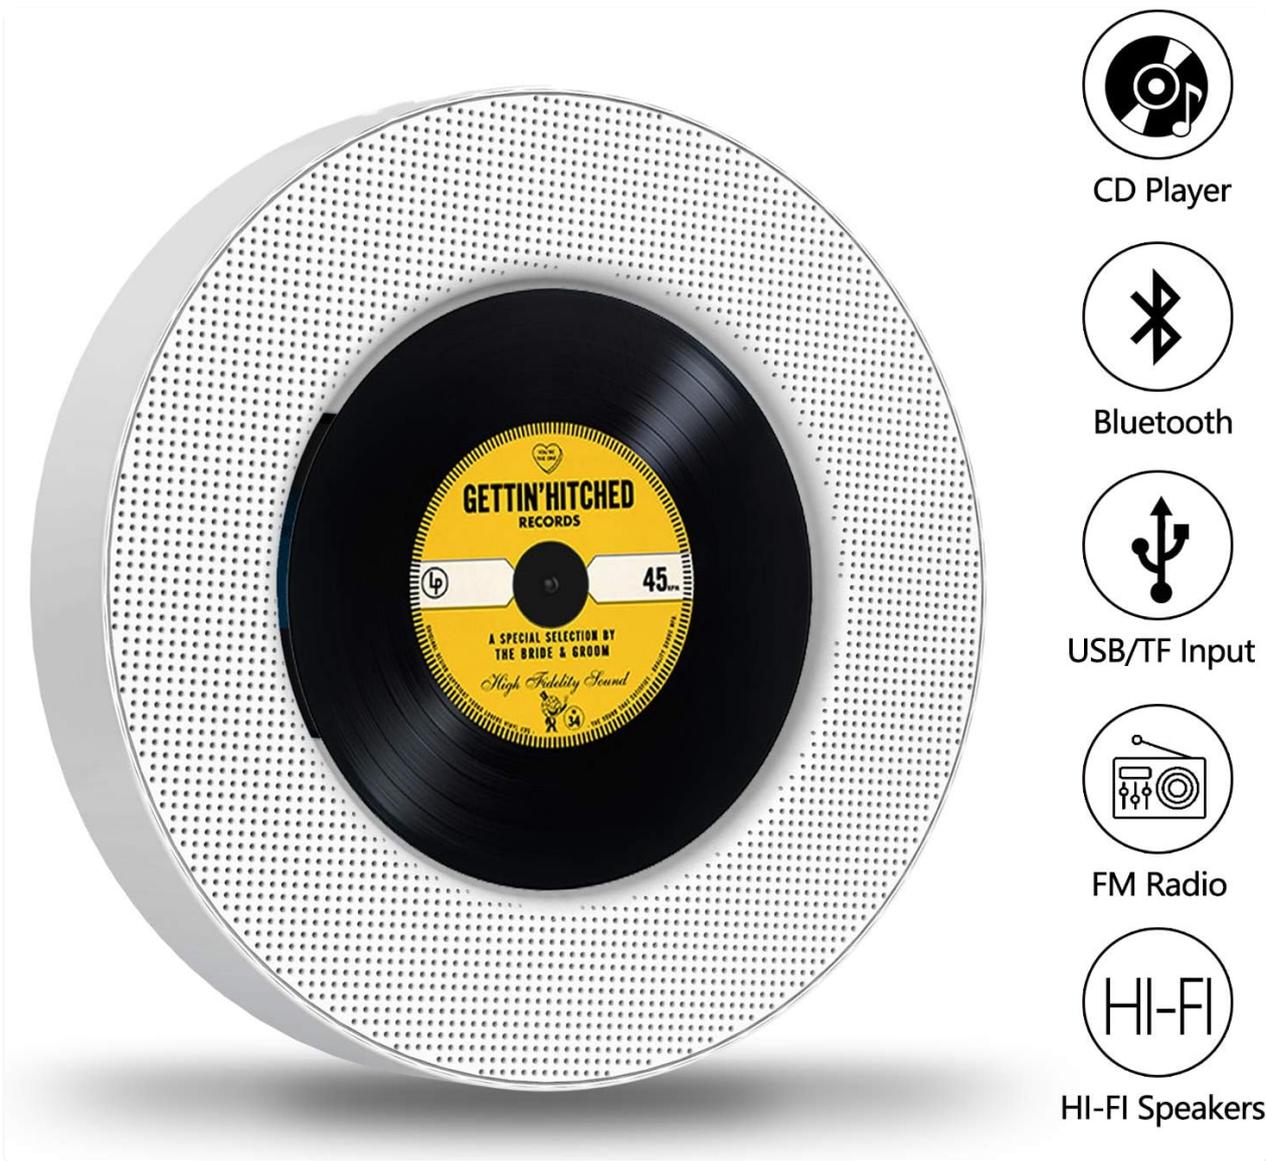


Image: The front of the CD player, highlighting its circular design and integrated speakers. Icons indicate CD playback, Bluetooth, USB/TF input, FM Radio, and HiFi speakers.

Side and Top Controls/Ports



Image: A close-up of the top edge of the CD player, showing the 'MODE', volume, track navigation, and play/pause buttons, along with a digital time display.

Wall Mount / Desk Stand



Image: The side of the CD player, revealing the USB port, TF card slot, and 3.5mm AUX input/output jack.

SETUP

Power Connection

1. Connect the USB power cable to the CD player.
2. Plug the USB power cable into the provided USB power adapter.
3. Insert the power adapter into a standard wall outlet.
4. The unit will power on when the power cord is pulled.

Wall Mounting

1. Choose a suitable location on a wall, ensuring it is near a power outlet.
2. Use the provided wall mounting plate as a template to mark the screw positions.
3. Drill pilot holes and insert the wall anchors (if necessary for drywall).
4. Secure the wall mounting plate to the wall using the provided screws.
5. Align the back of the CD player with the mounting plate and slide it down to secure it.

Desktop Stand Setup

1. Unfold the desktop stand to form a stable base.
2. Place the CD player onto the stand, ensuring it is securely seated.



Wall Mount / Desk Stand

Image: The CD player displayed in two configurations: securely mounted on a wall and resting on its foldable desktop stand.

Unboxing and Setup Video

Your browser does not support the video tag.

Video: A detailed unboxing and review of the Gueray YR-Q100 Wall Mountable CD Player, demonstrating its components and initial setup.

OPERATING INSTRUCTIONS

Power On/Off

To power on the device, pull the power cord. To power off, pull the power cord again. The remote control also has dedicated power buttons.

CD Playback

1. Remove the protective cardboard insert from the CD slot.
2. Gently insert a CD into the slot. The player will automatically detect and begin playing the CD.
3. Use the remote control or the buttons on the player to control playback (Play/Pause, Next/Previous Track, Volume Up/Down).

Bluetooth Mode

1. Press the 'MODE' button on the player or 'Bluetooth' button on the remote to switch to Bluetooth mode. The display will show "BT".
2. Enable Bluetooth on your mobile device (phone, tablet, laptop).
3. Search for "Gueray YR-Q100" (or similar name) in your device's Bluetooth settings and pair.
4. Once connected, you can stream audio from your device to the CD player.



Image: The CD player wirelessly connected to a smartphone via Bluetooth, demonstrating its capability to stream music from various devices.

FM Radio Mode

1. Press the 'MODE' button on the player or 'FM' button on the remote to switch to FM Radio mode.

2. Use the remote control to scan for stations or manually tune to a desired frequency.

USB/TF Card Playback

1. Insert a USB flash drive into the USB port or a TF card into the TF card slot.
2. Press the 'MODE' button or 'USB/TF' button on the remote to select the corresponding input.
3. The player will automatically detect and play audio files from the inserted storage device.

AUX Input Mode

1. Connect an external audio device (e.g., MP3 player) to the AUX input jack using the provided 3.5mm audio cable.
2. Press the 'MODE' button or 'AUX' button on the remote to switch to AUX input mode.
3. Audio from the external device will now play through the CD player's speakers.

Remote Control Functions

The IR remote control allows full functionality from a distance. It includes buttons for power, mode selection (CD, FM, Bluetooth, USB/TF, AUX), volume control, track navigation, play/pause, repeat, and sleep timer.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. Do not use liquid cleaners or abrasive materials.
- **CD Care:** Handle CDs by their edges. Clean CDs with a soft, lint-free cloth, wiping from the center outwards.
- **Lens Protection:** As the CD player has an open-style design, it is recommended to keep a CD or the provided cardboard insert in the slot when not in use to protect the laser lens from dust.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on.	Power cord not properly connected or pulled.	Ensure the power cord is fully inserted and pulled to activate. Check wall outlet.
CD does not play.	CD is dirty, scratched, or inserted incorrectly. Incorrect mode selected.	Clean or replace CD. Ensure CD is inserted label-side up. Press 'CD' button on remote or 'MODE' button to select CD mode.
No sound.	Volume too low. Mute function active. Incorrect mode.	Increase volume. Press mute button on remote. Select correct playback mode.
Bluetooth pairing failed.	Device too far. Bluetooth not enabled on external device.	Ensure devices are within range. Enable Bluetooth on your device and re-scan.
Remote control not working.	Batteries are dead or inserted incorrectly. Obstruction between remote and player.	Replace batteries (2x AAA). Ensure clear line of sight to the player's IR receiver.

SPECIFICATIONS

- **Model:** YR-Q100
- **Brand:** Gueray
- **Product Dimensions:** 9.8 x 8.6 x 3.2 inches
- **Item Weight:** 2.03 pounds
- **Connectivity Technology:** Auxiliary, Bluetooth, USB
- **Speaker Type:** Stereo
- **Power Supply:** AC 110-220V, 50Hz/60Hz; DC 5V/2A
- **Material:** ABS

WARRANTY AND SUPPORT

This product comes with a 365-Day Warranty. For technical support or warranty claims, please contact Gueray customer service. Refer to the contact information provided in your package or visit the official Gueray website.