

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [MYPIN](#) /
- › [MYPIN 7L Automatic Pet Feeder \(Model B0876Z5ZYC\) User Manual](#)

MYPIN B0876Z5ZYC

MYPIN 7L Automatic Pet Feeder User Manual

Model: 7L Automatic Pet Feeder (ASIN: B0876Z5ZYC)

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your MYPIN 7L Automatic Pet Feeder. This device is designed to provide scheduled meals for your cats, dogs, and other small pets, ensuring consistent feeding times and portion control. Please read this manual thoroughly before operating the feeder and retain it for future reference.

SAFETY INFORMATION

- Use only dry pet food with a pellet size between 0.19 inches (5mm) and 0.59 inches (15mm). Do not use wet food.
- Keep the feeder away from water or excessive moisture.
- Ensure the power adapter is securely connected and the cable is not damaged.
- If using batteries, ensure they are inserted correctly and replace them when low to prevent power interruption.
- Do not allow children or pets to play with the feeder.
- Disassemble only the removable parts for cleaning as instructed. Do not attempt to disassemble the main unit.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x MYPIN Automatic Pet Feeder Unit
- 1 x Power Adapter
- 1 x Quick Start Guide (This manual serves as the detailed guide)

PRODUCT OVERVIEW

Familiarize yourself with the components of your automatic pet feeder.



Image: The MYPIN 7L Automatic Pet Feeder, illustrating its anti-stuck design, infrared detection, schedule feeding, 10-second voice record, dual power supply, and auto/manual feeding modes.

- **Food Container:** 7L capacity for dry pet food.
- **Control Panel:** Features a 2-inch LCD screen and 6 physical buttons for programming.
- **Food Tray:** Detachable for easy cleaning.
- **Desiccant Storage Box:** Located under the lid to keep food fresh.
- **Voice Recorder/Speaker:** For recording and playing a 10-second message.
- **Power Port:** For DC power adapter.
- **Battery Compartment:** For 3 x D-size batteries (backup power).

SETUP INSTRUCTIONS

1. Unpack and Assemble:

Remove all components from the packaging. Ensure the food tray is securely attached to the main unit.

2. Install Desiccant Bag (Optional):

Open the top cover by pressing and lifting. Locate the desiccant storage box inside the lid. Insert a desiccant bag (not included) to help keep food fresh. Close the lid securely.



Image: Instructions on how to open the feeder lid to access the inbuilt desiccant storage box.

3. Fill Food Container:

Open the top cover. Pour dry pet food into the container. Ensure the food pellet size is between 0.19 inches (5mm) and 0.59 inches (15mm) to prevent jamming. Close the lid firmly to engage the unique inner buckles, preventing pets from accessing the food.

4. Power the Feeder:

Connect the DC power adapter to the feeder's power port and plug it into a wall outlet. For backup power, install 3 D-size batteries (not included) into the battery compartment at the bottom of the unit. The feeder will automatically switch to battery power in case of a power outage.

Setting the Current Time

1. Press the "SET" button to enter time setting mode.
2. Use the "UP" and "DOWN" buttons to adjust the hour. Press "SET" to confirm.
3. Use the "UP" and "DOWN" buttons to adjust the minute. Press "SET" to confirm.

Programming Meal Times and Portions

The feeder supports up to 4 meals per day, with up to 20 portions per meal. Each portion is approximately 5 grams.

1. Press the "MEAL" button to cycle through Meal 1 to Meal 4 settings.
2. For each meal, press "SET" to adjust the feeding time (hour and minute) using "UP" and "DOWN" buttons, confirming each with "SET".
3. After setting the time, use "UP" and "DOWN" to adjust the number of portions (1-20) for that meal. Press "SET" to confirm.
4. Repeat for all desired meals. If a meal is not set, it will not dispense food.

Voice Recording

You can record a 10-second voice message that will play at each scheduled mealtime to call your pet.

1. Press and hold the "REC" (microphone) button.
2. Speak clearly into the microphone for up to 10 seconds.
3. Release the "REC" button to save the recording. The message will play automatically during scheduled meals.

Record a custom message broadcast at meal time



Tips: Press the microphone button to record 10s Meal-Time message

Image: A visual representation of the voice recording feature, showing a kitten being called to eat by a recorded message from the feeder.

Manual Feeding

To dispense food manually, press the "MANUAL" button. One portion will be dispensed each time the button is pressed.

Key Lock Function

The control panel features a key lock function to prevent accidental changes to settings by pets or children. Refer to the LCD screen for the lock/unlock indicator and follow on-screen prompts or specific button combinations (usually a long press of a specific button) to activate or deactivate the lock.

MAINTENANCE AND CLEANING

Regular cleaning ensures hygiene and proper functioning of your pet feeder.

Healthy Feeding

Detachable feeding bucket and food tray can be washed to prevent food residue

No Washing
Damp WiPe Only



Easy to
Disassemble

Clean



Image: The MYPIN pet feeder with its food container and tray detached, illustrating the ease of disassembly for cleaning.

1. **Disassembly:** Ensure the feeder is unplugged and batteries are removed. The food container and food bowl are designed to be easily removed for cleaning. Gently detach them from the main unit.
2. **Cleaning Removable Parts:** Wash the food container and food bowl with mild soap and water. Rinse thoroughly and dry completely before reassembling.
3. **Cleaning Main Unit:** The main unit, including the dispensing mechanism, should *not* be submerged in water. Wipe it clean with a damp cloth only. Ensure no water enters the electronic components.
4. **Reassembly:** Once all parts are dry, reassemble the food container and food bowl onto the main unit, ensuring they click securely into place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Food not dispensing.	<p>Food container is empty.</p> <p>Food pellets are too large or jammed.</p> <p>Dispensing mechanism is blocked.</p> <p>Incorrect meal schedule settings.</p>	<p>Refill the food container.</p> <p>Check food pellet size (0.19"-0.59"). Clear any jammed food.</p> <p>Clean the dispensing area.</p> <p>Verify meal times and portion settings on the LCD screen.</p>
Feeder not powering on.	<p>Power adapter not connected.</p> <p>No batteries or low battery power.</p>	<p>Ensure power adapter is securely plugged in.</p> <p>Install fresh D-size batteries or replace existing ones.</p>
Lid is difficult to open/close.	<p>Lid not aligned correctly.</p> <p>Inner buckles not engaging/disengaging properly.</p>	<p>Ensure the lid is properly aligned before pressing down to close or lifting to open. Apply even pressure.</p>
Voice recording not playing.	<p>No recording saved.</p> <p>Volume too low.</p>	<p>Re-record your voice message following the instructions.</p> <p>Check if there's a volume setting (if applicable, otherwise assume fixed).</p>

SPECIFICATIONS

- **Model:** 7L Automatic Pet Feeder
- **Capacity:** 7 Liters (approximately 29 cups)
- **Material:** Polyethylene Terephthalate
- **Power Supply:** DC 5V/1A adapter (included) or 3 x D-size batteries (not included)
- **Meals per Day:** Up to 4
- **Portions per Meal:** Up to 20 (approx. 5g per portion)
- **Voice Recording:** 10 seconds
- **Compatible Food:** Dry food only
- **Food Pellet Size:** 0.19" - 0.59" (5mm - 15mm)
- **Dimensions:** Approximately 40.28 x 25.4 x 24.1 cm

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official MYPIN website. Keep your purchase receipt as proof of purchase.



