

## EasyKeys 147R

# EasyKeys HON 147R Replacement Keys User Manual

Instructions for identifying and using your HON 147R replacement keys.

## 1. INTRODUCTION

This manual provides essential information for the proper identification and use of your EasyKeys HON 147R replacement keys. These keys are designed to replace lost or damaged keys for locks that utilize the HON 147R key code. Each order includes two (2) replacement keys.

EasyKeys provides genuine original equipment parts, ensuring compatibility and reliable operation with your existing HON lock mechanisms.

## 2. KEY IDENTIFICATION AND SETUP

Before using your new replacement keys, it is crucial to verify that the HON 147R code matches your lock. Incorrect key codes will not operate your lock.

### 2.1 Locating Your Lock Code

The lock code can typically be found in several locations:

- **On the original key:** The code is often stamped directly onto the key blade or head.
- **On the lock face:** For some locks, the code is engraved or printed on the visible part of the lock cylinder.
- **On a label inside/behind the lock:** For cabinet or desk locks, the code may be on a sticker or label located on the inside of the drawer, door, or the lock mechanism itself.
- **On the cabinet/door label:** Some furniture or equipment may have a label indicating the lock code.

# Where to Find Your Lock Code



On the Key



On the Lock Face



On a Label Inside/  
Behind the Lock



On the  
Cabinet/Door Label



## Important Notes

- Order by Manufacturer → Lock codes are manufacturer-specific.
- Key Cuts Differ → Even if codes look similar, they vary by brand.

**Image 1:** Common locations for identifying your lock code. Ensure the code on your lock matches "147R" for these replacement keys.

**Important Note:** Always order keys by the manufacturer and specific lock code. Even if codes appear similar, key cuts can vary significantly between different brands and models.

### 3. OPERATING INSTRUCTIONS

---

To operate your lock with the HON 147R replacement key:

1. **Insert the key:** Gently insert the key fully into the lock cylinder. Do not force the key.
2. **Turn the key:** Rotate the key clockwise or counter-clockwise, depending on the lock mechanism, to engage or disengage the locking bolt.
3. **Remove the key:** Once the lock is operated, return the key to its original insertion position (usually vertical) before removing it.

If the key does not insert smoothly or turn easily, do not force it. Refer to the Troubleshooting section.

### 4. MAINTENANCE

---

Proper maintenance can extend the life of your keys and lock:

- **Keep keys clean:** Periodically wipe keys with a soft, dry cloth to remove dirt or debris.
- **Lubricate the lock:** If your lock mechanism becomes stiff or difficult to operate, apply a small amount of graphite powder or a silicone-based lubricant specifically designed for locks into the keyway. Avoid oil-based lubricants as they can attract dust and grime.



**Image 2:** An example of a suitable lubricant for lock mechanisms. Apply sparingly into the keyway if the lock becomes stiff.

### 5. TROUBLESHOOTING

---

If you encounter issues with your HON 147R replacement keys, consider the following:

- **Key does not insert fully:** Check the keyway for obstructions (e.g., debris, broken key fragments). Ensure you are using the correct HON 147R key.
- **Key inserts but does not turn:** Verify the key code matches your lock. The lock mechanism might be jammed or require lubrication. Try gently wiggling the key while applying slight turning pressure. Do not force it.
- **Lock is stiff or difficult to operate:** Apply a lock lubricant as described in the Maintenance section.
- **Key is bent or broken:** Discontinue use of a bent key to prevent further damage to the lock. A broken key may require professional assistance for removal from the lock cylinder. Contact EasyKeys for replacement options.

### 6. SPECIFICATIONS

---

Attribute	Detail
Product Name	HON 147R Replacement Keys
Brand	EasyKeys

<b>Key Code</b>	147R
<b>Manufacturer (Lock Type)</b>	HON
<b>Unit Count</b>	2 Keys
<b>ASIN</b>	B08778Y49K

## 7. WARRANTY AND SUPPORT

---

EasyKeys provides genuine original equipment parts for reliable performance. For any questions regarding your HON 147R replacement keys, or if you require assistance with identification or troubleshooting beyond this manual, please contact EasyKeys customer support.

Refer to your purchase documentation or the EasyKeys website for specific warranty terms and contact information.