



[Manuals.plus](#) /

> [Galanz](#) /

> Galanz GLOMJB17S2ASWZ-10 SpeedWave Over-The-Range Microwave Instruction Manual

Galanz GLOMJB17S2ASWZ-10

Galanz GLOMJB17S2ASWZ-10 SpeedWave Over-The-Range Microwave Instruction Manual

Model: GLOMJB17S2ASWZ-10 | Brand: Galanz

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Galanz GLOMJB17S2ASWZ-10 SpeedWave Over-The-Range Microwave Oven. This appliance integrates True European Convection, Sensor Technology, and TotalFry 360 Air Fry capabilities, offering versatile cooking options. Please read all instructions carefully before use and retain this manual for future reference.

KEY FEATURES

- **True Convection with Sensor Technology:** Heated air circulates throughout the oven as food spins 360 degrees, ensuring faster and even cooking without hot spots. A built-in humidity sensor prevents under or overcooking.
- **TotalFry 360 Air Fry:** Utilize Air Fry technology for cooking with minimal or no oil, promoting healthier meal preparation. An Air Fry kit is included.
- **Easy to Clean Design:** The stainless steel exterior is simple to wipe down. The glass turntable is removable for easy hand washing or dishwasher use.
- **Powerful Exhaust Vent:** An integrated vent system provides airflow to maintain a kitchen free of cooking odors and heat.
- **Multiple Pre-Set Cooking Functions:** Includes convenient pre-sets for defrost, popcorn, potato, beverage, roast, and more.
- **Large Capacity:** A 1.7 cubic foot cooking capacity accommodates family-sized meals and the included air fry kit.

SETUP

Unpacking and Placement

Carefully remove all packaging materials and accessories. Inspect the microwave for any damage, such as dents or a broken door. Do not operate if the appliance is damaged. This is an Over-the-Range installation type, designed to be installed above a kitchen range. Ensure proper ventilation clearance as specified in the full installation guide.

Included Components

- Glass Turntable
- Roller Ring
- Air Fry Kit

Assemble the turntable and roller ring inside the microwave cavity before first use. The Air Fry Kit should be used according to specific Air Fry instructions.

OPERATING INSTRUCTIONS

Basic Microwave Operation

1. Place food in a microwave-safe container on the glass turntable.
2. Close the microwave door securely.
3. Enter desired cooking time using the number pad.
4. Press the **START/+30Sec** button to begin cooking. Pressing this button repeatedly adds 30-second intervals.
5. To stop cooking, press the **STOP/Clear** button.

Pre-Set Cooking Functions

The control panel features dedicated buttons for common foods:

- **Popcorn:** For automatic popcorn preparation.
- **Potato:** For cooking potatoes based on quantity.
- **Veggies:** For steaming or cooking various vegetables.
- **Pizza:** For reheating or cooking pizza.
- **Auto Reheat:** For reheating various food items.
- **Melt/Soften:** For melting butter or softening cream cheese.
- **Auto Defrost:** For defrosting food by weight or time.
- **Auto Cook:** Provides various automatic cooking options.

Select the desired function and follow the on-screen prompts or refer to the detailed cooking chart inside the microwave door for specific instructions.

Convection and Air Fry Functions

This microwave offers advanced cooking modes:

- **Convection:** Use for baking and roasting with circulating hot air. Refer to the cooking guide for temperature and time settings.
- **Air Fry (TotalFry 360):** Place food in the included Air Fry kit. Select the Air Fry function and follow the recommended settings for crispy results.

Additional Controls

- **Turntable On/Off:** Allows you to disable the turntable rotation if needed for larger dishes.
- **Light:** Controls the light for the cooktop area below the microwave.
- **Vent Fan:** Activates the exhaust fan to remove smoke and odors.
- **Child Safety Lock:** To activate, press and hold the 'STOP/Clear' button for 3 seconds. The lock indicator will appear. To deactivate, repeat the process.

MAINTENANCE

Cleaning the Microwave

Regular cleaning helps maintain the performance and appearance of your microwave. The stainless steel surfaces can be wiped down with a soft cloth and mild detergent. The interior cavity is designed for easy cleaning.

- **Interior:** Wipe with a damp cloth and mild soap. For stubborn food splatters, place a bowl of water with lemon slices inside and microwave for 2-3 minutes to loosen residue, then wipe clean.
- **Glass Turntable and Roller Ring:** These components can be removed and washed by hand with warm, soapy water or placed in the dishwasher.
- **Exterior:** Clean with a soft cloth and mild detergent. Avoid abrasive cleaners or scouring pads.
- **Air Fry Kit:** Wash thoroughly after each use.

Filter Maintenance

The exhaust vent includes grease filters that should be cleaned regularly to ensure optimal performance. Refer to the full owner's manual for instructions on how to remove and clean these filters.

TROUBLESHOOTING

If you encounter issues with your microwave, consult the following common troubleshooting tips:

- **Microwave not operating:** Ensure the power cord is securely plugged into a functional outlet. Check your household fuse or circuit breaker. Make sure the door is closed completely.
- **Food not heating evenly:** Ensure the turntable is properly seated and rotating. Stir or rotate food halfway through cooking.
- **Excessive noise during operation:** Check that the turntable and roller ring are correctly positioned. Ensure no foreign objects are inside the cavity.
- **Vent fan not working:** Check fan settings. Ensure filters are clean and not obstructed.
- **Door light stays on:** This may indicate a door latch issue. Ensure the door is fully closed and latched. If the problem persists, contact customer service.

For more complex issues or persistent problems, refer to the comprehensive troubleshooting section in your full owner's manual or contact Galanz customer support.

SPECIFICATIONS

Model Number	GLOMJB17S2ASWZ-10
Capacity	1.7 Cubic Feet
Product Dimensions (D x W x H)	17.87" x 29.87" x 16.87"
Item Weight	78 Pounds
Voltage	120 Volts
Wattage	1000 watts
Color	Stainless Steel
Material	Stainless Steel

Installation Type	Over-the-Range
Special Features	Child Safety Lock, Cooking Light, Defrost, Timer, Turntable

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Galanz website. For technical support, service inquiries, or to purchase replacement parts, please contact Galanz customer service. Keep your model number and purchase date readily available when contacting support.

PRODUCT IMAGES



Figure 1: Overview of the multifunctional Galanz SpeedWave Over-The-Range Microwave Oven, highlighting TotalFry 360 Technology, Sensor Cook & Reheat, True Steam with Steam Kit, and True Convection.

12.8" Glass Turntable



Figure 2: Interior view of the microwave, showcasing the spacious cavity and the 12.8-inch glass turntable, ideal for various dish sizes.



Heavy Duty Aluminum Handle

Figure 3: A close-up of the durable, heavy-duty aluminum handle, designed for comfortable and reliable opening and closing of the microwave door.

TotalFry 360™ technology



Air Frying



Deep Frying

Figure 4: Visual comparison illustrating the TotalFry 360 technology for air frying, offering a healthier alternative to deep frying with similar crispy results.

1.7 Cu.Ft. capacity is great for family-sized meals



Figure 5: Diagram showing the external dimensions of the 1.7 cubic foot microwave, along with images of the glass turntable and the air fry kit.



Figure 6: The Galanz Over-The-Range Microwave Oven seamlessly installed above a kitchen stove, demonstrating its integrated design and functionality with steam rising from a pot.