

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Beeasy AW02

Beeasy Digital Watch User Manual

Model: AW02 | Brand: Beeasy

INTRODUCTION

This manual provides comprehensive instructions for the Beeasy Digital Watch, Model AW02. Designed for durability and ease of use, this ultra-thin digital watch features a casual and simple dial design, making it suitable for daily wear. It supports various functions including a stopwatch, alarm, countdown timer, and dual time display, all complemented by a convenient backlit display for low-light conditions.

For optimal performance and longevity, please read this manual thoroughly before using your watch.

PRODUCT OVERVIEW



Front view of the Beeasy Digital Watch, showcasing its wide-angle display and sleek design.



Side view highlighting the ultra-thin case thickness of only 6.6mm.

The Beeasy Digital Watch is equipped with four primary buttons for navigation and function control:

- **LIGHT Button (Top Left):** Activates the backlight for improved visibility in dark environments.
- **MODE Button (Bottom Left):** Cycles through different modes: Time, Alarm, Stopwatch, Dual Time, and Countdown Timer.
- **ST/STOP Button (Top Right):** Used to start/stop functions (e.g., stopwatch) and adjust settings (e.g., incrementing values).
- **RESET Button (Bottom Right):** Resets functions (e.g., stopwatch, countdown) and confirms settings.

SETUP

Initial Power-On

Your Beeasy Digital Watch comes pre-installed with a lithium metal battery. It should be ready for immediate use upon removal from its packaging. If the display is blank, ensure any protective film on the screen or back is removed. The watch may enter a power-saving mode if left inactive; pressing any button should reactivate the display.

Setting Time and Date

1. From the Time display mode, press and hold the **RESET** button for approximately 3 seconds until the seconds begin to flash. This indicates you are in setting mode.
2. Press the **MODE** button repeatedly to cycle through the settings: Seconds → Hours → Minutes → Year → Month → Day. The currently adjustable value will flash.
3. Use the **ST/STOP** button to adjust the flashing value. For hours, you can toggle between 12-hour and 24-hour format by pressing the **ST/STOP** button.
4. Once all desired values are set, press the **RESET** button to save your changes and exit the setting mode. The day of the week will automatically update based on the set date.



Visual guide for setting the day of the week, which is part of the overall time and date setting process.

OPERATING INSTRUCTIONS

Switching Modes

Press the **MODE** button (bottom left) to cycle through the watch's functions in the following order:

- Time Display (default)
- Alarm Mode
- Stopwatch Mode
- Dual Time Mode
- Countdown Timer Mode



Overview of the watch's main functions: Dual Time, Alarm Mode, and Stopwatch/Countdown/Split Time.

Using the Alarm

1. From the Time display, press **MODE** once to enter Alarm Mode (indicated by "AL" on the display).
2. Press the **ST/STOP** button to toggle the alarm ON/OFF.
3. To set the alarm time, press and hold the **RESET** button until the hour flashes.
4. Use the **ST/STOP** button to adjust the hour. Press **MODE** to switch to minutes, then use **ST/STOP** to adjust minutes.
5. Press **RESET** to save the alarm time.
6. To activate the hourly chime, press the **ST/STOP** button while in Alarm Mode (without holding **RESET**) until the hourly chime icon appears/disappears.

Using the Stopwatch

1. From the Time display, press **MODE** twice to enter Stopwatch Mode (indicated by "ST" on the display).
2. Press the **ST/STOP** button to start the stopwatch.
3. Press **ST/STOP** again to pause the stopwatch.
4. Press the **RESET** button to reset the stopwatch to zero.
5. For split time (lap time), while the stopwatch is running, press the **RESET** button. The display will show the split time while the stopwatch continues to run in the background. Press **RESET** again to return to the running stopwatch display.

Using Dual Time

1. From the Time display, press **MODE** three times to enter Dual Time Mode (indicated by "DT" on the display).

2. To set the dual time, press and hold the **RESET** button until the hour flashes.
3. Use the **ST/STOP** button to adjust the hour. Press **MODE** to switch to minutes, then use **ST/STOP** to adjust minutes.
4. Press **RESET** to save the dual time.

Using the Countdown Timer

1. From the Time display, press **MODE** four times to enter Countdown Timer Mode (indicated by "TR" on the display).
2. To set the countdown time, press and hold the **RESET** button until the hour flashes.
3. Use the **ST/STOP** button to adjust the hour. Press **MODE** to switch to minutes, then use **ST/STOP** to adjust minutes. Press **MODE** again to switch to seconds, then use **ST/STOP** to adjust seconds.
4. Press **RESET** to save the countdown time.
5. Press **ST/STOP** to start the countdown.
6. Press **ST/STOP** again to pause the countdown.
7. Press **RESET** to reset the countdown to the preset time.

MAINTENANCE

- **Cleaning:** Wipe the watch with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.
- **Water Resistance:** The watch is water resistant to 50M / 164FT, suitable for swimming in shallow water and cold showering. However, it is crucial to **keep away from hot water and steam** as this can compromise the water seals. It is not suitable for long-time underwater activities such as diving.
- **Battery Replacement:** The watch uses 1 Lithium Metal battery. Battery replacement should ideally be performed by a qualified technician to ensure water resistance is maintained.
- **Storage:** When not in use for extended periods, store the watch in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery or power-saving mode.	Press any button to reactivate. If still blank, consider battery replacement.
Time is incorrect.	Time not set correctly or accidental adjustment.	Refer to "Setting Time and Date" section to re-set the time.
Alarm does not sound.	Alarm is not activated or volume is too low.	Ensure alarm is set to ON in Alarm Mode. Note: Alarm volume is fixed and may not be suitable for all users.
Watch fogs up internally.	Exposure to extreme temperature changes or compromised water resistance.	Avoid hot water/steam. If fogging persists, contact customer support as water resistance may be compromised.
Buttons are unresponsive.	Debris under buttons or internal malfunction.	Gently clean around buttons. If issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	AW02
Dimensions	9.65 x 1.73 x 0.26 inches
Weight	1.3 ounces
Case Thickness	6.6mm (Ultra-thin)
Water Resistance	50M / 164FT (5ATM)
Battery Type	1 Lithium Metal battery
Display Type	Digital, Super Wide-Angle
Features	Dual Time Zone, 12/24 Hour Switch, Automatic Calendar, Alarm Clock, Hourly Alarm, Daily Alarm, 1/100 Second Stopwatch, Countdown Timer (max 23h 59m 59s), Backlight

WARRANTY AND SUPPORT

Beeasy provides a **12-month guarantee** from the date of purchase, ensuring peace of mind for your product. This warranty covers manufacturing defects and issues arising from normal use.

For any questions, concerns, or issues with your Beeasy Digital Watch, please do not hesitate to contact our customer service team. We are committed to providing a satisfied solution within 24 hours.

Online Customer Service: Available 7 days a week, 24 hours a day.

Common Inquiries: Right Size? Empty Box? Not Satisfied? Quality Problem? Setting The Time? Not Arrive on Time?

User Manual (PDF): For a downloadable version of the manual, please refer to the official product page or click [here](#).



Beeasy offers 7*24H Online Customer Service for all your needs.

