

[Manuals.plus](#) /

› [PRITOM](#) /

› PRITOM M10 Android Tablet User Manual

PRITOM M10

PRITOM M10 Android Tablet User Manual

Model: M10 | Brand: PRITOM

1. INTRODUCTION

Thank you for choosing the PRITOM M10 Android Tablet. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly to ensure optimal performance and longevity of your tablet.



Image: Front view of the PRITOM M10 Android Tablet, showcasing its 10.1-inch IPS HD touchscreen with various application icons.

2. SAFETY INFORMATION

- Do not expose the tablet to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the tablet to strong impacts.
- Use only approved chargers and accessories to prevent damage and ensure safety.
- Keep the tablet away from water and other liquids.
- Do not attempt to disassemble or repair the tablet yourself. Contact customer support for assistance.

3. PACKAGE CONTENTS

The PRITOM M10 Tablet package includes the following items:

- 1 x PRITOM M10 Tablet
- 1 x USB Cable
- 1 x Power Adapter
- 1 x User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the physical components of your PRITOM M10 Tablet:



Image: Detailed diagram illustrating the location of the front camera, power on/off button, volume up/down buttons, reset button, Micro USB port, headphone jack, Micro SD card slot, rear camera, and speakers on the PRITOM M10 Tablet.

- **Front Camera:** For video calls and selfies.
- **Power On/Off Button:** Press and hold to power on/off or restart. Short press to sleep/wake.
- **Volume +/- Buttons:** Adjust the audio volume.
- **Reset Button:** Small pinhole for force restart if the device becomes unresponsive.
- **Micro USB Port:** For charging and data transfer.

- **Headphone Jack:** 3.5mm audio output.
- **Micro SD Card Slot:** Expand storage up to 512GB.
- **Rear Camera:** For taking photos and videos.
- **Speakers:** Audio output.

5. SETUP

5.1 Charging the Tablet

Before first use, fully charge your tablet. Connect the provided USB cable to the tablet's Micro USB port and the other end to the power adapter. Plug the adapter into a wall outlet. The battery indicator on the screen will show charging status.

5.2 Powering On/Off

- **To Power On:** Press and hold the Power On/Off button until the PRITOM logo appears.
- **To Power Off:** Press and hold the Power On/Off button until a power-off menu appears. Select "Power off" and confirm.
- **Sleep/Wake:** Short press the Power On/Off button to put the tablet to sleep or wake it up.

5.3 Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process:

1. Select your preferred language.
2. Connect to a Wi-Fi network. This is necessary for downloading updates and accessing online services.
3. Sign in with your Google account or create a new one. This allows access to the Google Play Store and other Google services.
4. Follow the on-screen prompts to complete the setup, including setting up security features like PIN or pattern lock.

5.4 Inserting a Micro SD Card

To expand the tablet's storage:

1. Locate the Micro SD card slot on the side of the tablet.
2. Gently insert a Micro SD card (up to 512GB, not included) into the slot until it clicks into place.
3. The tablet will detect the card and may prompt you to format it for internal or portable storage.

6. OPERATING THE TABLET

6.1 Navigating Android 13

Your PRITOM M10 Tablet runs on Android 13, offering a user-friendly interface. Common gestures include:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through screens or lists.
- **Pinch-to-Zoom:** Enlarge or shrink content like photos or web pages.
- **Long Press:** Access contextual menus or move app icons.

6.2 Wi-Fi Connection

To connect to Wi-Fi:

1. Go to **Settings > Network & internet > Internet**.
2. Turn on Wi-Fi.
3. Select your desired network from the list and enter the password if required.

6.3 Camera Functions

The tablet features dual cameras (2.0MP front, 8.0MP rear) for capturing moments.



Image: The PRITOM M10 Tablet showcasing an image captured by its dual camera, highlighting its photography capabilities.

Open the Camera app to switch between front and rear cameras, take photos, or record videos.

6.4 Entertainment and Apps

The PRITOM M10 is designed for entertainment, supporting various media and applications.

Designed for Entertainment

Enjoy all your favorite movies,TV shows on Video,Netflix,You Tube,
Sling TV,and millions of eBooks and magazines,
and more,



Image: The PRITOM M10 Tablet displaying a variety of popular entertainment and social media application icons, emphasizing its suitability for multimedia consumption.

- **Google Play Store:** Download millions of apps, games, movies, TV shows, and e-books.
- **Media Playback:** Enjoy videos and music using pre-installed apps or downloaded alternatives.
- **Reading:** Utilize e-reader apps for a comfortable reading experience with the IPS display.

7. MAINTENANCE

7.1 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials.

7.2 Battery Care

- Avoid fully discharging the battery frequently.

- Do not leave the tablet charging for extended periods after it's fully charged.
- Store the tablet in a cool, dry place if not used for a long time.

7.3 Software Updates

Regularly check for system updates to ensure optimal performance and security. Go to **Settings > System > System update**.

7.4 Storage Management

To manage storage, go to **Settings > Storage**. You can clear cached data, uninstall unused apps, or move files to the Micro SD card.

8. TROUBLESHOOTING

Problem	Solution
Tablet won't turn on.	Ensure the battery is charged. Connect to charger for at least 30 minutes. If still unresponsive, press the reset button with a thin object.
Wi-Fi connection issues.	Restart the tablet and your Wi-Fi router. Forget the network in settings and reconnect. Ensure you are within range.
Apps are crashing or freezing.	Clear the app's cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). Restart the tablet. Ensure sufficient free storage space.
Slow performance.	Close unused apps. Clear cache. Uninstall unnecessary apps. Consider a factory reset as a last resort (backup data first).

9. SPECIFICATIONS

Key technical specifications for the PRITOM M10 Tablet:

Feature	Detail
Model	M10 (Pritom-M10)
Operating System	Android 13
Screen Size	10.1 Inches IPS HD Touchscreen
Screen Resolution	1280 x 800 pixels
Processor	Quad-Core (1.6 GHz)
RAM	4GB (2GB + 2GB Expand)
Internal Storage	64GB ROM (expandable up to 512GB via Micro SD)
Cameras	Front: 2.0MP, Rear: 8.0MP
Battery	6000mAh Lithium Polymer (up to 6 hours mixed use)

Feature	Detail
Connectivity	Wi-Fi (802.11ac), Bluetooth, GPS, FM
Dimensions (LxWxH)	9.64 x 6.8 x 0.31 inches
Weight	2.11 pounds



HD

HD IPS



Android 13



 
Wi-Fi + SIM
2.4G Wi-Fi & SIM



RAM 4 GB
(2GB+2GB Expand)



ROM 64 GB
(1 TB Expandable)



10.1 "
Large Display



6000
Mah



Dual Camara
2.0+8.0 MP



Image: An infographic highlighting the main features of the PRITOM M10 Tablet, including its HD IPS display, Android 13 OS, Wi-Fi + SIM support, 4GB RAM, 64GB ROM, 10.1-inch screen, 6000mAh battery, and dual cameras.

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included in your product packaging or visit the official PRITOM website. You can also contact PRITOM customer service directly for assistance with product issues or inquiries.

For additional resources and product information, visit thePRITOM Store on Amazon.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

My PRITOM M10 tablet isn't charging or turning on after the battery ran out; is there a way to reset it?

If your PRITOM M10 tablet is not charging or turning on after the battery has completely drained, follow these troubleshooting steps from the user manual:Extended Charging: Connect the tablet to the original power adapter...

[Read full answer](#)