

[manuals.plus](#) /› [Bagotte](#) /› [Bagotte BG600MAX Robot Vacuum Cleaner User Manual](#)

Bagotte BG600MAX

Bagotte BG600MAX Robot Vacuum Cleaner User Manual

Model: BG600MAX

1. INTRODUCTION

This manual provides essential instructions for the safe operation, maintenance, and troubleshooting of your Bagotte BG600MAX Robot Vacuum Cleaner. Please read this manual thoroughly before using the appliance and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of injury or damage, read these safety instructions carefully and keep them handy when setting up, using, and maintaining your robot vacuum cleaner.

- This appliance is for indoor use only. Do not use outdoors or on commercial surfaces.
- Do not allow children to operate the robot vacuum. Supervise children and pets when the robot is operating.
- Do not place objects on top of the robot.
- Remove obstacles and loose cables from the cleaning path to prevent entanglement.
- Avoid vacuuming very dark-colored high-pile rugs or rugs thicker than 1.02 inches (26 mm).
- Do not expose the robot to direct sunlight.
- Use only the original power adapter and charging base provided.
- Ensure the robot is fully charged before first use.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x BG600MAX Robot Vacuum

- 1 x Remote Control (2 AAA batteries included)
- 1 x Charging Base
- 1 x Power Adapter
- 1 x Magnetic Stripe (2 meters)
- 1 x Additional HEPA Strainer
- 1 x Additional Foam Strainer
- 4 x Side Brushes
- 1 x Auxiliary Tool
- 1 x User Manual



Figure 3.1: Bagotte BG600MAX Robot Vacuum Cleaner and included accessories.

This image displays the Bagotte BG600MAX Robot Vacuum Cleaner along with its charging base, remote control, side brushes, and other accessories as they appear in the package.

4. PRODUCT OVERVIEW

The Bagotte BG600MAX is a versatile robot vacuum cleaner designed for efficient floor cleaning. It features multiple cleaning modes, strong suction, and intelligent navigation.

Key Features:

- **Powerful Suction:** Provides up to 2000Pa suction for thorough cleaning.
- **3-in-1 Cleaning:** Combines vacuuming, sweeping, and mopping (water tank sold separately).
- **Boost-Intellect Technology:** Automatically increases suction power on carpets.
- **Ultra-thin Design:** At 2.7 inches, it can clean under low-lying furniture.
- **Quiet Operation:** Operates at a low noise level of 55dB in Low/Auto suction mode.
- **Anti-Fall Protection:** Sensors prevent the robot from falling down stairs.
- **Smart Anti-Collision Sensors:** Detects and avoids obstacles.
- **Boundary Strips:** Use the included magnetic strip to define no-go zones.



Figure 4.1: The robot vacuum demonstrating its powerful 2000Pa suction, effectively picking up various debris.

Intelligent 3-1, Vacuuming, Sweeping & Mopping

Take Out the Dustbin, Plug-in Water Tank, Mopping Dirts, Debris, and Footprints



Figure 4.2: An illustration of the robot's 3-in-1 functionality, highlighting its ability to vacuum, sweep, and mop (with an optional water tank).



Figure 4.3: The robot vacuum on a carpet, illustrating its Boost-Intellect Technology which automatically increases suction for deeper cleaning on soft surfaces.



Figure 4.4: The robot vacuum positioned under a low cabinet, showcasing its ultra-thin 2.7-inch design for cleaning hard-to-reach areas.

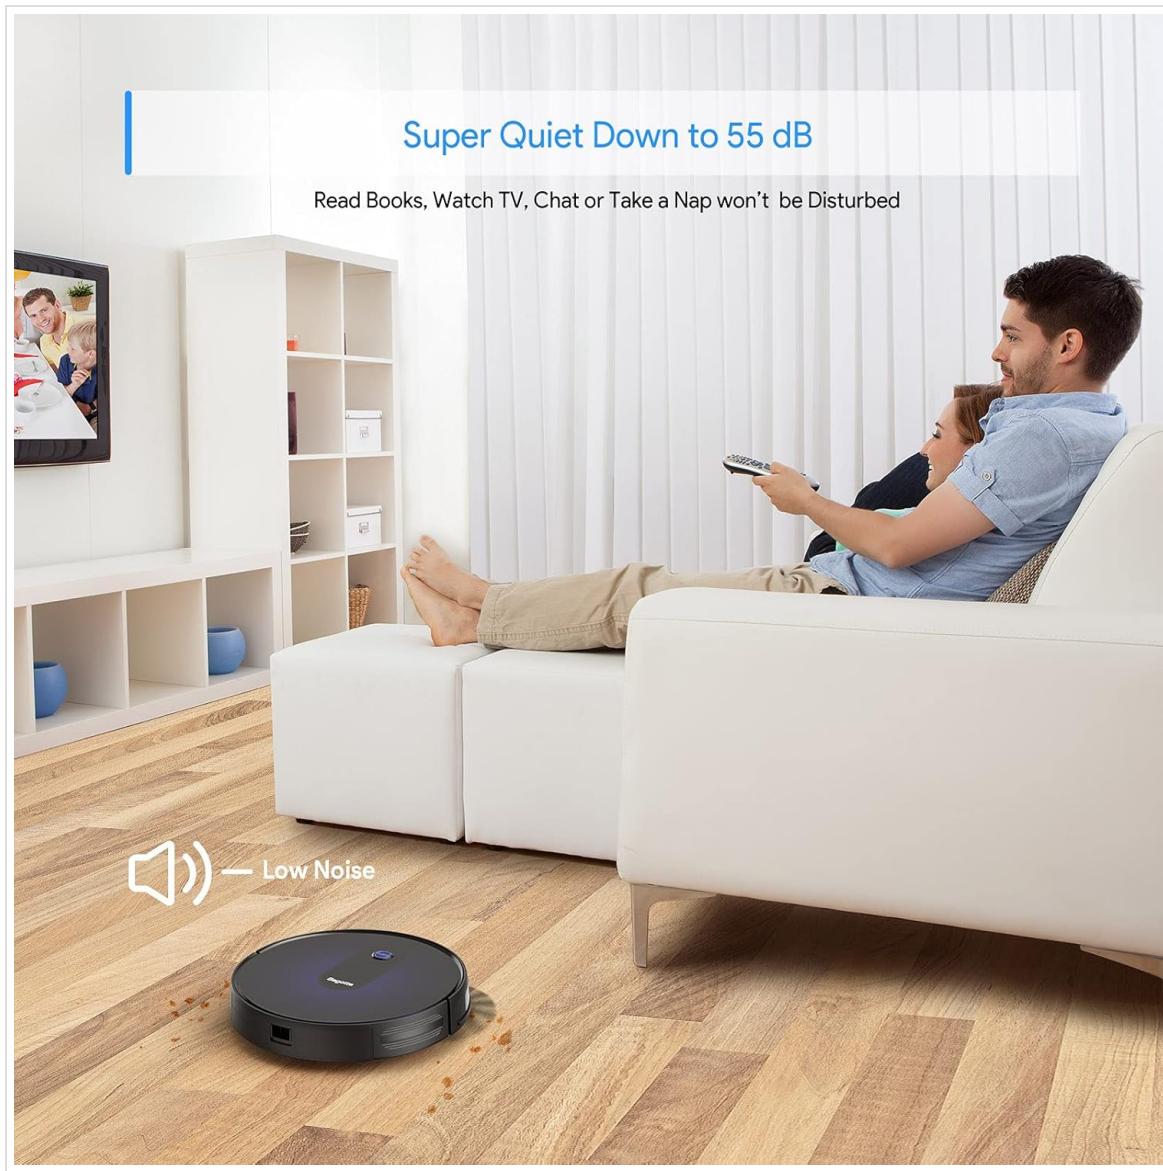


Figure 4.5: The robot vacuum operating in a living room, emphasizing its quiet operation (down to 55 dB) allowing for undisturbed activities.

Product Overview Video

Your browser does not support the video tag.

Video 4.1: An official product video demonstrating the Bagotte BG600MAX robot vacuum's features and capabilities, including its cleaning modes and design.

5. SETUP

5.1 Charging Base Placement

Place the charging base against a wall in an open, uncluttered area. Ensure there is at least 1 meter (3 feet) of clear space to the sides and 2 meters (6 feet) in front of the charging base for optimal robot navigation.

5.2 Installing Side Brushes

Attach the side brushes by pressing them onto the square posts on the bottom of the robot until they click into place.

5.3 Initial Charge

Before first use, ensure the robot is fully charged. Connect the power adapter to the charging base and plug it into a wall outlet. Place the robot onto the charging base, aligning its charging contacts with those on the base. The indicator light on the robot will show charging status.

5.4 Powering On/Off

To power on the robot, press and hold the 'CLEAN' button on the robot or the power button on the remote control until the indicator lights illuminate. To power off, press and hold the 'CLEAN' button until the lights turn off.

Setup and Remote Control Demonstration

Your browser does not support the video tag.

Video 5.1: This video demonstrates the remote control functions, including setting the time and initiating the robot's return to its charging base.

6. OPERATING INSTRUCTIONS

The Bagotte BG600MAX offers various cleaning modes to suit different needs.

6.1 Cleaning Modes

- **Auto Cleaning:** The robot automatically cleans in a systematic pattern. Press the 'CLEAN' button on the robot or 'AUTO' on the remote.
- **Spot Cleaning:** For concentrated cleaning of a specific dirty area. Place the robot in the center of the area and select 'Spot' mode on the remote.
- **Edge Cleaning:** The robot cleans along walls and furniture edges. Select 'Edge' mode on the remote.

6.2 Using the Remote Control

The remote control allows you to start/stop cleaning, select cleaning modes, direct the robot manually, and send it back to the charging base.

6.3 Setting Up Boundary Strips

Use the magnetic boundary strips to create virtual walls that the robot will not cross. Cut the strip to the desired length and place it flat on the floor. Ensure the robot's sensors can detect the strip.

Robot in Action Videos

Your browser does not support the video tag.

Video 6.1: This video showcases the robot vacuum's cleaning capabilities and its ability to navigate around obstacles and return to its charging station.

Your browser does not support the video tag.

Video 6.2: A demonstration of the robot vacuum cleaning a tiled floor, highlighting its movement and effectiveness in a home environment.

Your browser does not support the video tag.

Video 6.3: This video illustrates the robot vacuum's movement and cleaning performance on a hard floor surface.

Your browser does not support the video tag.

Video 6.4: A product demonstration showing the robot vacuum's features and how it operates in a home setting.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your robot vacuum cleaner.

7.1 Cleaning the Dustbin and Filters

1. Press the dustbin release button and pull out the dustbin.
2. Open the dustbin cover and empty its contents into a trash bin.
3. Remove the primary filter and HEPA filter. Tap them gently to remove dust. Do not wash HEPA filters.
4. Rinse the dustbin with water if necessary, ensuring it is completely dry before reinstallation.
5. Reinstall the filters and dustbin.

7.2 Cleaning Side Brushes

Periodically check the side brushes for tangled hair or debris. Gently pull them off their posts and remove any obstructions. If brushes are damaged, replace them with new ones.

7.3 Cleaning the Main Brush

Open the main brush cover on the bottom of the robot. Remove the main brush and use the auxiliary tool to cut and remove any tangled hair or fibers. Reinstall the main brush and cover.

7.4 Cleaning Sensors and Charging Contacts

Wipe the anti-drop sensors, anti-collision sensors, and charging contacts on both the robot and the charging base with a clean, dry cloth to ensure proper function.

8. TROUBLESHOOTING

If your robot vacuum cleaner encounters issues, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Robot does not turn on	Low battery; Power switch off	Charge the robot; Ensure power switch on bottom is ON.
Robot does not charge	Charging contacts dirty; Power adapter not connected	Clean charging contacts; Ensure adapter is plugged in.
Robot gets stuck frequently	Obstacles; High-pile carpets	Clear cleaning area; Use boundary strips for problematic rugs.
Poor cleaning performance	Full dustbin; Clogged filters/brushes	Empty dustbin; Clean/replace filters and brushes.
Remote control not working	Dead batteries; Obstruction between remote and robot	Replace AAA batteries; Ensure clear line of sight.

9. SPECIFICATIONS

Detailed technical specifications for the Bagotte BG600MAX Robot Vacuum Cleaner.

Specification	Value
Brand	Bagotte
Model Name	BG600MAX
Product Dimensions	13" L x 13" W x 2.7" H
Battery Type	DC 14.4 V Li-ion 2600 mAh
Maximum Working Time	100 minutes
Charging Time	300-360 minutes
DB Noise	40-60 dB
Collector Capacity	0.6L
Power Source	Battery Powered
Compatible Devices	Amazon Echo
Surface Recommendation	Hardwood, Carpet

10. WARRANTY AND SUPPORT

Bagotte offers a 1-year return and replacement policy for this product. If you encounter any issues or require assistance, please contact Bagotte customer support. Do not return the product directly without contacting support first, as they can provide a satisfactory solution.

For further assistance, please visit the official Bagotte website or refer to the contact information provided in your product packaging.