

[manuals.plus](#) /› [Yesker](#) /› [Yesker Ring Light 18" Wireless Remote LCD Screen with Tripod Stand 65W LED Ringlight Bi-Color 3200-5500K CRI≥95 for Portrait Live Stream Photography Tiktok Video Zoom Meeting Online Teaching 18 Inch](#)

Yesker 022

Yesker 18-inch Ring Light Instruction Manual

Brand: Yesker | **Model:** 022

1. INTRODUCTION

Thank you for choosing the Yesker 18-inch Ring Light. This professional lighting solution is designed to provide optimal illumination for various applications, including portrait photography, live streaming, video recording, makeup artistry, and online teaching. Featuring adjustable bi-color temperature (3200K-5500K) and stepless dimming, along with a sturdy tripod stand and convenient wireless controls, this ring light enhances visual quality and user experience. Please read this manual thoroughly before operation to ensure proper setup and safe use.



Image 1.1: The Yesker 18-inch Ring Light with its components, including the tripod stand, wireless remote, and phone holder.

2. SAFETY INFORMATION

- Do not expose the ring light to rain or moisture.
- Avoid direct eye exposure to the LED light, as it can be very bright.
- Ensure the power adapter is compatible with your local power supply before plugging in.
- Keep the device away from heat sources and flammable materials.
- Do not attempt to disassemble or modify the product. Repairs should only be performed by qualified personnel.
- Always secure the tripod stand on a stable, level surface to prevent tipping.
- Unplug the power adapter when not in use or during cleaning.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x 18-inch Ring Light
- 1 x Ring Light Remote (battery not included)

- 1 x Tripod Stand
- 1 x Power Adapter
- 1 x Hot Shoe Adapter
- 1 x Phone Holder
- 1 x Cell Phone Remote
- 1 x Carry Bag

ALL ITEMS IN THE PACKAGE



18" Ring Light



71" Tripod Stand



Carry Bag For Ring Light



Hot Shoe Adapter



Wireless cellphone Selfie Remote



Phone Holder



Ring light remote (without battery)



Power Supply 9.8 Feet

Image 3.1: A visual representation of all components included in the Yesker 18-inch Ring Light package.

4. PRODUCT OVERVIEW

The Yesker 18-inch Ring Light features an integrated LCD screen for precise control over brightness and color temperature. It is designed for versatility and ease of use, making it suitable for various content creation needs.

Key Components:

- **Ring Light Unit:** Houses the LED bulbs, control panel with LCD screen, and mounting point.
- **Tripod Stand:** Extendable and stable, designed with two tripod brackets for enhanced stability. Adjustable height from 31.5 inches to 71 inches.

- **Wireless Remote Control:** Allows adjustment of brightness, color temperature, and lighting modes from a distance.
- **Selfie Remote:** A small Bluetooth remote for triggering phone cameras.
- **Phone Holder:** Mounts securely in the center of the ring light to hold smartphones.
- **Hot Shoe Adapter:** For mounting cameras or other accessories.



Image 4.1: Detailed view of the ring light's control panel, showing the LCD display for brightness and color temperature, and the wireless remote.

5. SETUP INSTRUCTIONS

Follow these steps to assemble and set up your Yesker Ring Light:

1. Assemble the Tripod Stand:

- Unfold the legs of the tripod stand until they are fully extended and stable.
- Adjust the height of the stand by loosening the locking knobs on the telescopic sections, extending to your desired height (31.5" to 71"), and then tightening the knobs securely.

2. Attach the Ring Light:

- Locate the 1/4-inch screw on top of the tripod stand.

- Align the mounting hole on the bottom of the ring light with the screw and rotate the ring light clockwise until it is firmly attached.

3. Install Phone Holder/Hot Shoe Adapter:

- For phone use, screw the phone holder onto the hot shoe adapter, then slide the hot shoe adapter into the cold shoe mount located in the center of the ring light. Tighten the locking knob.
- For camera use, directly attach your camera to the hot shoe adapter and mount it in the center of the ring light.

4. Connect Power:

- Plug the power adapter into the DC IN port on the back of the ring light's control panel.
- Plug the other end of the power adapter into a suitable power outlet.



Image 5.1: Illustration of the tripod's adjustable height range (31.5"-71") and the 360-degree rotation capability of the mounting head.

6. OPERATING INSTRUCTIONS

The Yesker Ring Light offers intuitive controls for adjusting light settings.

6.1. Control Panel Operation:

- **Power ON/OFF:** Use the power switch located on the control panel to turn the light on or off.
- **Brightness Adjustment:** Rotate the 'Brightness Dimming' knob (usually labeled with a light bulb icon or 'ON/OFF' and '+/-') to adjust the light intensity from 10% to 100%. The current brightness level will be displayed on the LCD screen.
- **Color Temperature Adjustment:** Rotate the 'Color Temperature Control' knob (usually labeled '3200K-5500K' or 'CT+/-') to change the color temperature from warm (3200K) to cool (5500K). The current color temperature will be displayed on the LCD screen.
- **USB Charging Port:** A 5V 2A USB output port is available on the control panel for charging your smartphone or other USB-powered devices while using the ring light.

6.2. Wireless Remote Control:

The included wireless remote provides convenient control over the ring light's functions from a distance.

- **Power Button (ON/OFF):** Turns the ring light on or off.
- **Brightness Up/Down:** Increases or decreases the light intensity.
- **Color Temperature Up/Down (CT+/CT-):** Adjusts the color temperature towards warmer (3200K) or cooler (5500K) tones.
- **Auxiliary Button:** Cycles through 5 preset lighting modes.
- **Section Button:** Provides fast setting adjustments.
- **Night Mode:** Activates a low-brightness setting suitable for night use.



Image 6.1: A comprehensive guide to the functions of the wireless remote control for the Yesker ring light.

6.3. Cell Phone Remote:

The small Bluetooth cell phone remote allows you to trigger your smartphone's camera for selfies or group photos without touching the phone.

- **Pairing:** Turn on the remote. On your smartphone, go to Bluetooth settings and select the remote to pair.
- **Usage:** Open your phone's camera app. Press the button on the remote to take a photo or start/stop video recording.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the ring light and stand. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the ring light and its components in the provided carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid bending or kinking the power cable excessively. Do not place heavy objects on the cable.

8. TROUBLESHOOTING

If you encounter issues with your Yesker Ring Light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Ring light does not turn on.	No power, loose connection, faulty adapter.	Ensure power adapter is securely plugged into the light and wall outlet. Test the outlet with another device. Check for damage to the power cable or adapter.
Wireless remote not working.	Low or no battery, remote out of range, interference.	Replace the battery in the remote. Ensure you are within effective range of the ring light. Reduce potential interference from other electronic devices.
Light flickers or dims unexpectedly.	Unstable power supply, loose connection, overheating.	Ensure a stable power source. Check all cable connections. Allow the light to cool down if it has been in continuous use for an extended period.
Tripod stand is unstable.	Legs not fully extended, locking knobs not tightened.	Fully extend the tripod legs and ensure they are spread wide. Tighten all locking knobs on the telescopic sections and the base securely.

9. SPECIFICATIONS

Feature	Detail
Product Dimensions	20.87 x 19.69 x 3.94 inches
Item Weight	5.83 pounds
Model Number	022
Brand	Yesker
Connectivity Technology	Bluetooth
Flash Modes Description	Adjustable brightness, adjustable color temperature
Hardware Interface	Bluetooth
Has Self-Timer	Yes
Color Temperature	3200K-5500K (Bi-Color)
CRI	≥95
Tripod Adjustable Height	31.5 inches to 71 inches

10. WARRANTY AND SUPPORT

Yesker products are manufactured with high-quality materials and undergo strict quality control. For information regarding warranty coverage, technical support, or service inquiries, please refer to the contact

information provided on the product packaging or the official Yesker website. Please retain your purchase receipt as proof of purchase for any warranty claims.

© 2024 Yesker. All rights reserved.