

Schloß GTO23

Schloß GTO23 24Qt Multifunctional Convection Air Fryer Toaster Oven

Model: GTO23 | **Brand:** Schloß

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in the oven.

- Do not place cardboard, plastic, paper, or similar materials in the oven.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- To avoid the possibility of a fire, do not leave the appliance unattended during operation.
- Do not operate under a cabinet. Ensure adequate clearance around the appliance.

PRODUCT OVERVIEW

The Schloß GTO23 is a versatile 24-quart multifunctional convection air fryer toaster oven designed for various cooking methods. It features intuitive controls for temperature, time, function, and toast darkness.



Image: Front view of the Schloß GTO23 oven with a chicken roasting inside, showcasing the control panel and interior.

Control Panel Description

MULTIFUNCTION AIR FRYER TOAST OVEN

7-in-1 preset functions including Warm, Broil or Broil(Convection), Toast, Bake or Bake(Convection) and Air Fryer, 3 Shades for Toast: Light, Med and Dark.

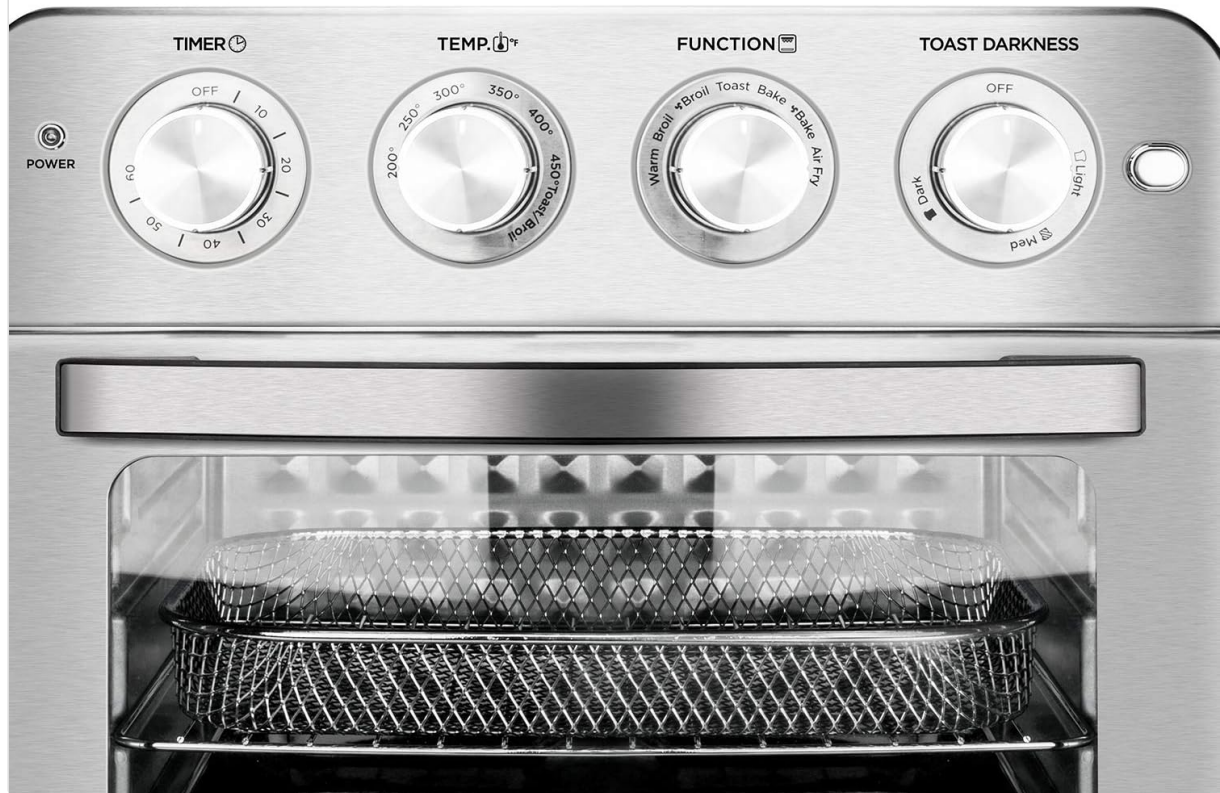


Image: Detailed view of the control panel, highlighting the Timer, Temperature, Function, and Toast Darkness knobs.

1. **Timer Knob:** Used to set the cooking duration from 0 to 60 minutes. Includes an "OFF" position.
2. **Temperature Knob:** Adjusts the cooking temperature from 200°F to 450°F.
3. **Function Knob:** Selects the cooking mode: Warm, Broil, Toast, Bake, Air Fry.
4. **Toast Darkness Knob:** For toasting, selects desired darkness: Light, Medium, Dark.
5. **Power Indicator Light:** Illuminates when the oven is in operation.

INCLUDED ACCESSORIES

The Schloß GTO23 comes with several accessories to enhance your cooking experience:

COME WITH 4 ACCESSORIES


Oven Rack

Size: 12.99" x 10.82"



Airfryer Basket

Size: 12.00" x 9.64"

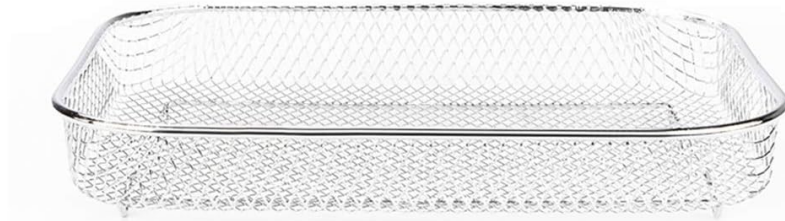

Baking Pan/Drip Pan

Size: 12.91" x 11.22"



Crumb Tray

Size: 12.83" x 11.53"



Image: A display of the four primary accessories included with the oven: an oven rack, an air fryer basket, a baking/drip pan, and a crumb tray.

- **Oven Rack:** For baking, roasting, and general oven use. Dimensions: 12.99" x 10.82".
- **Air Fryer Basket:** Designed for air frying, allowing hot air to circulate around food for crispy results. Dimensions: 12.00" x 9.64".
- **Baking/Drip Pan:** Used for baking, roasting, or catching drips from food cooked on the rack above. Dimensions: 12.91" x 11.22".
- **Crumb Tray:** Collects crumbs and drips at the bottom of the oven for easy cleaning. Dimensions: 12.83" x 11.53".

SETUP

1. **Unpacking:** Carefully remove the oven and all accessories from the packaging. Remove any packing materials, stickers, or labels.
2. **Placement:** Place the oven on a stable, heat-resistant, and level surface. Ensure there is at least 4-6 inches of clearance on all sides and above the oven for proper ventilation. Do not operate under a cabinet.
3. **Initial Cleaning:** Wipe down the exterior of the oven with a damp cloth. Wash all accessories (oven rack, air fryer basket, baking/drip pan, crumb tray) in warm, soapy water, rinse thoroughly, and dry completely.

4. **First Use Burn-Off:** Before cooking food, operate the oven empty for approximately 15 minutes at 400°F (200°C) on the "Bake" function. This will burn off any manufacturing residues and odors. A slight odor or smoke is normal during this process. Ensure the area is well-ventilated.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

Rack Positions

The oven features three rack positions for optimal cooking flexibility:



Image: Interior view of the oven highlighting the three distinct rack positions, numbered 1 (bottom), 2 (middle), and 3 (top).

- **Position 1 (Bottom):** Ideal for larger items, roasting, or when using the baking/drip pan to catch drippings.
- **Position 2 (Middle):** Suitable for most baking, toasting, and general cooking.
- **Position 3 (Top):** Best for broiling, quick toasting, or when a crispier top is desired.

OPERATING INSTRUCTIONS

Follow these steps for general operation and specific cooking functions.

General Operation

1. Place food on the appropriate accessory (oven rack, air fryer basket, or baking pan).
2. Insert the accessory into the desired rack position.
3. Close the oven door.
4. Turn the **Function Knob** to select the desired cooking mode (e.g., Air Fry, Bake, Broil).
5. Turn the **Temperature Knob** to set the desired temperature.
6. Turn the **Timer Knob** to set the desired cooking time. The power indicator light will illuminate.
7. The oven will automatically turn off when the timer reaches zero, and a bell will sound.
8. Carefully remove cooked food using oven mitts.

Specific Functions

Air Fry

This function uses rapid hot air circulation to cook food with a crispy exterior and tender interior, often with little to no oil.

- Use the Air Fryer Basket, typically placed on rack position 2 or 3.
- Set the **Function Knob** to "Air Fry".
- Adjust **Temperature Knob** and **Timer Knob** according to recipe or food type.
- For best results, shake or flip food halfway through cooking.

Bake

Ideal for cakes, cookies, casseroles, and other items requiring even heat distribution.



Image: A large pizza being baked inside the oven, demonstrating the oven's capacity for baking.

- Use the Oven Rack or Baking Pan, typically on rack position 1 or 2.
- Set the **Function Knob** to "Bake".
- Adjust **Temperature Knob** and **Timer Knob** as needed.

Broil

Uses direct top heat for quick cooking, browning, or melting cheese.

- Use the Oven Rack on rack position 3 for best results. Place the Baking/Drip Pan on position 1 to catch drippings.
- Set the **Function Knob** to "Broil".
- The temperature is typically fixed at maximum for broiling. Adjust **Timer Knob** carefully, as broiling is very fast.
- Monitor food closely to prevent burning.

Toast

For toasting bread, bagels, and waffles.



Image: Six slices of bread toasting evenly on the oven rack, demonstrating the toaster function.

- Place bread directly on the Oven Rack, typically on rack position 2 or 3.
- Set the **Function Knob** to "Toast".
- Use the **Toast Darkness Knob** to select desired shade (Light, Medium, Dark).
- The timer will automatically adjust based on darkness selection.

Warm

Keeps cooked food warm without further cooking.

- Set the **Function Knob** to "Warm".
- Set the **Timer Knob** for the desired warming duration.

Dehydrate / Reheat (Implied from product description)

While not a direct knob setting, the oven's capabilities suggest it can perform these functions. For dehydrating, use a low temperature (e.g., 150-200°F) for extended periods. For reheating, use the Bake or Air Fry function at a moderate temperature (e.g., 300-350°F) until food is heated through.

COOKING GUIDELINES

Cooking times and temperatures are approximate and may vary based on food quantity, starting temperature, and desired doneness. Always use a food thermometer to ensure food is cooked to safe internal temperatures.

- **Preheating:** For best results, especially with baking and air frying, preheat the oven for 5-10 minutes at the desired temperature before adding food.
- **Even Cooking:** For larger batches or thicker foods, consider rotating or flipping food halfway through cooking to ensure even results.
- **Oil Usage:** When air frying, a small amount of oil (1-2 teaspoons) can enhance crispiness, but is often not required.
- **Crowding:** Avoid overcrowding the air fryer basket or oven rack, as this can hinder air circulation and lead to uneven cooking. Cook in batches if necessary.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance. Always unplug the oven and allow it to cool completely before cleaning.

- **Exterior:** Wipe the exterior with a damp cloth and mild soap. Do not use abrasive cleaners or metal scouring pads.
- **Interior:** Wipe the interior walls with a damp cloth and mild soap. For stubborn stains, a non-abrasive cleaner designed for oven interiors can be used. Ensure all cleaner residue is removed.
- **Crumb Tray:** Remove the crumb tray from the bottom of the oven. Discard crumbs and wash the tray in warm, soapy water. Rinse and dry thoroughly before returning it to the oven.
- **Accessories:** The oven rack, air fryer basket, and baking/drip pan should be hand washed in warm, soapy water. Rinse well and dry completely. These accessories are not dishwasher safe.
- **Heating Elements:** Do not attempt to clean the heating elements. If food particles are on the elements, they will burn off during operation.

TROUBLESHOOTING

If you encounter issues with your Schloß GTO23 oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the power cord is securely plugged into a working outlet. Turn the Timer Knob past the "OFF" position to activate.
Food is not cooking evenly.	Oven overcrowded; incorrect rack position; food not flipped/shaken.	Avoid overcrowding. Use appropriate rack position. Flip or shake food halfway through cooking.
Excessive smoke during cooking.	Food residue on heating elements; fatty foods; crumb tray not cleaned.	Clean the crumb tray regularly. Ensure food is not directly touching heating elements. Reduce fat content if possible.
Toast is too light or too dark.	Incorrect Toast Darkness setting.	Adjust the Toast Darkness Knob to a lighter or darker setting as desired for future use.
Oven makes unusual noises.	Normal expansion/contraction of metal; fan noise during convection.	Some noises are normal during operation. If the noise is loud or persistent, discontinue use and contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	GTO23
Brand	Schloß
Capacity	24 Quarts (23 Liters)
Power Output	1700 Watts
Voltage	120V
Temperature Range	200°F - 450°F
Timer Range	0 - 60 minutes
Control Method	Knobs
Material	Stainless Steel
Product Dimensions (L x W x H)	15.15 x 16.14 x 14.76 inches
Item Weight	18.9 Pounds
UPC	850010510903



Image: Visual representation of the oven's dimensions, indicating a depth of 12.20", width of 16.14", and height of 14.76".

WARRANTY AND SUPPORT

The Schloß GTO23 Air Fryer Toaster Oven comes with a 1-year assurance (warranty). For warranty claims, technical support, or any product-related inquiries, please contact Schloß customer service.

Please refer to your purchase documentation or the manufacturer's website for the most up-to-date contact information and detailed warranty terms and conditions.