

[Manuals.plus](#) /

> [Schloß](#) /

> Schloß GTO23 Toaster Oven, Multifunctional Convection Airfryer, Rotisserie, 7 Presets Fry, Roast, Broil, Bake, Dehydrate, Reheat, Cooking Accessories Included, 1700W, 24Qt, Stainless steel 24Qt Stainless Steel

Schloß SGTO23

Schloß GTO23 Multifunctional Convection Airfryer Toaster Oven

Model: SGTO23

Brand: Schloß

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.

- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any combustible materials such as paper, cardboard, plastic, etc. on the oven.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

PRODUCT OVERVIEW

The Schloß GTO23 is a versatile 24-quart convection air fryer toaster oven designed for a wide range of cooking tasks. It features 1700W of power and utilizes 360° hot air circulation for efficient and even cooking. This appliance combines the functions of an air fryer, rotisserie, grill, and toaster oven, offering 7 preset modes for convenience.

Main Unit and Controls



Image: Front view of the Schloß GTO23 Toaster Oven, showcasing its control panel and a roasted chicken cooking inside the main compartment. The control panel includes knobs for Timer, Temperature, Function, and Toast Darkness.

MULTIFUNCTION AIR FRYER TOAST OVEN

7-in-1 preset functions including Warm, Broil or Broil(Convection), Toast, Bake or Bake(Convection) and Air Fryer, 3 Shades for Toast: Light, Med and Dark.

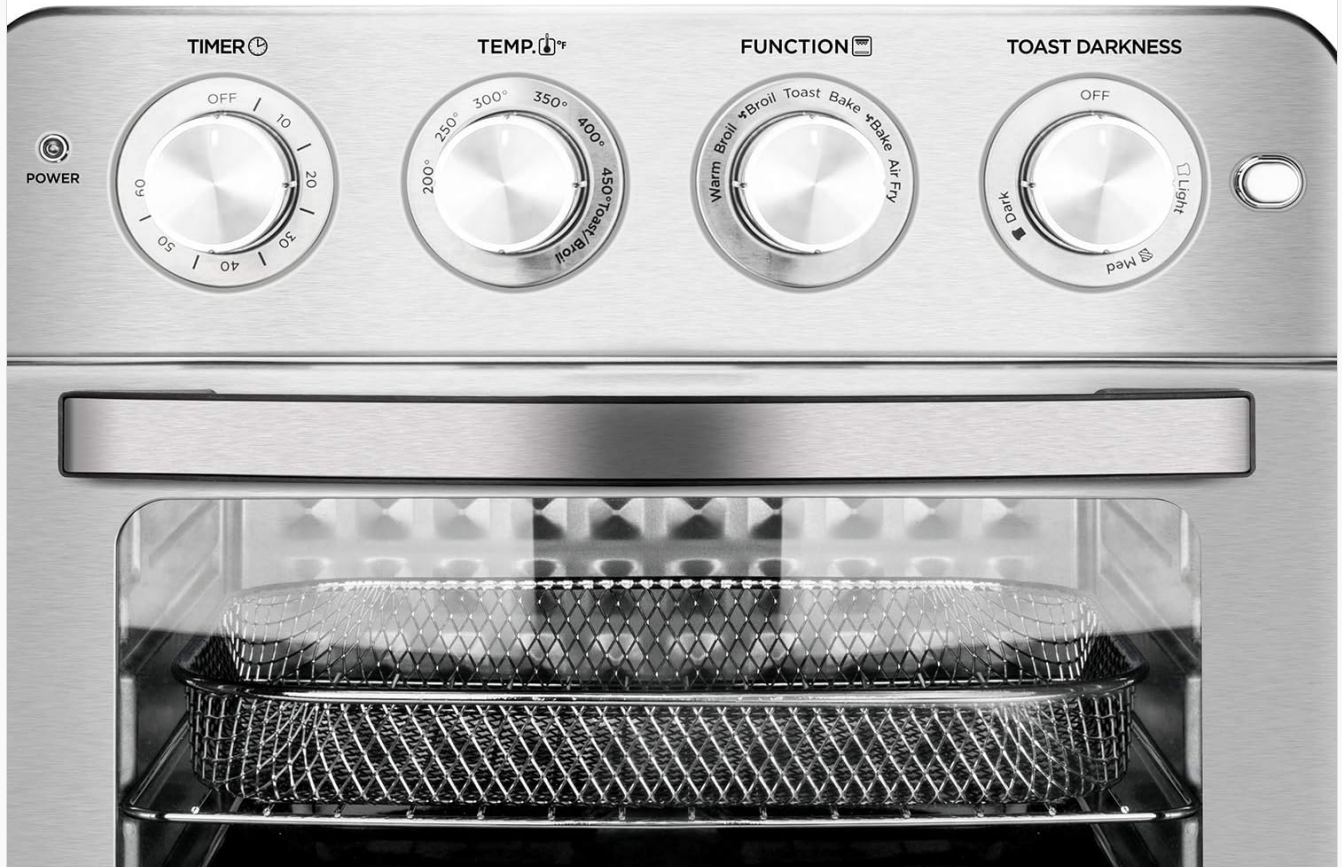


Image: Close-up of the control panel highlighting the various functions: Warm, Broil, Toast, Bake, and Air Fry. It also shows the Timer, Temperature, and Toast Darkness dials.

- **Timer Dial:** Sets cooking time from 0 to 60 minutes. Includes an "OFF" position.
- **Temperature Dial:** Adjusts cooking temperature from 200°F to 450°F.
- **Function Dial:** Selects cooking mode: Warm, Broil (Convection), Toast, Bake (Convection), Air Fry.
- **Toast Darkness Dial:** For toasting, selects light, medium, or dark toast.
- **Power Indicator Light:** Illuminates when the oven is in operation.

Included Accessories

COME WITH 4 ACCESSORIES


Oven Rack

Size: 12.99" x 10.82"



Airfryer Basket

Size: 12.00" x 9.64"

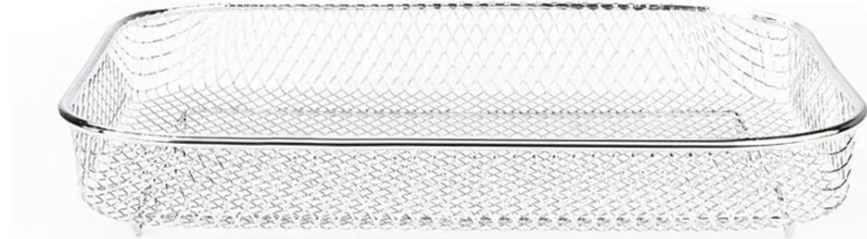

Baking Pan/Drip Pan

Size: 12.91" x 11.22"



Crumb Tray

Size: 12.83" x 11.53"



Image: A display of the four main accessories included with the oven: an oven rack, an air fryer basket, a baking/drip pan, and a crumb tray, with their respective dimensions.

- **Oven Rack:** For baking, roasting, and general oven use. Dimensions: 12.99" x 10.82".
- **Air Fryer Basket:** Designed for air frying, allowing 360° air circulation around food. Dimensions: 12.00" x 9.64".
- **Baking/Drip Pan:** Used for baking, roasting, or as a drip pan to catch crumbs and drippings. Dimensions: 12.91" x 11.22".
- **Crumb Tray:** Collects crumbs and small food particles for easy cleaning. Dimensions: 12.83" x 11.53".

SETUP AND FIRST USE

Unpacking

Carefully remove the oven and all accessories from the packaging. Remove any packing materials, stickers, or protective films from the unit and accessories. Keep packaging for future storage or transport if needed.

Placement



Image: The Schloß GTO23 Toaster Oven with its dimensions clearly marked: 12.20 inches (width), 16.14 inches (depth), and 14.76 inches (height). A casserole dish is shown inside the oven.

- Place the oven on a stable, level, heat-resistant surface.
- Ensure there is at least 4 inches (10 cm) of clearance on all sides of the oven for proper ventilation. Do not place the oven directly against a wall or under cabinets.
- Do not place the oven on a stovetop or near any heat sources.

Initial Cleaning

Before first use, wipe the interior and exterior of the oven with a damp cloth. Wash all accessories (oven rack, air fryer basket, baking/drip pan, crumb tray) with warm, soapy water. Rinse thoroughly and dry completely.

First Use (Burn-Off)

It is recommended to run the oven empty for approximately 15 minutes before cooking food for the first time. This helps to burn off any manufacturing residues and odors.

1. Plug the oven into a grounded electrical outlet.
2. Set the Function dial to "Bake".
3. Set the Temperature dial to 450°F (230°C).
4. Set the Timer dial to 15 minutes.
5. A slight odor or smoke may be present during this initial operation; this is normal and will dissipate. Ensure the area is well-ventilated.

6. Once the timer rings, turn all dials to "OFF" and unplug the oven. Allow it to cool completely before proceeding.

OPERATING INSTRUCTIONS

This section details how to use the various functions of your Schloß GTO23 oven.

General Operation

1. Place food on the appropriate accessory (oven rack, air fryer basket, or baking pan).
2. Insert the accessory into the desired rack position.
3. Close the oven door.
4. Plug the oven into a grounded electrical outlet.
5. Select the desired function using the Function dial.
6. Set the desired temperature using the Temperature dial.
7. Set the desired cooking time using the Timer dial. The power indicator light will illuminate.
8. When cooking is complete, the timer will ring and the oven will automatically turn off.
9. Carefully remove food using oven mitts.

Rack Positions



Image: Interior view of the oven with the door open, indicating three distinct rack positions (Position 1, Position 2, Position 3) for versatile cooking.

- **Position 1 (Bottom):** Ideal for baking larger items, roasting, or when using the drip pan.
- **Position 2 (Middle):** Recommended for most baking, air frying, and general cooking.
- **Position 3 (Top):** Best for broiling, toasting, or when you need food closer to the top heating elements.

Specific Functions

Toast Function



Image: Six slices of bread being toasted on the oven rack inside the Schloß GTO23 Toaster Oven, demonstrating its capacity for toast. Use the Toast function for bread, bagels, and frozen waffles. Place items on the oven rack in Position 3. Use the Toast Darkness dial to select your preferred shade (Light, Med, Dark). The timer will automatically adjust based on the darkness setting.

Bake Function (Convection)



Image: A large pizza baking on the oven rack inside the Schloß GTO23 Toaster Oven, illustrating its capacity for baking larger items. Ideal for cakes, cookies, casseroles, and roasting meats. The convection feature circulates hot air for faster and more even cooking. Use the oven rack or baking pan, typically in Position 1 or 2 depending on food size.

Air Fry Function

Perfect for crispy foods like french fries, chicken wings, and vegetables with little to no oil. Place food in the air fryer basket. For best results, do not overcrowd the basket. Use Position 2 for most air frying tasks.

Broil Function (Convection)

Use for browning, melting cheese, or cooking thin cuts of meat. Place food on the oven rack or baking pan in Position 3, close to the top heating elements. Monitor food closely to prevent burning.

Warm Function

Keeps cooked food warm without further cooking. Use the oven rack or baking pan in any position.

Rotisserie Function

The oven supports rotisserie cooking for whole chickens or roasts. Refer to the specific rotisserie accessory instructions for assembly and use. Ensure food does not exceed the recommended weight limit (typically around 2.7 lbs for a whole chicken) and is securely fastened to the spit to prevent imbalance during rotation.

MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and longevity of your Schloß GTO23 oven.

1. **Always unplug the oven** and allow it to cool completely before cleaning.
2. **Crumb Tray:** Slide out the crumb tray from the bottom of the oven. Discard crumbs. Wipe the tray with a damp cloth and dry thoroughly. Reinsert the tray. Clean regularly to prevent grease buildup and potential fire hazards.
3. **Interior:** Wipe the interior walls, bottom, and glass door with a damp cloth and mild, non-abrasive detergent. For stubborn stains, a non-abrasive liquid cleaner or spray may be used. Do not use steel wool pads or abrasive cleaners.
4. **Exterior:** Wipe the exterior surfaces with a damp cloth. Dry thoroughly. Do not use abrasive cleaners or polishes that may scratch the stainless steel finish.
5. **Accessories:** The oven rack, air fryer basket, and baking/drip pan can be washed in warm, soapy water. Rinse and dry thoroughly. Some users report these accessories are dishwasher safe, but hand washing is recommended to prolong their lifespan and finish.
6. **Do not immerse the main unit** in water or any other liquid.

TROUBLESHOOTING

If you encounter issues with your oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet issue; timer not set.	Ensure the oven is securely plugged into a working outlet. Set the Timer dial to the desired cooking time.
Food is not cooking evenly.	Overcrowding; incorrect rack position; uneven food placement.	Do not overcrowd the oven or basket. Use the recommended rack position for the function. Flip or rotate food halfway through cooking for even results.
Smoke or unusual odor during operation.	Food residue; initial burn-off; excessive grease.	For first use, this is normal. For subsequent uses, clean the interior and crumb tray thoroughly. Reduce oil/fat in food. Ensure proper ventilation. If smoke persists, unplug and contact support.
Timer does not advance or oven stays on.	Timer mechanism issue.	Ensure the timer is wound past the 10-minute mark before setting the desired time. If the issue persists, unplug the unit and contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Schloß
Model Number	SGTO23
Colour	Stainless Steel
Product Dimensions (L x W x H)	38.48 x 41 x 37.49 cm (15.15 x 16.14 x 14.76 inches)
Capacity	24 Quarts (23 Liters)
Power/Wattage	1700 watts
Voltage	120V
Material	Stainless Steel
Special Features	Manual controls, Convection, Air Fry, Rotisserie
Item Weight	8.57 kg (18.9 lbs)
Recommended Uses	Roast, Broil, Bake, Reheat, Dehydrate, Fry

WARRANTY AND SUPPORT

The Schloß GTO23 Toaster Oven comes with a 1-year assurance from the date of purchase. This warranty covers defects in material and workmanship under normal household use.

For warranty claims, technical support, or inquiries regarding replacement parts, please contact Schloß customer service. Keep your proof of purchase for warranty validation.

Note: The manufacturer's contact information is typically found on the product packaging or official brand website. Please refer to those sources for the most up-to-date contact details.

OFFICIAL PRODUCT VIDEOS

There are no official product videos from the seller available for embedding at this time.

© 2023 Schloß. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.