

[Manuals.plus](#) /

› [Koblenz](#) /

› Koblenz LKM-8510 EVR Easy Touch Blender User Manual

## Koblenz LKM-8510 EVR

# Koblenz LKM-8510 EVR Easy Touch Blender User Manual

Model: LKM-8510 EVR

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the blender.
- To protect against electrical shock, do not immerse the motor base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended household use.
- Always operate the blender with the lid in place.
- Blades are sharp. Handle with care.
- Do not process hot liquids in the blender.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

## PRODUCT OVERVIEW

The Koblenz LKM-8510 EVR Easy Touch Blender is designed for efficient blending tasks. Familiarize yourself with its components before use.





Figure 1: Exploded view of the Koblenz LKM-8510 EVR Blender components.

## Components:

- **Motor Base:** Contains the 1000-watt motor and control panel.
- **Glass Jar:** 1.5-liter capacity with measurement indicators.
- **Blade Assembly:** Features 4 stainless steel blades for efficient blending.
- **Lid:** Secures the jar during operation.
- **Measuring Cup:** Small removable cup integrated into the lid for adding ingredients during blending.

## SETUP AND ASSEMBLY

Follow these steps to properly assemble your blender before first use.

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Clean:** Before first use, wash the glass jar, lid, and measuring cup in warm, soapy water. Rinse thoroughly and dry. Wipe the motor base with a damp cloth. *Do not immerse the motor base in water.*
3. **Assemble Jar:** Ensure the blade assembly is securely attached to the bottom of the glass jar.
4. **Place Jar on Base:** Place the assembled glass jar onto the motor base. Ensure it is seated firmly and correctly aligned.
5. **Secure Lid:** Place the lid onto the glass jar and twist or press down to secure it. Insert the measuring cup into the opening in the lid.
6. **Connect Power:** Plug the power cord into a standard 120V electrical outlet.





Figure 2: Fully assembled Koblenz LKM-8510 EVR Blender.

## OPERATING INSTRUCTIONS

This section details how to use your Koblenz LKM-8510 EVR Blender for various blending tasks.

- 1. Prepare Ingredients:** Cut solid ingredients into small pieces (approximately 1-inch cubes) before placing them into the blender jar. Always add liquids first, then soft ingredients, then hard ingredients, and finally ice. Do not overfill the jar beyond the maximum fill line.
- 2. Secure Lid:** Ensure the lid is securely in place on the jar, and the measuring cup is inserted into the lid opening.
- 3. Select Speed:** The blender features 10 speeds and a pulse function.
  - o For continuous blending, select a desired speed (1-10) using the control panel buttons.
  - o For short bursts of power, press and hold the **PULSE** button. Release to stop. This is ideal for chopping or breaking down larger pieces.
- 4. Start Blending:** Press the desired speed button or the PULSE button to begin blending.
- 5. Add Ingredients During Blending:** If additional ingredients need to be added during blending, remove the measuring cup from the lid and carefully drop ingredients through the opening. Replace the measuring cup immediately.
- 6. Stop Blending:** Press the **OFF** button or release the PULSE button to stop the blender.
- 7. Remove Jar:** Once blending is complete, unplug the blender from the outlet. Carefully remove the jar from the motor base.

#### Tips for Best Results:

- For thicker mixtures, use the pulse function to help move ingredients towards the blades.
- Do not run the blender continuously for more than 1 minute to prevent overheating. Allow it to rest for a few minutes between cycles.
- Never blend hot liquids as pressure buildup can cause the lid to dislodge and result in injury.

## CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your blender.

- 1. Unplug:** Always unplug the blender from the power outlet before cleaning.
- 2. Disassemble:** Remove the jar from the motor base. Carefully detach the blade assembly from the bottom of the jar. Remove the lid and measuring cup.
- 3. Wash Components:** Wash the glass jar, lid, and measuring cup in warm, soapy water. Rinse thoroughly. The manufacturer states the item is *not dishwasher safe*.
- 4. Clean Blades:** Exercise extreme caution when cleaning the stainless steel blades as they are very sharp. Use a brush to clean around the blades if necessary.
- 5. Clean Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
- 6. Dry and Store:** Ensure all parts are completely dry before reassembling or storing the blender. Store in a dry place.

## TROUBLESHOOTING

If you encounter issues with your blender, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outlet not working; jar not correctly seated on base.	Ensure the power cord is securely plugged into a working outlet. Check that the jar is properly aligned and locked onto the motor base.
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients are too large.	Add more liquid. Reduce the amount of ingredients. Cut solid ingredients into smaller pieces. Use the pulse function to break down larger chunks.
Blender stops during operation.	Overheating due to continuous use or overloading.	Unplug the blender and allow it to cool down for at least 15-20 minutes. Reduce the load or blending time.

Problem	Possible Cause	Solution
Loud noise or unusual odor.	Foreign object in jar; motor strain; internal malfunction.	Immediately unplug the blender. Check the jar for any foreign objects. If the issue persists after removing any obstructions, discontinue use and contact customer support.

If the problem persists after trying these solutions, please contact Koblenz customer support.

## SPECIFICATIONS

Model:	LKM-8510 EVR
Brand:	Koblenz
Capacity:	1.5 Liters
Motor Wattage:	1000 Watts
Number of Speeds:	10 + Pulse
Voltage:	120V
Blade Material:	Stainless Steel (4 blades)
Jar Material:	Glass
Item Weight:	3.1 Kilograms
Dishwasher Safe:	No

## WARRANTY INFORMATION

The Koblenz LKM-8510 EVR Easy Touch Blender comes with a **2-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use. It does not cover damage resulting from misuse, abuse, accident, alteration, lack of proper care, or normal wear and tear. For warranty service, please retain your proof of purchase.

## CUSTOMER SUPPORT

For technical assistance, warranty claims, or general inquiries regarding your Koblenz LKM-8510 EVR Easy Touch Blender, please contact Koblenz customer service.

Please refer to the official Koblenz website or your product packaging for the most current contact information, including phone numbers and email addresses.

**Online Resources:** [Visit the Koblenz Store on Amazon](#)