

[manuals.plus](#) /› [Brookstone](#) /› **Brookstone PhotoShare 8" Smart Digital Picture Frame User Manual****Brookstone FSM08BLB**

Brookstone PhotoShare 8" Smart Digital Picture Frame User Manual

Model: FSM08BLB | Brand: Brookstone

INTRODUCTION

The Brookstone PhotoShare 8" Smart Digital Picture Frame is designed to bring your cherished memories to life, displaying photos and video clips with stunning clarity. With its intuitive Wi-Fi connectivity and easy-to-use PhotoShare Frame App, sharing moments with loved ones has never been simpler. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your digital picture frame.



Front view of the Brookstone PhotoShare 8-inch Smart Digital Picture Frame, showcasing a vibrant family photo on its display.

SETUP GUIDE

1. Unboxing and Power Connection

- Carefully remove the digital picture frame and all accessories from the packaging.
- Connect the power adapter to the DC Power Port on the back of the frame.
- Plug the power adapter into a standard electrical outlet. The frame will automatically power on.

2. Installing the PhotoShare Frame App

- On your smartphone or tablet (iOS or Android), open the App Store or Google Play Store.
- Search for "PhotoShare Frame App" and download the official application.
- Install the app and create an account if you are a new user, or log in with your existing credentials.

3. Connecting to Wi-Fi

- On the frame's touchscreen, follow the on-screen prompts to select your Wi-Fi network.
- Enter your Wi-Fi password using the on-screen keyboard.
- Once connected, the frame will display a confirmation message.

4. Initial Frame Setup

- Follow the remaining on-screen instructions to complete the initial setup, including setting the time zone and display preferences.
- Your frame is now ready to receive photos and videos.



Side view of the frame, indicating the various ports for connectivity and the integrated stand.

OPERATING INSTRUCTIONS

1. Sending Photos and Videos to Your Frame

The PhotoShare frame supports multiple methods for sending content:

- **Via PhotoShare Frame App:** Open the app, select up to 50 photos or video clips from your device, choose the recipient frame(s), and tap 'Send'.
- **Via Email:** Each frame has a unique email address. Attach photos/videos to an email and send them to the frame's address.
- **From PC:** Use the PhotoShare website to upload photos directly from your computer.
- **Google Photos/Facebook:** Link your accounts within the app to easily share content from these platforms.

Snap



Tap



Share



Parent's



Friend's



Grandparent's

The simple 'Snap, Tap, Share' workflow for transferring images from your mobile device to the PhotoShare frame.

2. Managing Content on the Frame

- Touchscreen Navigation:** Swipe left or right to browse through photos. Tap the screen to reveal options like pausing the slideshow, deleting photos, or accessing settings.
- Slideshow Settings:** Customize the slideshow interval, transition effects, and display order through the frame's settings menu.
- Adding Captions:** Photos sent via the app can include captions, which will display on the frame.

3. Additional Features

- Weather Display:** Enable the weather feature to show current weather conditions for your location.
- Clock & Calendar:** The frame can display the current time and date, or a full calendar view.
- No Subscriptions:** Enjoy all features without any recurring fees.



Wifi



Photos & Videos



Captions



Weather



No Subscriptions



Clock & Calendar

The PhotoShare frame displaying a photo, surrounded by icons representing its key features.

MAINTENANCE

1. Cleaning the Screen

- Always power off and unplug the frame before cleaning.
- Use a soft, lint-free cloth (e.g., microfiber cloth) to gently wipe the screen.
- For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaning solution. Do not spray liquid directly onto the screen.

2. General Care

- Avoid placing the frame in direct sunlight or near heat sources, as this can damage the display.
- Keep the frame away from excessive moisture or humidity.
- Ensure the frame is placed on a stable, flat surface to prevent accidental falls.

TROUBLESHOOTING

Common Issues and Solutions:

- **Frame Not Powering On:** Ensure the power adapter is securely connected to both the frame and a working electrical outlet. Try a different outlet.
- **No Wi-Fi Connection:** Check if your Wi-Fi router is on and functioning. Re-enter your Wi-Fi password on the frame. Ensure the frame is within range of your Wi-Fi signal.
- **Photos Not Appearing:** Verify that photos were successfully sent from the app/email. Check your internet connection. Ensure the frame has sufficient storage space.
- **Touchscreen Unresponsive:** Restart the frame by unplugging it for 10 seconds and plugging it back in. Clean the screen for any debris.
- **App Issues:** Ensure your PhotoShare Frame App is updated to the latest version. Try reinstalling the app on your mobile device.

For more detailed troubleshooting or specific error messages, please refer to the official user guide PDF available online or contact Brookstone customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	13.3 x 9.5 x 2.2 inches
Item Weight	2.42 pounds
Item Model Number	FSM08BLB
Brand	Brookstone
Color	Black
Resolution	1080p
Compatible Devices	iPhone, Android
Screen Size	8 Inches

WARRANTY AND SUPPORT

Brookstone products are designed for quality and reliability. Your PhotoShare Digital Picture Frame comes with a standard manufacturer's warranty covering defects in materials and workmanship. Please refer to the warranty information included with your product packaging for specific terms and conditions.

For technical support, customer service, or to access the full user guide, please visit the official Brookstone support website or refer to the PDF user guide:

[Download Official User Guide \(PDF\)](#)

If you require further assistance, please contact Brookstone customer support directly.

Related Documents - FSM08BLB

 <p>Brookstone 8" Digital Picture Show DIGITAL PICTURES-PLUS MUSIC AND VIDEOS</p>	<p><u>Brookstone 8" Digital Picture Show User Manual</u> Comprehensive user manual for the Brookstone 8" Digital Picture Show, detailing setup, operation, features, and troubleshooting for displaying photos, music, and videos.</p>
 <p>Brookstone 10" Digital Picture Show DIGITAL PICTURES-PLUS MUSIC AND VIDEOS</p>	<p><u>Brookstone 10" Digital Picture Show User Manual</u> User manual for the Brookstone 10" Digital Picture Show. Learn how to set up, display photos, play videos and music, and troubleshoot this digital picture frame.</p>
 <p>Brookstone my life 8" digital picture show</p>	<p><u>Brookstone my life 8" Digital Picture Show User Manual</u> User manual for the Brookstone my life 8-inch digital picture show, covering setup, operation, troubleshooting, specifications, and warranty information.</p>
 <p>Brookstone Security WIFI Camera USERMANUAL</p>	<p><u>Brookstone Security WiFi Camera User Manual - BKWIFICAMWL2</u> Comprehensive user manual for the Brookstone Security WiFi Camera (Model BKWIFICAMWL2), covering setup, features like motion detection, two-way audio, adjustable lens, and app functions for remote monitoring and cloud storage.</p>
 <p>Brookstone e5 Wood & Aluminum Earphones with Mic</p>	<p><u>Brookstone e5 Wood & Aluminum Earphones with Mic User Manual</u> User guide for Brookstone e5 Wood & Aluminum Earphones with Mic, detailing features, specifications, usage instructions, safety warnings, and warranty information.</p>
	<p><u>Brookstone 313181 Hand Massager: User Manual, Safety, and Operation Guide</u> Official user manual and safety guide for the Brookstone 313181 Hand Massager. Learn about safe operation, maintenance, product specifications, and warranty details for this personal relaxation device.</p>