

SURKER SK-755

SURKER SK-755 Cordless Hair Clipper User Manual

Model: SK-755

1. INTRODUCTION

Thank you for choosing the SURKER SK-755 Cordless Hair Clipper. This professional grooming tool is designed for precise hair and beard trimming, offering convenience and versatility. Please read this manual thoroughly before first use to ensure safe and effective operation.

Package Contents:

- 1 x SURKER SK-755 Hair Clipper
- 1 x USB Charging Cable
- 4 x Guide Combs (1mm, 2mm, 3mm, 4mm)
- 1 x Cleaning Brush
- 1 x User Manual

2. SAFETY INFORMATION

To reduce the risk of electric shock, injury, or damage, always follow these basic safety precautions:

- **Do not use near water:** Never operate the appliance near bathtubs, showers, basins, or other vessels containing water.
- **Avoid use during charging:** Do not use the clipper while it is connected to the charger.
- **Sharp blades:** Handle the blades with caution to prevent injuries.
- **Children and pets:** Keep the appliance out of reach of children and pets.
- **Proper cleaning:** Regularly clean and maintain the blades to ensure safe and hygienic operation.
- **Power source:** Only use the provided USB charging cable. Ensure the power adapter (not included) meets local safety standards.
- **Damage inspection:** Do not use the clipper if it is damaged, dropped, or if the charging cable is frayed. Contact customer support for assistance.

3. PRODUCT OVERVIEW

The SURKER SK-755 features a durable design with advanced cutting technology for a smooth grooming experience.

Key Features:

- **Precision Stainless Steel Blades:** Designed for sharp, close cuts without pulling hair.
- **LED Display:** Shows battery capacity and charging status.
- **Ergonomic Design:** Streamlined body with a non-slip grip for comfortable handling.
- **Cordless Operation:** Rechargeable battery provides up to 2 hours of runtime.
- **Multiple Charging Ports:** Offers flexibility for charging.



Figure 1: Overview of the SURKER SK-755 Hair Clipper's main features, highlighting the removable stainless steel blade, LED display for battery status, ergonomic round switch, non-slip texture, and dual charging port options.

SMALL AND EXQUISITE BODY



Length: 6.69 inch
Width: 1.57 inch

Figure 2: The SURKER SK-755 Hair Clipper held in an average-sized hand, illustrating its compact and ergonomic body, measuring approximately 6.69 inches in length and 1.57 inches in width.

4. SETUP

4.1 Charging the Clipper

1. Ensure the clipper is switched off before charging.
2. Connect the USB charging cable to the charging port on the clipper.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, wall adapter).
4. The LED display will indicate the charging status. A full charge takes approximately 2.5 hours and provides up to 2 hours of cordless operation.

4.2 Attaching Guide Combs

The clipper comes with 4 guide combs (1mm, 2mm, 3mm, 4mm) to achieve different hair lengths.

1. Select the desired guide comb.

2. Align the comb with the clipper blade and push it firmly until it clicks into place.
3. To remove, gently pull the comb away from the blade.



Figure 3: The SURKER SK-755 Hair Clipper demonstrating its replaceable guide combs, available in 1mm, 2mm, 3mm, and 4mm lengths, allowing users to achieve various hairstyles and hair lengths.

5. OPERATING INSTRUCTIONS

5.1 General Hair Trimming

1. Ensure hair is clean and dry before trimming.
2. Attach the desired guide comb for the desired hair length.
3. Turn on the clipper using the power switch.
4. Hold the clipper with the blade flat against the hair and move it slowly against the direction of hair growth.
5. For an even cut, use consistent pressure and speed.



Figure 4: A professional barber utilizing the SURKER SK-755 Hair Clipper to precisely trim a client's hair, demonstrating its use in a salon setting.

5.2 Precision Trimming and Edging

For detailed work, such as outlining, edging, or creating designs, remove the guide comb.

1. Carefully remove the guide comb.
2. Hold the clipper at a slight angle, using only the edge of the blade for precise lines.
3. Move the clipper slowly and deliberately to create desired shapes and edges.



DESIGNED FOR HAIR ART CARVING

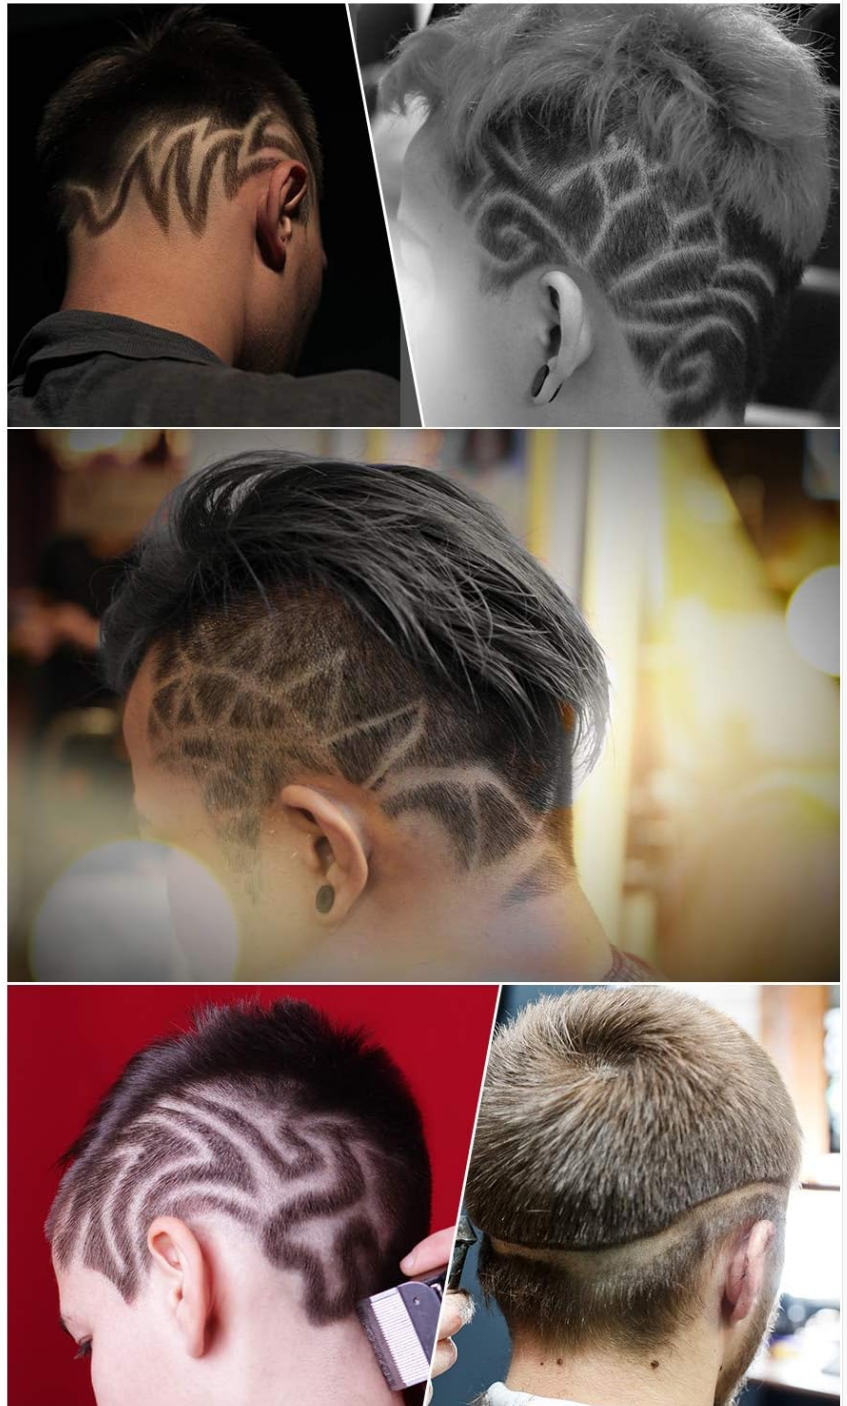


Figure 5: The SURKER SK-755 Hair Clipper being used for intricate hair art carving, showcasing its capability for detailed designs and precision work on various hairstyles.

6. MAINTENANCE

6.1 Cleaning the Blades

Regular cleaning ensures optimal performance and hygiene.

1. Turn off the clipper and disconnect it from any power source.
2. Remove the guide comb.
3. To remove the cutter head: Push with two thumb fingers to take off the cutting blade. (Refer to Figure 6).
4. Use the provided cleaning brush to remove loose hairs from the blades and the clipper body.
5. The blades are water-resistant. You can rinse the detached blade under running water. Ensure the blade is completely

dry before reattaching. Do not immerse the entire clipper body in water.

6. Reattach the cutter head by aligning it and pushing until it clicks into place.

Water-resistant blade for easy cleaning

HOW TO REMOVE THE CUTTER HEAD



Figure 6: Detailed instructions on how to clean the water-resistant blade and remove the cutter head of the SURKER SK-755 Hair Clipper for thorough maintenance.

6.2 Blade Lubrication (Optional)

For prolonged blade life and smooth operation, apply a small drop of clipper oil (not included) to the blades after every few uses, especially after rinsing with water. Turn on the clipper for a few seconds to distribute the oil.

6.3 Storage

Store the clipper in a cool, dry place, away from direct sunlight and moisture. Ensure the clipper is clean and dry before storing.

7. TROUBLESHOOTING

If you encounter issues with your SURKER SK-755 Hair Clipper, refer to the following common problems and solutions:

- **Clipper not turning on:**
 - Ensure the battery is charged. Check the LED display for battery level.
 - Verify the power switch is fully engaged.
- **Poor cutting performance or pulling hair:**
 - Clean the blades thoroughly to remove any trapped hair or debris.
 - Ensure the blades are properly lubricated.
 - The blades may be dull. Consider replacing the blade assembly if available, or contact customer support.
- **Battery not charging:**
 - Check if the USB charging cable is securely connected to both the clipper and the power source.
 - Try a different USB power adapter or port.
 - Ensure the charging cable is not damaged.
- **Excessive noise or vibration:**
 - Ensure the blade assembly is correctly attached and secured.
 - Clean and lubricate the blades.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model Number	SK-755
Power Source	Battery Powered
Battery Type	Rechargeable (1 A included)
Charging Time	Approx. 2.5 hours
Operating Time	Approx. 2 hours
Blade Material	Stainless Steel
Product Dimensions (L x W x H)	5 x 16 x 20 cm
Product Weight	522 grams
Included Components	Hair clipper, cleaning brush, 4 guide combs, USB charging cable, instructions

9. WARRANTY AND SUPPORT

Warranty information for the SURKER SK-755 Hair Clipper is not explicitly provided in the product details. For specific warranty terms, return policies, or technical support, please refer to the retailer's policy where the product was purchased or contact the manufacturer directly.

Always retain your proof of purchase for any warranty claims or support inquiries.

© 2023 SURKER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question