

[manuals.plus](#) /

› [Gorgefine](#) /

› [Gorgefine Rechargeable Hair Clipper & Trimmer \(Model HC-01\) - Instruction Manual](#)

### Gorgefine HC-01

# Gorgefine Rechargeable Hair Clipper & Trimmer (Model HC-01)

Instruction Manual

## 1. INTRODUCTION

Thank you for purchasing the Gorgefine Rechargeable Hair Clipper & Trimmer. This professional cordless grooming kit is designed for precise and efficient hair cutting and trimming. It features a waterproof design, LED display, and multiple operating modes for versatile use. Please read this manual thoroughly before first use to ensure safe and optimal performance of your device.

## 2. PACKAGE CONTENTS

Please check the package contents upon unboxing. If any items are missing or damaged, contact customer support.

- 1 x Gorgefine Electric Clipper
- 1 x Cleaning Brush
- 1 x Long Comb
- 1 x USB Charging Cable
- 4 x Comb Attachments (3mm, 6mm, 9mm, 12mm)
- 1 x Storage Bag
- 1 x User Manual (this document)

## 3. PRODUCT FEATURES

- **Dual Operating Modes:** Features a Turbo Powerful Mode for increased motor speed and a Super Silent Mode for quieter operation, suitable for sensitive areas or children.
- **Low Vibration & Quiet Design:** Equipped with a precision motor, operating at approximately 40 dB, minimizing noise during use.
- **Ceramic Titanium Blade:** Self-sharpening ceramic titanium blade for high performance accuracy, reducing the risk of scratches and cuts.
- **Waterproof Design (IPX5):** The hair trimmer is designed to be waterproof for easy cleaning under running water.
- **USB Quick Charge & Long Duration:** Powered by a 2500 mAh lithium battery, offering up to 200 minutes of runtime after a 3-hour full charge.
- **Smart LED Indicator:** Displays remaining battery percentage and selected operating mode.
- **Precise Length Control:** Adjustable cutting lengths from 0.8mm to 2.5mm directly on the clipper, plus four comb

attachments for 3mm, 6mm, 9mm, and 12mm.



Image: The Gorgefine hair clipper highlighting its IPX5 waterproof rating and LED display.

## 4. SAFETY INSTRUCTIONS

- Read all instructions before using this appliance.
- Keep the appliance away from water when charging. Do not immerse the charging cable or adapter in water.
- Do not use the appliance if it is damaged or malfunctioning.
- Keep out of reach of children.
- Ensure the charging port is dry before connecting the USB charging cable.
- Only use the provided USB charging cable.
- Do not attempt to disassemble or repair the appliance yourself. Contact qualified service personnel.
- Avoid using the clipper on irritated skin or open wounds.
- Always turn off the appliance before cleaning or attaching/detaching accessories.

## 5. SETUP

### 5.1 Charging the Clipper

1. Ensure the clipper is turned off.

2. Connect the USB charging cable to the charging port at the bottom of the clipper.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port.
4. The LED display will show the charging status and battery percentage. A full charge takes approximately 3 hours.
5. Once fully charged, disconnect the charging cable.



Image: The hair clipper connected to a USB charging cable, illustrating the charging process.

## 5.2 Attaching Comb Guides

1. Ensure the clipper is turned off.
2. Select the desired comb attachment (3mm, 6mm, 9mm, or 12mm).
3. Align the comb guide with the clipper head and push it firmly until it clicks into place.
4. To remove, gently pull the comb guide away from the clipper head.



Image: The hair clipper displaying its four attachment guards (3mm, 6mm, 9mm, 12mm) and the LED screen.

## 6. OPERATING INSTRUCTIONS

### 6.1 Power On/Off and Mode Selection

- To turn on the clipper, slide the ON/OFF switch to position 1 for Silent Mode.
- To activate Turbo Powerful Mode, slide the ON/OFF switch to position 2. The motor speed will increase.
- To turn off the clipper, slide the ON/OFF switch back to the '0' position.
- The LED display will show the current battery percentage and selected mode.

### 6.2 Adjusting Cutting Length

- **Without Comb Attachments:** The integrated adjustment wheel allows for precise length settings from 0.8mm to 2.5mm. Rotate the wheel to select the desired length.
- **With Comb Attachments:** Use the 3mm, 6mm, 9mm, or 12mm comb guides for longer cutting lengths. Ensure the comb guide is securely attached before use.

### 6.3 Hair Cutting Tips

- For best results, ensure hair is clean and dry.
- Start with a longer comb guide and gradually reduce the length if desired.
- Hold the clipper with the blade flat against the head and move it slowly against the direction of hair growth.

- Overlap strokes to ensure an even cut.
- Use the long comb to guide hair into the blades for a consistent trim.

## PROFESSIONAL HAIR CLIPPER

Whisper Quiet  
No Annoying Noise Any More



Image: The hair clipper being used to trim hair, demonstrating its professional application.

## 7. MAINTENANCE AND CLEANING

### 7.1 Cleaning the Blades

1. Turn off the clipper and remove any comb attachments.
2. Use the provided cleaning brush to remove loose hairs from the blades.
3. For a more thorough clean, the clipper is waterproof. You can rinse the blade assembly under running water.  
Ensure the clipper is turned off and unplugged from any power source before rinsing.
4. Allow the blades to air dry completely before reattaching comb guides or storing.

# SKIN-FRIENDLY DESIGN

Ceramic blade +titanium tungsten



Image: A close-up view of the clipper's skin-friendly ceramic and titanium tungsten blade design.

## 7.2 Storage

- Store the clipper and its accessories in the provided storage bag.
- Keep the appliance in a cool, dry place, away from direct sunlight and extreme temperatures.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper for at least 3 hours.
Clipper is not cutting effectively.	Blades are clogged with hair or dull.	Clean the blades thoroughly. If blades are dull, consider contacting support for replacement options.
Clipper makes unusual noise.	Hair caught in the motor or blades.	Turn off and clean the clipper. If the noise persists, discontinue use and contact support.
Charging indicator not working.	Faulty charging cable or power source.	Try a different USB cable or power adapter. Ensure the charging port is clean and dry.

## 9. SPECIFICATIONS

---

- **Model:** HC-01
- **Input Power:** 100V-240V 50/60HZ
- **Output:** AC 5V 800mAh
- **Working Voltage:** 3.7V
- **Battery:** 2500 mAh Lithium-Ion
- **Charging Time:** Approximately 3 hours
- **Use Time:** Up to 200 minutes
- **Net Weight:** 431 g
- **Product Dimensions:** 22.35 x 10.67 x 5.84 cm
- **Blade Material:** Ceramic Titanium
- **Waterproof Rating:** IPX5
- **Included Components:** Blades, Brush, Storage Bag, Trimmer, Comb Attachments, USB Charging Cable

## 10. WARRANTY AND SUPPORT

---

The Gorgefine Rechargeable Hair Clipper & Trimmer is backed by a **12-month quality warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

For warranty claims, technical support, or any questions regarding your product, please contact your retailer or the manufacturer's customer service.