

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [PHILIPS](#) /
- › [Philips L'OR Barista LM8012/00 Coffee Machine User Manual](#)

PHILIPS LM8012/00

Philips L'OR Barista LM8012/00 Coffee Machine User Manual

Model: LM8012/00

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Philips L'OR Barista LM8012/00 coffee machine. Please read all instructions carefully before first use and keep this manual for future reference.



Figure 1: Philips L'OR Barista LM8012/00 Coffee Machine

SAFETY INSTRUCTIONS

- Always ensure the machine is placed on a stable, flat surface.
- Do not immerse the machine in water or any other liquid.
- Keep out of reach of children.
- Unplug the machine before cleaning or if it will not be used for an extended period.
- Do not operate the machine if the power cord or plug is damaged.
- Use only L'OR Espresso, L'OR Barista, or Nespresso compatible capsules.

PRODUCT OVERVIEW

The Philips L'OR Barista LM8012/00 is a capsule coffee machine designed to brew classic or double coffees with 19 bars of pressure. It features a 1-liter water reservoir and is compatible with various capsule types.



Figure 2: Key components of the coffee machine, including water tank, capsule holder, and drip tray.

Main Features:

- Prepares two coffees simultaneously or one double coffee in a single cup.
- Up to 19 bars of pressure for optimal espresso extraction.
- Wide selection of coffee types: ristretto, espresso, lungo, etc.
- Adjustable coffee volumes from 25 ml to 220 ml.
- Compatible with L'OR Espresso, L'OR Barista, and Nespresso capsules.

SETUP

1. Unpacking and Initial Cleaning

1. Remove all packaging materials from the machine.
2. Wash the water tank, drip tray, and used capsule container with warm water and a mild detergent. Rinse thoroughly and dry.

2. Filling the Water Tank

1. Remove the water tank from the back of the machine.
2. Fill the tank with fresh, cold drinking water up to the MAX indication.
3. Place the water tank back onto the machine securely.



Figure 3: Water tank located at the side of the machine.

3. First Use and Priming

1. Plug the machine into a grounded power outlet.
2. Place a container (at least 200 ml) under the coffee spout.
3. Press the power button (**U**) to turn on the machine. The buttons will flash.
4. Once the buttons stop flashing and remain steadily lit, press any coffee button to start the priming process. Water will flow through the system.
5. Repeat this process 2-3 times until clear water flows out. The machine is now ready for use.

OPERATING THE COFFEE MACHINE

1. Turning On/Off

- Press the power button (**U**) to turn the machine on or off.
- The machine will automatically turn off after 30 minutes of inactivity to save energy.







Figure 4: Control panel with power button and coffee selection buttons.

2. Brewing Coffee

1. Ensure the water tank is filled.
2. Lift the lever to open the capsule compartment.
3. Insert a L'OR Espresso, L'OR Barista, or Nespresso compatible capsule. For double coffees, use a L'OR Barista double capsule.
4. Close the lever firmly.
5. Place your cup(s) on the drip tray. For larger cups, the drip tray can be removed.
6. Select your desired coffee type by pressing the corresponding button (e.g., Espresso, Lungo, Double Espresso). The machine will automatically detect the capsule type and adjust the brewing process.
7. The machine will stop automatically once the brewing is complete.



Figure 5: Machine brewing two cups of coffee.

3. Adjusting Coffee Volume

You can customize the volume of your coffee:

1. Insert a capsule and close the lever.
2. Press and hold the desired coffee button. Release the button when your cup contains the preferred amount of coffee.
3. The machine will remember this setting for future brews of the same capsule type.

MAINTENANCE

Regular cleaning and maintenance ensure optimal performance and longevity of your coffee machine.

1. Daily Cleaning

- **Drip Tray and Used Capsule Container:** Empty and rinse daily. These parts are not dishwasher safe.
- **Water Tank:** Rinse daily and refill with fresh water.
- **Machine Exterior:** Wipe with a soft, damp cloth. Do not use abrasive cleaning agents.

2. Descaling

Descaling is crucial to prevent mineral buildup, especially in areas with hard water. The frequency depends on water hardness and usage. Refer to the Philips website or local support for recommended descaling solutions and procedures.

1. Empty the water tank and fill it with the descaling solution as per the product instructions.
2. Place a large container (at least 1 liter) under the coffee spout.
3. Follow the specific descaling instructions provided with your descaling solution or on the Philips support website for the LM8012/00 model.
4. After descaling, rinse the machine by running several cycles with fresh water to remove any residue.

TROUBLESHOOTING

If you encounter issues with your coffee machine, consult the table below for common problems and solutions.

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outage.	Check power connection; ensure outlet is functional.
No coffee is dispensed.	Water tank empty; machine not primed; clogged spout.	Fill water tank; perform priming cycle; clean coffee spout.
Coffee is cold or lukewarm.	Machine not preheated; cups not preheated.	Allow machine to fully preheat (buttons stop flashing); preheat cups with hot water.
Water leaks from the machine.	Water tank not correctly seated; drip tray full.	Ensure water tank is properly installed; empty drip tray.
Buttons are flashing continuously.	Machine needs descaling; water tank empty.	Perform descaling procedure; fill water tank.

If the problem persists after trying these solutions, please contact Philips customer support.

SPECIFICATIONS

Feature	Detail
Model Number	LM8012/00
Brand	PHILIPS
Dimensions (L x W x H)	18 x 40 x 28 cm (7.1 x 15.7 x 11 inches)
Weight	3.56 Kilograms (7.85 lbs)
Water Tank Capacity	1 Liter
Pressure	Up to 19 bars
Power	50 W
Voltage	220 V
Material	Acrylonitrile Butadiene Styrene (ABS)
Operating Mode	Fully Automatic
Controls	Buttons
Coffee Type	Capsules (L'OR Espresso, L'OR Barista, Nespresso compatible)
Power Source	AC/DC
Filter Type	Reusable
Special Features	Programmable, Automatic shut-off
Dishwasher Safe Parts	No

WARRANTY AND SUPPORT

Your Philips L'OR Barista LM8012/00 coffee machine comes with a manufacturer's warranty. Spare parts availability is indicated for 2 years.

- For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official Philips website.
- For technical support, service, or to order spare parts, please contact Philips customer service in your region. Contact information can typically be found in the product packaging or on the Philips support website.