

Morphy Richards 460017

Morphy Richards 460017 3.5 Litre Ceramic Slow Cooker User Manual

Model: 460017

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before operating the slow cooker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the base unit, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Avoid sudden temperature changes, such as adding refrigerated foods into a heated pot.
- The ceramic pot and glass lid are fragile. Handle with care.

2. PRODUCT OVERVIEW

The Morphy Richards 460017 3.5 Litre Ceramic Slow Cooker is designed for convenient and healthy cooking. Its 3.5-litre capacity is suitable for preparing meals for families, serving up to six starter portions or four main dishes comfortably. The appliance features a durable brushed steel exterior, a removable ceramic pot, and a toughened glass lid for easy monitoring of the cooking process.



Lightweight and Durable
Being lightweight and durable, it transitions from kitchen to table with ease.

The slow cooker features a clear glass lid, allowing you to monitor your food as it cooks without releasing heat or flavor.



3.5 Litre Capacity
Perfect for families as it makes 4 main courses.

Designed to be lightweight and durable, this slow cooker is easy to transport from the kitchen to the dining table for serving.



Energy Efficient

It is a quick and easy way to make tender and succulent meals.

With a 3.5 Litre capacity, the slow cooker is ideal for preparing family-sized meals, comfortably making up to four main courses.

Key Features:

- **3.5 Litre Capacity:** Serves six starters or four main portions comfortably, ideal for families.
- **Three Cooking Settings:** Ensures your meals are ready when you are.
- **Toughened Glass Lid:** Transparent to monitor cooking progress without heat loss.
- **Removable Ceramic Pot:** Can be used as a serving dish and is dishwasher safe.
- **Dishwasher Safe Pot and Lid:** Makes meal times even easier with simple cleanup.

3. SETUP

1. **Unpack:** Carefully remove all packaging materials and dispose of them responsibly. Ensure all components are present: the base unit, ceramic pot, and glass lid.
2. **Initial Cleaning:** Before first use, wash the ceramic pot and glass lid in warm, soapy water. Rinse thoroughly and dry completely. The base unit should be wiped with a damp cloth only; never immerse it in water.
3. **Placement:** Place the slow cooker on a flat, stable, heat-resistant surface, away from walls or cabinets to allow for proper ventilation. Ensure the power cord is not dangling where it can be pulled or tripped over.
4. **Assemble:** Place the clean ceramic pot into the base unit.

4. OPERATING INSTRUCTIONS

The Morphy Richards Slow Cooker offers three heat settings to provide flexibility for various recipes and cooking times.



Glass lid

Glass lid lets you check progress without letting out flavour.

The control dial allows you to select from three heat settings: Low, Medium, and High, to suit your cooking needs.

- 1. Prepare Ingredients:** Prepare your ingredients as per your recipe. Place all ingredients into the ceramic pot.
- 2. Secure Lid:** Place the glass lid securely on the ceramic pot.
- 3. Connect Power:** Plug the slow cooker into a suitable electrical outlet.
- 4. Select Setting:** Turn the control dial to your desired cooking setting:
 - **LOW:** Ideal for slow, gentle cooking over a longer period, typically 6-12 hours.
 - **MEDIUM:** For recipes requiring a moderate cooking time, typically 4-10 hours.
 - **HIGH:** For faster cooking, typically 3-8 hours. This setting is also suitable for bringing food to temperature quickly before reducing to a lower setting.
- 5. Cooking Process:** Allow the food to cook for the recommended time. Avoid lifting the lid frequently, as this releases heat and can significantly extend cooking times.
- 6. Serving:** Once cooking is complete, turn the control dial to 'OFF' and unplug the appliance. The removable ceramic pot can be used directly for serving.

5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your slow cooker.



Dishwasher Safe Pot

The included ceramic cooking pot is both durable and dishwasher safe.

The ceramic cooking pot and glass lid are designed to be dishwasher safe, simplifying cleanup after your meal.

- Before Cleaning:** Always turn the control dial to 'OFF' and unplug the slow cooker from the power outlet. Allow the appliance to cool completely before cleaning.
- Ceramic Pot and Glass Lid:** The removable ceramic pot and glass lid are dishwasher safe. Alternatively, they can be washed by hand in warm, soapy water. Rinse thoroughly and dry completely before storing.
- Base Unit:** Wipe the exterior of the base unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the finish. Never immerse the base unit in water or any other liquid.
- Storage:** Ensure all parts are clean and dry before storing. Store the slow cooker in a cool, dry place.

6. TROUBLESHOOTING

If you encounter any issues with your slow cooker, please refer to the following common problems and solutions:

- **Appliance does not turn on:**

Solution: Ensure the power cord is securely plugged into a working electrical outlet and the control dial is set to a cooking setting (LOW, MEDIUM, or HIGH), not 'OFF'.

- **Food is not cooking or cooking too slowly:**

Solution: Verify that the slow cooker is plugged in and the correct heat setting has been selected. Ensure the lid is properly seated on the ceramic pot to prevent heat from escaping. Avoid lifting the lid frequently during cooking. Check that the ceramic pot is correctly placed within the base unit.

- **Food is burning or overcooking:**

Solution: Ensure the correct heat setting is selected for your recipe. High heat settings are for faster cooking and may require less time. Adjust cooking times as necessary.

- **Lid does not fit properly:**

Solution: Check for any food debris or obstructions around the rim of the ceramic pot or lid. Ensure the lid is not damaged.

7. SPECIFICATIONS

Feature	Specification
Brand	Morphy Richards
Model Number	460017
Capacity	3.5 Litres (3.7 Quarts)
Material	Ceramic (Pot), Brushed Steel (Exterior)
Wattage	170 watts
Voltage	240V
Product Dimensions (D x W x H)	8.66" x 9.92" x 12.99" (22cm x 25.2cm x 33cm)
Control Method	Knob / Push Button
Number of Settings	3 (Low, Medium, High)
Dishwasher Safe Parts	Ceramic Pot, Glass Lid
Item Weight	7.96 pounds

8. WARRANTY AND SUPPORT

Morphy Richards products are manufactured to high-quality standards. In the unlikely event of a defect in materials or workmanship, your product is covered by a manufacturer's warranty.

For specific warranty details, registration, or to obtain customer support, please refer to the warranty card included with your purchase or visit the official Morphy Richards website. Please have your model number (460017) and proof of purchase available when contacting support.

© 2023 Morphy Richards. All rights reserved.