

Liebherr 7084 778-01

Liebherr Chest Freezer Model 7084 778-01 Use and Care Manual

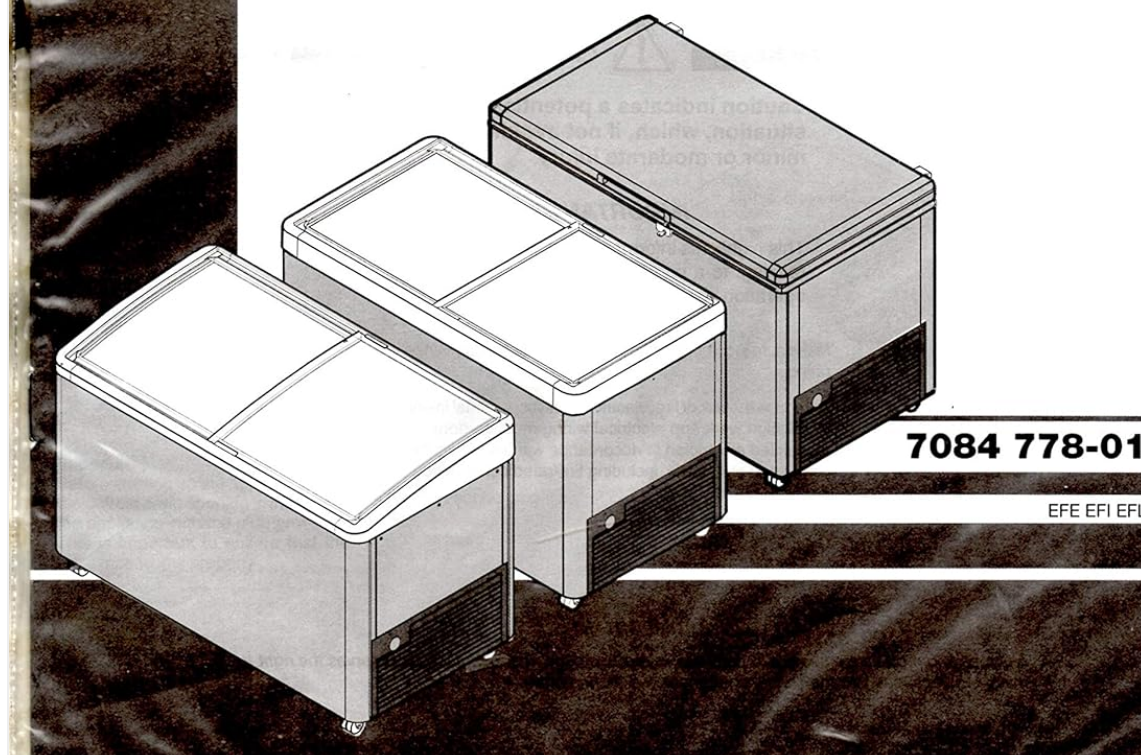 
Models: 7084 778-01 EFE, EFI, EFL

INTRODUCTION

This manual provides essential instructions for the safe and efficient use, care, and maintenance of your Liebherr Chest Freezer, specifically models 7084 778-01 EFE, EFI, and EFL. Please read this manual thoroughly before operating your appliance to ensure proper function and to prevent injury or damage. Keep this manual in a safe place for future reference.

Use and Care Manual

Chest Freezer



This image displays the front cover of the Liebherr Chest Freezer Use and Care Manual. It features an illustration of three different chest freezer models, with the title 'Use and Care Manual' and 'Chest Freezer' prominently displayed. The model numbers '7084 778-01' and variants 'EFE EFI EFL' are also visible.

Safety Information

Your safety and the safety of others are very important. Please read all safety messages in this manual and on your appliance. This is the safety alert symbol:

⚠ WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result in minor or

moderate injury.

- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the freezer compartment unless they are of the type recommended by the manufacturer.
- Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Supervise children to ensure they do not play with the appliance.
- Disconnect the appliance from the power supply before cleaning or performing maintenance.

SETUP AND INSTALLATION

Unpacking

- Remove all packaging materials, including tape and protective films.
- Check the appliance for any transport damage. If damaged, contact your supplier immediately.
- Dispose of packaging materials responsibly.

Placement

- Place the freezer on a firm, level surface.
- Ensure adequate ventilation around the appliance. Maintain a minimum clearance of 10 cm (4 inches) from walls and other objects.
- Avoid direct sunlight and heat sources (e.g., radiators, ovens).
- The ambient temperature should be within the climate class specified on the appliance's rating plate.

Electrical Connection

- Connect the appliance to a properly grounded electrical outlet.
- Ensure the voltage and frequency match the specifications on the rating plate.
- Do not use extension cords or multiple socket adapters.
- Allow the freezer to stand upright for at least 4 hours before plugging it in to allow refrigerants to settle.

OPERATING INSTRUCTIONS

Initial Start-up and Temperature Setting

1. Plug in the appliance. The internal light will illuminate (if applicable).
2. The temperature display will show the current internal temperature.
3. Use the temperature control dial or buttons (depending on model) to set the desired temperature. For optimal food preservation, a temperature of -18°C (0°F) or colder is recommended.
4. Allow the freezer to operate for several hours (e.g., 24 hours) before loading with food to reach the set temperature.

Loading Food

- Do not overload the freezer. Leave space for air circulation.
- Package food properly to prevent freezer burn and odor transfer.

- Avoid placing hot food directly into the freezer; allow it to cool first.

Defrosting

Defrost the freezer when the ice layer reaches a thickness of approximately 5-10 mm (0.2-0.4 inches).

1. Unplug the freezer from the power supply.
2. Remove all food items and store them in another freezer or insulated container.
3. Leave the lid open to allow the ice to melt naturally. You can place towels at the bottom to absorb water.
4. Do not use sharp objects or heating devices to speed up defrosting, as this can damage the appliance.
5. Once defrosted, clean and dry the interior thoroughly before plugging it back in and reloading food.

MAINTENANCE AND CARE

Cleaning the Interior

- Always unplug the appliance before cleaning.
- Clean the interior with a soft cloth and a mild detergent solution.
- Rinse with clean water and dry thoroughly.
- Do not use abrasive cleaners, scouring pads, or solvents.

Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- For stainless steel models, use a specialized stainless steel cleaner.
- Keep the condenser coils at the back or bottom of the freezer clean to ensure efficient operation. Use a vacuum cleaner or soft brush to remove dust.

Long-Term Storage

- If the freezer will not be used for an extended period, unplug it, empty all contents, defrost, and clean it thoroughly.
- Leave the lid slightly ajar to prevent odors and mold growth.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Freezer does not operate.	No power supply.	Check if the power cord is plugged in securely. Check the circuit breaker or fuse.
Freezer is not cold enough.	Temperature setting too high; Door not closed properly; Excessive frost build-up; Poor ventilation.	Adjust temperature setting lower. Ensure door is sealed. Defrost the freezer. Ensure adequate clearance around the unit.
Excessive noise.	Appliance not level; Objects vibrating against the unit; Compressor noise (normal).	Adjust leveling feet. Remove any objects touching the freezer. Compressor noise is normal during operation.

Problem	Possible Cause	Solution
Water on the floor.	Drain plug not properly inserted; During defrosting.	Ensure the drain plug is securely in place. This is normal during manual defrosting.

If the problem persists after checking these solutions, please contact Liebherr customer service or a qualified technician.

SPECIFICATIONS

Please refer to the rating plate located inside the freezer compartment or on the back of the appliance for specific technical data relevant to your model (7084 778-01 EFE, EFI, or EFL). General specifications typically include:

- **Model Numbers:** 7084 778-01 EFE, EFI, EFL
- **Type:** Chest Freezer
- **Power Supply:** 115V / 60Hz (typical for North American models, verify on rating plate)
- **Refrigerant:** R600a (Isobutane) or R290 (Propane) - *Refer to rating plate for exact type and charge.*
- **Climate Class:** SN-T (Subnormal to Tropical) - *Indicates suitable ambient temperature range.*
- **Dimensions (Approximate):** Varies by specific EFE, EFI, EFL variant.
- **Energy Consumption:** Refer to Energy Guide label.

Note: Specifications are subject to change without notice. Always consult the rating plate on your specific appliance for the most accurate information.

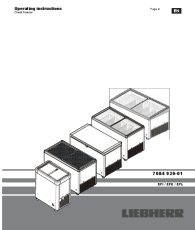 
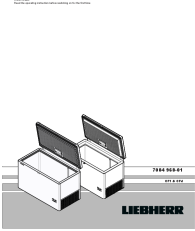 
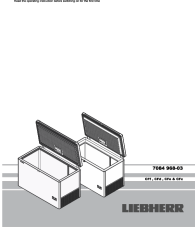 
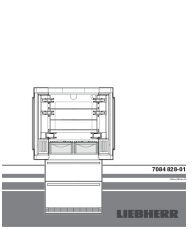 

WARRANTY AND CUSTOMER SUPPORT

Liebherr appliances come with a manufacturer's warranty. For detailed information regarding your warranty coverage, including terms and conditions, please refer to the warranty card included with your appliance or visit the official Liebherr website.

For technical assistance, spare parts, or to schedule service, please contact Liebherr customer support. Contact information can typically be found on the Liebherr website or in the documentation provided with your purchase.

Online Resources: For additional support, FAQs, and product registration, please visit the official Liebherr Appliances website.

Related Documents - 7084 778-01

	<p>Liebherr Chest Freezer Operating Instructions</p> <p>Comprehensive operating instructions for Liebherr chest freezers (EFI/EFE/EFL models), covering installation, operation, safety, maintenance, and troubleshooting.</p>
	<p>Liebherr Chest Freezer Operating Instructions</p> <p>Comprehensive operating instructions for Liebherr chest freezers (CFf and CFd models), covering safety, setup, operation, maintenance, and troubleshooting.</p>
	<p>Liebherr Chest Freezer Operating Instructions - Models CFF, CFd, CFe, CFc</p> <p>Comprehensive operating instructions for Liebherr chest freezers, covering setup, safety, energy saving, freezing, maintenance, and troubleshooting for models CFF, CFd, CFe, and CFc. Includes model number 7084 968-03.</p>
	<p>Liebherr No-Frost Combined Refrigerator-Freezer Operating Instructions</p> <p>Comprehensive operating instructions for the Liebherr No-Frost combined refrigerator-freezer (Model 7084 828-01). Covers safety warnings, appliance description, controls, temperature settings, energy saving, water filter, BioFresh, IceMaker, freezing, defrosting, cleaning, troubleshooting, and shutdown procedures.</p>
	<p>Liebherr CS/CBS 20 Refrigerator-Freezer Installation Instructions & Safety Guide</p> <p>Comprehensive installation guide for Liebherr CS/CBS 20 'NoFrost' combined refrigerator-freezers with IceMaker. Includes safety warnings, planning information, water connection, leveling, and mounting instructions.</p>
	<p>Liebherr Base Unit Freezer User Guide Model 7088011-01</p> <p>Comprehensive user guide for the Liebherr base unit freezer, model 7088011-01 (SUIGN 1554). Learn about safety, controls, operation, maintenance, energy saving, and proper disposal.</p>

