



[Manuals.plus](#) /

> [Trekassy](#) /

> Trekassy 60-inch Skycurve Platform Tree Swing Instruction Manual

Trekassy DR0591C-A08

Trekassy 60-inch Skycurve Platform Tree Swing Instruction Manual

Model: DR0591C-A08

INTRODUCTION

This manual provides detailed instructions for the assembly, safe operation, and maintenance of your Trekassy 60-inch Skycurve Platform Tree Swing. Designed for both children and adults, this swing features a sturdy 60-inch steel frame with durable 900D Oxford fabric, supporting up to 700 pounds. Its unique curved design offers a versatile and engaging swinging experience.

SAFETY INFORMATION

- **Adult Supervision Required:** Always ensure children are supervised by an adult while using the swing.
- **Weight Limit:** Do not exceed the maximum weight capacity of 700 pounds.
- **Clearance:** Ensure adequate clearance around the swing area (at least 6 feet in all directions) to prevent collisions.
- **Inspection:** Before each use, inspect all components, including ropes, straps, and frame, for wear, damage, or loose connections. Do not use if any part is damaged.
- **Installation Surface:** Install the swing over a soft surface such as grass, wood chips, or sand. Avoid concrete or asphalt.
- **Secure Attachment:** Ensure the swing is securely attached to a strong, horizontal tree branch or swing set beam capable of supporting the swing's weight and dynamic forces during use.
- **Proper Use:** Do not stand on the swing unless specifically designed for surfing. Avoid twisting ropes or excessive swinging that could cause instability.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 60-inch Skycurve Platform Swing Frame (Alloy Steel)
- 900D Oxford Fabric Seat
- Adjustable Ropes with Metal Rings
- 2 x Tree Hanging Straps
- Assembly Hardware (bolts, washers, nuts)
- Instruction Manual

SETUP AND ASSEMBLY

Follow these steps to assemble and install your Trekassy Skycurve Platform Tree Swing:

1. **Assemble the Frame:** Connect the steel frame sections according to the included picture instructions. Ensure all connections are secure with the provided hardware.
2. **Attach the Fabric Seat:** Securely attach the 900D Oxford fabric seat to the assembled frame. Ensure the fabric is taut and evenly distributed.
3. **Connect Ropes:** Attach the adjustable ropes to the designated points on the swing frame using the metal rings.
4. **Select Installation Location:** Choose a sturdy tree branch or swing set beam that can safely support the swing and its occupants. The branch/beam should be at least 8 inches in diameter and free of dead wood.
5. **Install Tree Straps:** Wrap the two tree hanging straps around the chosen branch or beam. Ensure they are securely fastened and level.
6. **Hang the Swing:** Attach the ropes of the swing to the tree straps using the carabiners or other provided connectors. Adjust the rope length to achieve the desired swing height, ensuring the swing is level and at a safe distance from the ground.



Image: A family enjoying the swing, demonstrating a properly installed swing.

Your browser does not support the video tag.

Video: Official Trekassy video demonstrating the assembly and installation of the 60-inch Skycurve Tree Swing.

OPERATING INSTRUCTIONS

The Trekassy Skycurve Platform Tree Swing offers multiple ways to enjoy it:

- **Sitting:** Sit comfortably on the swing, holding onto the ropes for stability.

- **Lying:** The spacious 60-inch platform allows users to lie down for a relaxing experience.
- **Standing/Surfing:** For experienced users, the curved design allows for a dynamic standing or "surfing" motion. Ensure a firm grip on the ropes.

Always maintain a safe and controlled swinging motion. Avoid sudden movements or attempts to jump off the swing while in motion.

CURVED EDGE KEEPS SWINGING SECURE



Vs



Image: A child standing on the swing, illustrating the dynamic "surfing" mode.

UPGRADE TO THE 60-INCH PLATFORM 🦋 THAT FITS THE WHOLE FAMILY




Image: A mother and child lying on the swing, showcasing its spacious design for relaxation.

MAINTENANCE

Regular maintenance ensures the longevity and safety of your swing:

- **Cleaning:** The 900D Oxford fabric seat is wear-resistant and UV-resistant. Clean with mild soap and water. Rinse thoroughly and allow to air dry.
- **Frame Inspection:** Periodically check the hot-dip galvanized steel frame for any signs of rust, bends, or structural damage.
- **Rope and Strap Check:** Inspect ropes and tree straps for fraying, cuts, or excessive wear. Replace if damage is observed. Ensure metal rings and carabiners are not corroded or bent.
- **Hardware Tightness:** Regularly check all bolts, nuts, and connections to ensure they are tight. Tighten as necessary.
- **Seasonal Storage:** During prolonged periods of non-use or harsh weather conditions, consider disassembling and

storing the swing indoors to extend its lifespan.

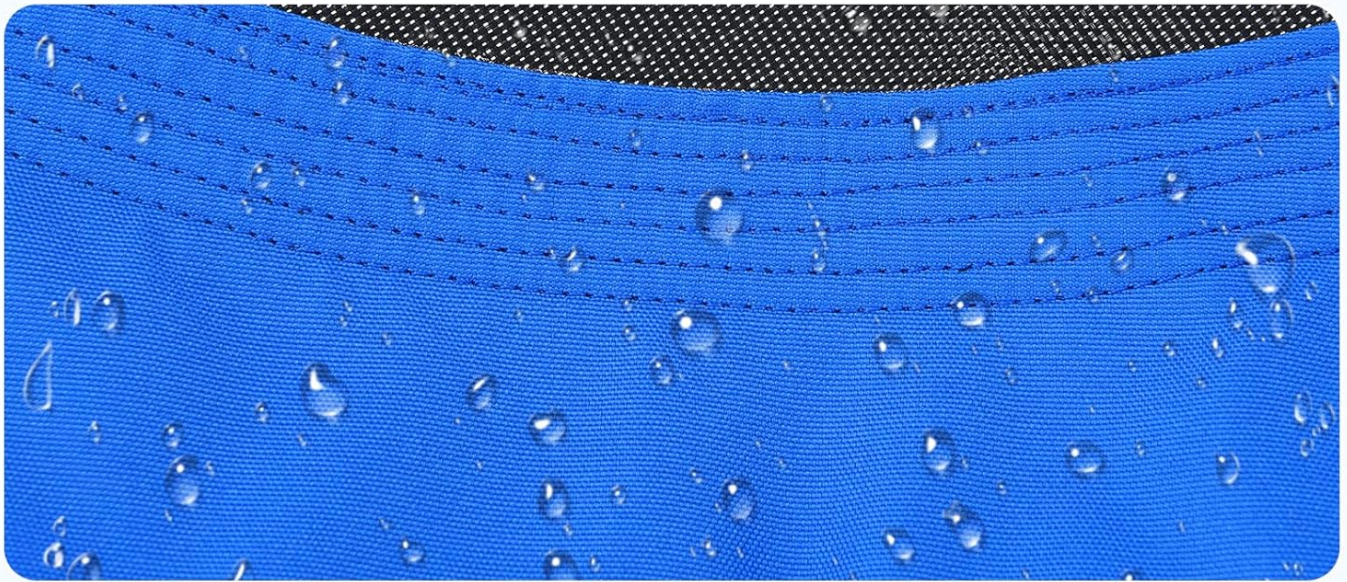


ALL-WEATHER PLATFORM SWING FABRIC
HOT GALVANIZED STEEL FRAME



Ordinary Steel Pipe

Vs

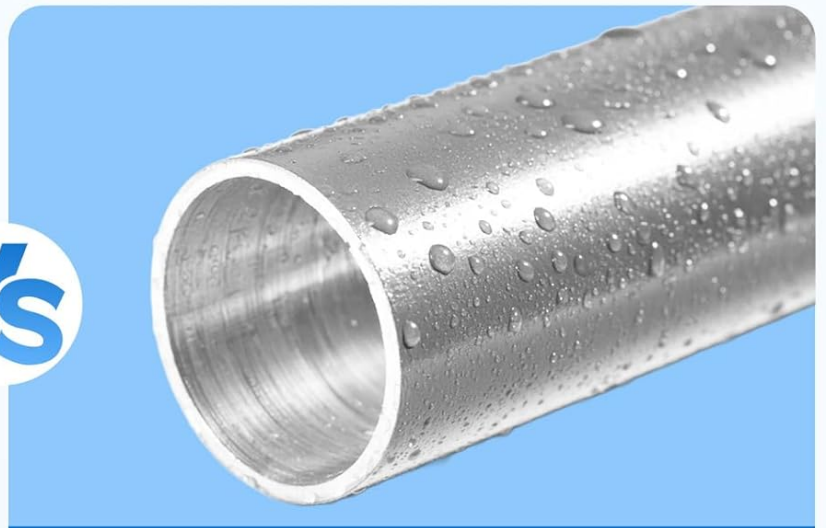

Our Hot-Dip Galvanized Pipe

Image: Comparison of steel pipes, illustrating the hot-dip galvanized frame for enhanced durability and rust resistance.


WITHSTAND ALL WEATHER CONDITIONS



UV-Resistant



Water-Proof

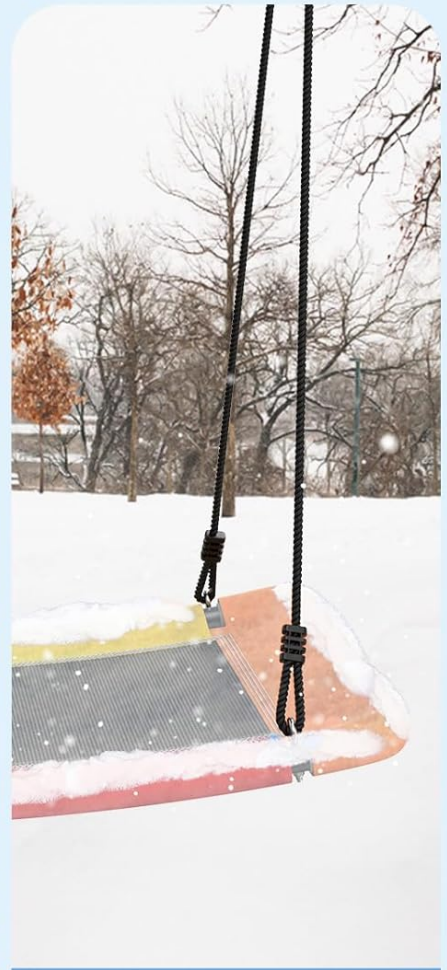

Snow-Proof

Image: The swing shown in different weather conditions, emphasizing its UV-resistant, waterproof, and snow-proof properties.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---|--|--|
| Swing ropes slip or change height during use. | Rope adjustment mechanism not fully secured or worn ropes. | Ensure the rope adjustment buckles are tightly fastened. If ropes are worn, replace them immediately. |
| Swing feels unstable or wobbly. | Loose frame connections or uneven hanging. | Check all frame bolts and tighten them. Verify that the tree straps are evenly spaced and the swing is hanging level. |
| Squeaking noises during swinging. | Friction at connection points. | Apply a small amount of lubricant (e.g., silicone spray) to metal-on-metal contact points, such as carabiners or rope rings. |

| Problem | Possible Cause | Solution |
|---------------------------------------|--|---|
| Fabric seat appears loose or sagging. | Improper installation of fabric or stretched material. | Re-check the fabric attachment to the frame, ensuring it is pulled taut. If the fabric is significantly stretched or damaged, consider replacement. |

SPECIFICATIONS

Brand: Trekassy

Model Number: DR0591C-A08 (AA09)

Color: Rainbow

Material: 900D Oxford Fabric (Seat), Alloy Steel (Frame)

Product Dimensions (Approximate): 60 inches (Length) x 32 inches (Seat Depth). Packaged dimensions are 31.88"D x 10.23"W x 4.33"H.

Item Weight: 14.25 Pounds

Maximum Weight Recommendation: 700 Pounds

Maximum Compatible Number of Seats: 3 (comfortably)

Assembly Required: Yes

GTIN/UPC: 610840962231

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Trekassy website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Contact Information: Please visit the [Trekassy Store on Amazon](#) for further assistance or to find contact details.

