

BAODLON BL-TARG-ETOY6

BAODLON Digital Shooting Target System

MODEL: BL-TARG-ETOY6 USER MANUAL

1. Introduction

This manual provides essential instructions for the safe and effective use of your BAODLON Digital Shooting Target System. Please read it thoroughly before assembly and operation. Keep this manual for future reference.

2. Safety Information

- **Age Recommendation:** This product is recommended for ages 6 years and up. Adult supervision is advised.
- **Dart Safety:** Use only the provided foam darts or compatible soft foam darts. Do not aim at eyes or face.
- **Battery Safety:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Insert batteries with correct polarity. Remove batteries if the device is not used for an extended period.
- **Choking Hazard:** Small parts may be a choking hazard for young children.

3. Package Contents

Verify that all items listed below are included in your package:

- 1 x Digital Shooting Target Base with 4 Targets
- 2 x Foam Dart Toy Guns
- 2 x Dart Clips
- 40 x Soft Foam Darts



Image: All components of the BAODLON Digital Shooting Target System, including the target base, two toy guns, dart clips, and foam darts.

4. Setup

4.1. Battery Installation (Target Base)

1. Locate the battery compartment on the underside of the target base.
2. Open the battery compartment cover.
3. Insert 3 x AA batteries (not included), ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

Video: A demonstration of the BAODLON Digital Shooting Target System in use, showing dart blaster loading, shooting, and targets resetting with sound and score updates. This video is provided by the seller, Miss August.

4.2. Target Assembly

The four targets are pre-attached to the base. Simply lift each target into its upright position until it clicks into place.

4.3. Dart Blaster Loading

1. Insert the detachable dart clip into the designated slot on the toy gun.
2. Load soft foam darts into the dart clip.
3. Pull the pump backward to prime the blaster.
4. The blaster is now ready to fire.

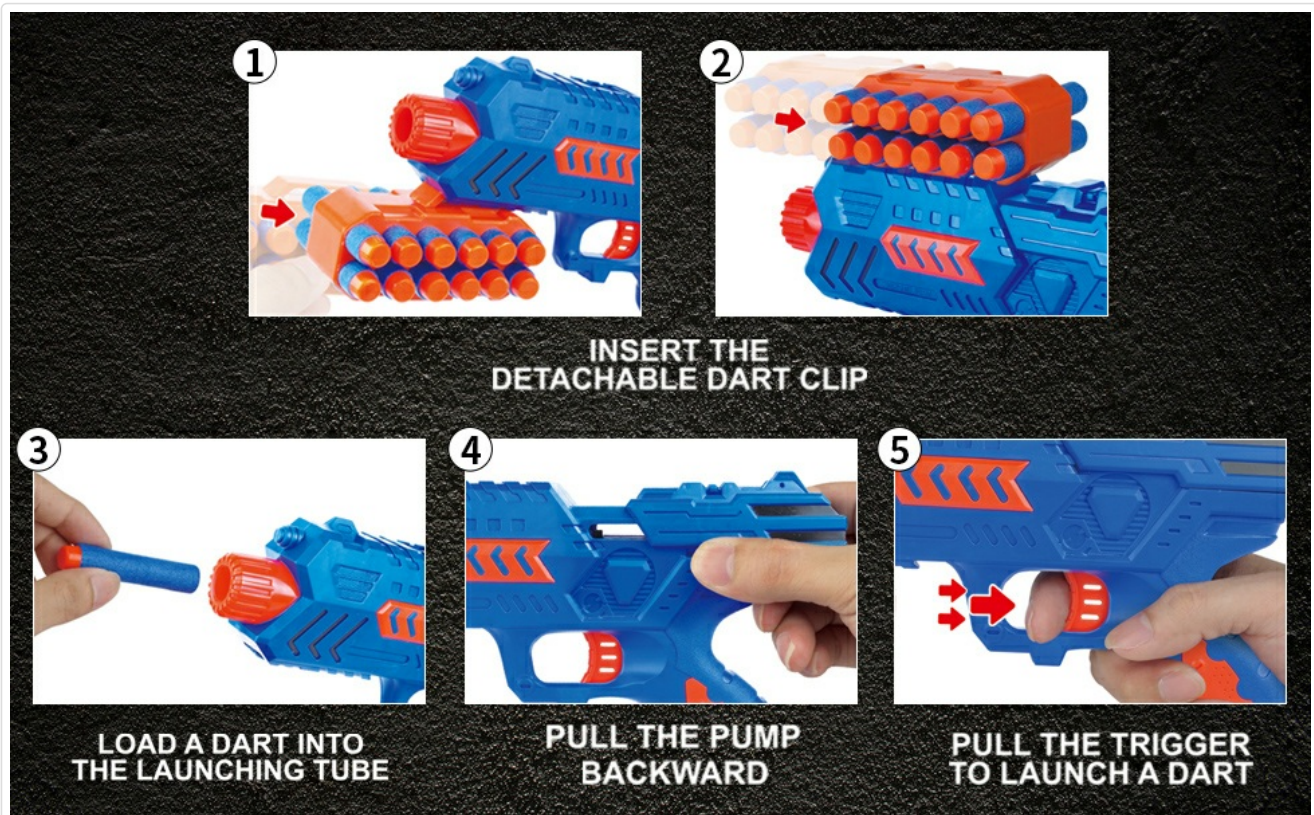


Image: A visual guide demonstrating the steps to load darts into the toy gun, including inserting the dart clip, loading darts, pulling the pump, and firing.

5. Operating Instructions

5.1. Powering On/Off

Locate the ON/OFF switch on the target base and slide it to the 'ON' position to activate the system. Slide it to 'OFF' to power down.

5.2. Shooting Targets

- Aim the foam dart toy gun at any of the four targets.
- Upon a successful hit, the target will fall backward, and the digital scoreboard will register one point.
- The system features realistic sound effects (gunshots, broken glass) and flashing lights with each hit.
- After all four targets are hit, they will automatically reset to the upright position after 3 seconds, allowing for continuous play.

AUTO RESET TARGET



The four targets will rebound automatically when all are hit down



HIT ONE SHOOTING TARGET
GET ONE SCORE

Image: The auto-reset mechanism of the targets, showing them falling upon impact and then automatically returning to an upright position.



AUTO RESET TARGET



**HIT ONE SHOOTING TARGET
GET ONE SCORE**



FOUR SHOOTING TARGETS



LIGHT FLASHING & REALISTIC SOUND

Image: A detailed view of the target system highlighting the auto-reset function, the digital score display, and the light and sound indicators.

5.3. Scoring

The LED digital scoreboard displays the current score. Each target hit adds one point. The maximum score is 60 points.

5.4. Game Modes

The system supports both solo and multi-player modes, encouraging competition and practice. The auto-reset feature ensures continuous engagement.

6. Maintenance

6.1. Cleaning

Wipe the target base and toy guns with a dry, soft cloth. Do not use abrasive cleaners or immerse in water.

6.2. Battery Replacement

If the lights dim, sounds become distorted, or targets fail to reset, replace the batteries in the target base following the instructions in Section 4.1.

6.3. Storage

Store the product in a cool, dry place away from direct sunlight when not in use. Remove batteries if storing for extended periods.

7. Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Target system does not power on.	Batteries are incorrectly installed or depleted.	Check battery polarity or replace with new AA batteries.
Targets do not reset automatically.	Low battery power or obstruction in the reset mechanism.	Replace batteries. Ensure no debris is blocking the target's movement.
Scoreboard not updating.	Target not fully hit or sensor malfunction.	Ensure darts hit the target directly. Check battery power.
No sound or light effects.	Low battery power or internal component issue.	Replace batteries. If the issue persists, contact customer support.

8. Specifications

Feature	Detail
Product Dimensions	12.8 x 4.3 x 6.3 inches
Item Weight	1.67 pounds
Item Model Number	BL-TARG-ETOY6
Manufacturer Recommended Age	6 years and up
Power Source	3 x AA Batteries (not included)

9. Warranty and Support

For warranty information or customer support, please refer to the product packaging or contact BAODLON directly through their official channels. Specific warranty details were not provided in the product data.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question