

EuropAce EAF 5450V

EuropAce EAF 5450V Air Fryer User Manual

Model: EAF 5450V

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the voltage indicated on the appliance corresponds to the main voltage in your home.
- Do not place the appliance against a wall or against other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- During hot air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings.
- The outer surfaces may become hot during use.

PRODUCT OVERVIEW

The EuropAce EAF 5450V Air Fryer is designed for healthy cooking with its 3-dimensional circulation system, ensuring even cooking without excessive oil. It features a 4.5-liter capacity, adjustable temperature from 80°C to 200°C, and a 30-minute timer for versatile meal preparation.

Key Features:

- **4.5 Liter Cooking Capacity:** Suitable for preparing meals for families.
- **80-200°C Temperature Setting:** Wide temperature range for various recipes.
- **Up to 30 Minutes Timer:** Precise control over cooking duration.
- **3-Dimensional Circulation:** Ensures even heat distribution for consistent results.
- **Non-Stick Coating Food Basket and Food Pan:** For easy food release and cleaning.
- **Accessible Handle:** Designed for safe and easy carrying of the basket.
- **Oil-Free Cooking:** Enjoy healthier meals with less fat.

Product Components:



Figure 1: Front view of the EuropAce EAF 5450V Air Fryer in Rose Gold. Shows the main unit with the basket handle and control knob.



Figure 2: The EuropAce EAF 5450V Air Fryer with its cooking basket partially removed, showing the internal non-stick pan and the removable grill plate.



Figure 3: Rear view of the EuropAce EAF 5450V Air Fryer, displaying the air outlet vents and the power cord with a 3-pin plug.

BEFORE FIRST USE

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Clean the basket and pan thoroughly with hot water, some dishwashing liquid, and a non-abrasive sponge.

- 3. Wipe the inside and outside of the appliance with a moist cloth.
- 4. Place the appliance on a stable, horizontal, and even surface. Do not place the appliance on non-heat-resistant surfaces.
- 5. Ensure there is sufficient ventilation around the appliance.

SETUP

- 1. Place the air fryer on a stable, heat-resistant surface, ensuring at least 10 cm of clear space around the back and sides, and above the unit for proper ventilation.
- 2. Insert the power plug into a grounded wall outlet. Ensure the voltage matches the appliance's requirements (240V).
- 3. Pull the basket out of the air fryer. Place the food to be air-fried into the basket. Do not fill the basket beyond the MAX indication.
- 4. Slide the basket back into the air fryer.

OPERATING INSTRUCTIONS

The EuropAce EAF 5450V Air Fryer uses a touch control panel for setting temperature and time.

- 1. **Power On:** Plug the appliance into a power outlet. The power indicator light will illuminate.
- 2. **Set Temperature:** Use the temperature control knob to select the desired cooking temperature between 80°C and 200°C.
- 3. **Set Timer:** Use the timer knob to set the desired cooking time, up to 30 minutes.
- 4. **Start Cooking:** The air fryer will begin heating automatically once the timer is set. The heating indicator light will turn on.
- 5. **Shaking Food:** For some recipes, it may be necessary to shake the ingredients in the basket halfway through the preparation time. To do this, pull the basket out of the appliance by the handle and gently shake it. Then slide the basket back into the air fryer.
- 6. **End of Cooking:** When the timer reaches zero, a bell sound will indicate that the cooking process is complete. The heating element will turn off.
- 7. **Remove Food:** Carefully pull the basket out of the air fryer. Place it on a heat-resistant surface. Use tongs to remove the cooked food.
- 8. **Power Off:** Unplug the appliance from the wall outlet after use.

COOKING GUIDE

This section provides general guidelines for air frying various types of food. Cooking times and temperatures may vary based on food quantity, size, and desired crispiness. Always ensure food is cooked thoroughly.

Food Item	Amount (approx.)	Temperature	Time (minutes)	Shake/Notes
Frozen Fries (thin)	300-500g	180°C	15-20	Shake 2-3 times
Frozen Fries (thick)	300-500g	180°C	20-25	Shake 2-3 times
Chicken Drumsticks	2-4 pcs	180°C	20-25	Turn halfway
Steak (medium)	150-200g	200°C	8-12	Flip halfway
Spring Rolls (frozen)	6-8 pcs	200°C	8-10	Shake halfway

Note: These are approximate values. Always monitor food and adjust as needed.

MAINTENANCE AND CLEANING

Clean the appliance after every use.

- 1. **Before Cleaning:** Unplug the appliance and allow it to cool down completely.
- 2. **Basket and Pan:** Remove the basket and pan. Clean them with hot water, dishwashing liquid, and a non-abrasive sponge. The non-

stick coating allows for easy cleaning. Do not use metal kitchen utensils or abrasive cleaning materials, as this may damage the non-stick coating.

- 3. **Inside of the Appliance:** Wipe the inside of the appliance with hot water and a non-abrasive sponge.
- 4. **Heating Element:** Clean the heating element with a cleaning brush to remove any food residues.
- 5. **Outside of the Appliance:** Wipe the outside of the appliance with a moist cloth.
- 6. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not work.	The appliance is not plugged in.	Plug the main plug into a grounded wall socket.
	The timer has not been set.	Turn the timer knob to the desired preparation time.
Food not cooked evenly.	Too much food in the basket.	Reduce the amount of food in the basket. Cook in smaller batches.
	Temperature too low or time too short.	Increase temperature or cooking time.
White smoke coming from the appliance.	Fat residues from previous use.	Clean the basket and pan thoroughly after each use.
	Cooking fatty ingredients.	This is normal for fatty foods. Ensure the basket is clean.

SPECIFICATIONS

Model Number	EAF 5450V
Capacity	4.5 Liters
Wattage	1500 watts
Voltage	240 Volts
Temperature Range	80°C - 200°C
Timer	Up to 30 minutes
Control Method	Touch / Knob
Material	Plastic, Stainless Steel (Non-stick inner)

WARRANTY AND SUPPORT

The EuropAce EAF 5450V Air Fryer comes with a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official EuropAce website.

For technical support, service, or inquiries, please contact EuropAce customer service. Ensure you have your model number (EAF 5450V) and proof of purchase ready.

Manufacturer: EuropAce

Website: www.europace.com.sg

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question