

[Manuals.plus](#) /

› [Accutime](#) /

› Accutime Kids Pokemon Digital LCD Quartz Watch POK4243AZ Instruction Manual

Accutime POK4243AZ

Accutime Kids Pokemon Digital LCD Quartz Watch Instruction Manual

Model: POK4243AZ

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Accutime Kids Pokemon Digital LCD Quartz Watch, model POK4243AZ. Please read this manual carefully to ensure proper use and longevity of your watch.



Image: Front view of the Accutime Kids Pokemon Digital LCD Quartz Watch, featuring a Pokéball design on the dial and a clear digital time display.

SETUP

Initial Time Setting

Your watch comes with a pre-installed battery. To set the time:

1. Locate the buttons on the side of the watch. Typically, there are two or three buttons. Refer to the diagram below for button identification.
2. Press the **Mode** button (usually the bottom-left button) repeatedly until the time display starts flashing.
3. Use the **Set** button (usually the top-right button) to adjust the hours. Press it once to advance by one hour. Hold it down to advance rapidly.
4. Press the **Mode** button again to move to the minutes setting.
5. Use the **Set** button to adjust the minutes.
6. Once the time is set, press the **Mode** button one last time to confirm and exit the setting mode. The time will

stop flashing.



Image: Side view of the watch, illustrating the position of the control buttons used for setting the time and operating features.

OPERATING

Time Display

The watch features a clear digital LCD display that shows the current time in a 12-hour format (AM/PM indicator may be present depending on the model).

Flashing Dial Lights

This watch is equipped with flashing lights around the dial. To activate the lights:

- Press the **Light** button (usually the top-left button). The lights will flash for a few seconds and then turn off automatically.
- Repeatedly pressing the Light button may cycle through different light patterns or colors, if available.



Image: The watch displaying its LED light show feature, with colorful lights illuminating the dial.

MAINTENANCE

Cleaning

To clean your watch, wipe it gently with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish and components.

Water Resistance

This watch is generally designed for everyday wear and can withstand minor splashes. It is **not** water-resistant for swimming, showering, or submersion. Avoid exposing the watch to excessive moisture to prevent internal damage.

Battery Replacement

The watch requires 1 Product Specific battery (2XLR41, 1.5V). When the display dims or the lights stop functioning, the battery may need replacement. Battery replacement should ideally be performed by a qualified technician to ensure proper sealing and function. Refer to the back of the watch for battery type information.



Image: Rear view of the watch, displaying manufacturer information and battery specifications.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery as described in the Maintenance section.
- **Time is incorrect:** Re-set the time following the instructions in the Setup section. Ensure buttons are pressed firmly.
- **Lights are not flashing:** Check if the battery is low. If the battery is new and the lights still do not work, there may be an internal issue.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though this model typically does not have one). If unresponsive, a battery issue or internal fault may be present.

If problems persist after attempting these solutions, contact customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	POK4243AZ
Display Type	Digital LCD
Movement	Quartz
Battery Type	1 Product Specific (2XLR41, 1.5V)
Case Material	Plastic
Strap Material	Plastic
Water Resistance	Splash Resistant (Not for swimming/showering)
Recommended Age	6 years and up

WARRANTY AND SUPPORT

This Accutime watch is covered by a manufacturer's warranty against defects in materials and workmanship. For specific warranty details, please refer to the packaging or contact Accutime customer service. For support inquiries, you may visit the official Accutime store on Amazon: [Accutime Store](#).

© 2024 Accutime Watch Corp. All rights reserved. Pokemon © 2024 Pokemon / Nintendo / Creatures / GAME FREAK.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B087N6P1SV>

More documents and user manuals: <https://manuals.plus/>