

[Manuals.plus](#) /

› [Accutime](#) /

› Accutime Kids Pokemon Digital LCD Quartz Watch Instruction Manual

Accutime POK4239AZ

Accutime Kids Pokemon Digital LCD Quartz Watch Instruction Manual

Model: POK4239AZ | Brand: Accutime

INTRODUCTION

Welcome to your Accutime Kids Pokemon Digital LCD Quartz Watch. This manual provides essential information for setting up, operating, and maintaining your watch to ensure lasting enjoyment. Please read through these instructions carefully to familiarize yourself with all features and functions.



Image: Front view of the Accutime Kids Pokemon Digital LCD Quartz Watch.

SETUP GUIDE

Inserting/Replacing Batteries

Your watch comes with batteries pre-installed. If replacement is needed, the watch requires 1 Product Specific battery (2XLR41, 1.5V). Always ensure proper polarity when inserting new batteries.

1. Locate the battery compartment on the back of the watch.
2. Carefully open the compartment using a small screwdriver (not included).
3. Remove the old batteries and insert new ones, ensuring correct polarity (+ and -).
4. Securely close the battery compartment.



Image: Rear view of the watch, highlighting the battery compartment.

Initial Time Setting

To set the time on your digital watch:

1. Press the **MODE** button (usually on the side) until the time display flashes.
2. Use the **SET** button (or another designated button) to adjust the hours.
3. Press **MODE** again to move to minutes, then use **SET** to adjust.
4. Continue pressing **MODE** to cycle through other settings like date (if applicable), and use **SET** to adjust.
5. Once all settings are correct, press **MODE** one last time to confirm and exit setting mode.

Video: This product overview video demonstrates the watch's features, including how to interact with the display and buttons for setting the time.

OPERATING YOUR WATCH

Display Functions

The watch features an easy-to-read LCD display and interactive elements:

- **Time Display:** Clearly shows hours and minutes in digital format.
- **Flashing Pikachu Dial:** The Pikachu image on the watch face flashes, adding a fun visual effect.
- **LED Light Show:** Press the designated button (refer to watch diagram if available) to activate a colorful LED light show on the dial.



Image: Detailed view of the watch's digital display.





Image: The watch displaying its LED light show feature.

Strap Adjustment

The watch features a soft plastic strap with a buckle closure, designed for an adjustable and comfortable fit for wrists ranging from 5.5" to 8".

1. Unbuckle the strap.
2. Adjust the strap length by moving the buckle pin to the desired hole that provides a snug yet comfortable fit.
3. Ensure the strap is securely fastened to prevent the watch from falling off.



Image: The watch strap featuring colorful Pokemon characters.

CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your Accutime Kids Pokemon Digital Watch, follow these care

guidelines:

- **Cleaning:** Wipe the watch with a soft, dry cloth. Avoid using abrasive cleaners or harsh chemicals, as they may damage the watch's finish or strap.
- **Water Resistance:** This watch is not designed for water immersion. Avoid contact with water, including swimming, showering, or heavy rain, to prevent internal damage.
- **Storage:** When not in use, store the watch in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Life:** Replace batteries promptly when the display dims or stops functioning to prevent potential battery leakage, which could damage the watch.

TROUBLESHOOTING

If you encounter any issues with your watch, please refer to the following table for common problems and their solutions:

Problem	Solution
Watch display is blank or dim.	Check the battery. Replace if necessary. Ensure batteries are inserted with correct polarity.
Time is incorrect or not advancing.	Reset the time using the setup instructions provided in this manual. Ensure the watch is not in setting mode.
Buttons are unresponsive.	Try removing and reinserting the battery to perform a hard reset. If the issue persists, contact customer support.
Flashing dial or LED lights are not working.	Ensure the watch has sufficient battery power. If the feature is button-activated, press the correct button firmly.

PRODUCT SPECIFICATIONS

- **Brand:** Accutime
- **Model:** POK4239AZ
- **Display Type:** Digital LCD
- **Case Dimensions:** 36mm
- **Battery Type:** 1 Product Specific battery (2XLR41, 1.5V) (included)
- **Strap Material:** Soft Plastic
- **Strap Fit:** Adjustable for 5.5" to 8" wrists
- **Features:** Flashing Pikachu Dial, Colorful Pokemon Strap, Easy-to-Read Digital Display

WARRANTY AND CUSTOMER SUPPORT

Accutime provides a limited warranty for manufacturing defects. For specific warranty details or technical support, please visit the official Accutime website or contact their customer service department.

Online Support: [Visit the Accutime Store on Amazon](#)

Please have your model number (POK4239AZ) and purchase information ready when contacting support for efficient service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question