



Manuals.plus /

› eKids /

› eKids Harry Potter Bluetooth Speaker Instruction Manual

## eKids Harry Potter

# eKids Harry Potter Bluetooth Speaker Instruction Manual

Model: Harry Potter

## INTRODUCTION

---

Thank you for purchasing the eKids Harry Potter Bluetooth Speaker. This portable wireless speaker is designed to provide clear audio from your Bluetooth-enabled devices. This manual provides essential information for setting up, operating, and maintaining your speaker.



Image: Front view of the eKids Harry Potter Bluetooth Speaker, featuring the Harry Potter character design.

## SAFETY INFORMATION

---

Please read and follow all safety instructions before using this product to prevent injury or damage.

- Do not expose the unit to extreme temperatures, direct sunlight, or moisture.
- Do not immerse the unit in water. This product is not waterproof.
- Use only the provided charging cable.
- Do not attempt to disassemble or modify the unit.
- Keep out of reach of small children.
- Dispose of batteries properly according to local regulations.

## PACKAGE CONTENTS

---

Verify that all items are present in the package:

- Harry Potter Bluetooth Speaker

- Micro USB Charging Cable
- Wrist Strap

## PRODUCT OVERVIEW

Familiarize yourself with the components of your speaker:



Image: Diagram showing the speaker's dimensions (2.2 inches / 56mm height, 1.8 inches / 46mm width) and labeled parts including the speaker grille, slot to attach wrist strap, port for charging (Micro USB), and Power/Pairing Button.

- **Speaker Grille:** Located at the top for audio output.
- **Power/Pairing Button:** Controls power and initiates Bluetooth pairing.
- **Charging Port:** Micro USB port for connecting the charging cable.
- **Wrist Strap Slot:** For attaching the included wrist strap.

## CHARGING THE SPEAKER

The speaker is powered by a built-in rechargeable Lithium-Ion battery. Before first use, fully charge the speaker.

1. Connect the small end of the Micro USB charging cable to the Charging Port on the speaker.
2. Connect the large end of the Micro USB charging cable to a powered USB port (e.g., computer, USB wall adapter).
3. The charging indicator light (if present, refer to product for exact location) will illuminate during charging and turn off when fully charged.
4. Charging time may vary. Disconnect the cable once charging is complete.

## BLUETOOTH PAIRING

Follow these steps to connect your speaker to a Bluetooth-enabled device:

1. Ensure the speaker is fully charged.
2. Press and hold the **Power/Pairing Button** on the speaker until you hear an audible prompt or see an indicator light flashing, indicating it is in pairing mode.
3. On your Bluetooth-enabled device (smartphone, tablet, computer, etc.), go to the Bluetooth settings menu.
4. Enable Bluetooth and search for available devices.
5. Select "Harry Potter Speaker" (or similar name) from the list of devices.
6. Once paired, you will hear a confirmation tone, and the indicator light will stop flashing.
7. The speaker can wirelessly stream audio up to 30 feet from your device.



Image: The Harry Potter Bluetooth Speaker shown with icons representing compatible devices: mobile phone, tablet, notebook, PC, smart watch, and game device.

## OPERATION

After successful pairing, you can begin playing audio:

- **Playing Audio:** Start playing music or other audio content on your paired device. The sound will be transmitted to the speaker.
- **Volume Control:** Adjust the volume directly from your paired device.
- **Power On/Off:** Press and hold the **Power/Pairing Button** to turn the speaker on or off.



Image: The Harry Potter Bluetooth Speaker, with its wrist strap, attached to the handlebar of a bicycle, demonstrating its portability for outdoor use.

## MAINTENANCE

---

To ensure the longevity of your speaker, follow these maintenance guidelines:

- **Cleaning:** Wipe the speaker with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not used often.

## TROUBLESHOOTING

---

If you encounter issues with your speaker, refer to the following table:

Problem	Solution
Speaker does not turn on.	Ensure the battery is charged. Connect the speaker to a power source using the Micro USB cable.
Cannot pair with a Bluetooth device.	Ensure the speaker is in pairing mode (indicator light flashing). Make sure Bluetooth is enabled on your device. Move the speaker closer to your device (within 30 feet). Turn off and on both the speaker and your device, then try pairing again. Forget the device from your Bluetooth settings and re-pair.
No sound or low volume.	Ensure the speaker is paired correctly. Increase the volume on both the speaker (if applicable) and your paired device. Check if the audio source on your device is playing.
Poor audio quality.	Move the speaker closer to your device to reduce interference. Ensure there are no obstructions between the speaker and your device. Try playing a different audio file or source.

## SPECIFICATIONS

Feature	Detail
Brand	eKids
Model Name	Harry Potter
Connectivity Technology	Bluetooth, USB
Speaker Maximum Output Power	10 Watts
Audio Output Mode	Stereo
Speaker Type	Portable
Control Method	Button
Speaker Size	40 Millimeters
Power Source	Battery Powered (1 Lithium Ion battery included)
Compatible Devices	Personal Computer, Smartphone, Tablet, Television
Is Waterproof	FALSE
UPC	092298948775
ASIN	B087NFC293

## WARRANTY AND SUPPORT

---

This product comes with a Limited Warranty. For specific warranty details, please refer to the documentation included with your purchase or contact eKids customer support.

For technical support or further assistance, please visit the eKids official website or contact their customer service department. Keep your purchase receipt for warranty claims.