

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Home Accents Holiday](#) /
- › [Home Accents Holiday 22 ft. 100 Clear Mini Incandescent Lights User Manual](#)

Home Accents Holiday L1100013CU01

Home Accents Holiday 22 ft. 100 Clear Mini Incandescent Lights User Manual

Model: L1100013CU01

INTRODUCTION

This manual provides instructions for the safe installation, operation, and maintenance of your Home Accents Holiday 22 ft. 100 Clear Mini Incandescent Lights. Please read these instructions thoroughly before use and retain them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire and electric shock, do not install on trees having needles, leaves, or branch coverings of metal or materials that look like metal. Do not mount or support strings in a manner that can cut or damage wire insulation.

- For indoor use. While the product is water resistant, prolonged outdoor exposure to harsh weather is not recommended.
- Do not overload. Connect a maximum of 5 sets of these lights end-to-end. Exceeding this limit may cause overheating.
- Always unplug the lights from the power source before performing any maintenance or bulb replacement.
- Do not operate lights with damaged cords or loose bulb sockets. Inspect the string lights before each use.
- Keep children and pets away from the lights during operation.
- Ensure all bulbs are securely seated in their sockets before plugging in.



Image: The green electrical plug, designed for standard outlets, ensures safe power connection for the light set.

PACKAGE CONTENTS

Verify that all components are present in your package:

- 2 x 22 ft. 100 Clear Mini Incandescent Light Sets (Green Cord)
- 8 x Spare Incandescent Bulbs (4 per pack)
- 4 x Spare Fuses (2 per pack)



Image: The product box displays key features and contents, including the 100 clear mini lights and green cord.

SETUP INSTRUCTIONS

1. Carefully remove the light sets from their packaging.
2. Uncoil each light string completely to prevent tangling and ensure proper function.
3. Inspect the entire length of the cord and all bulbs for any damage or loose connections. Do not use if damage is found.
4. Determine your desired placement for the lights. Ensure the location is dry and protected

from direct moisture if used indoors.

5. If connecting multiple sets, align the end plug of one set with the beginning receptacle of the next. Push firmly to ensure a secure connection. Remember the maximum of 5 sets per outlet.
6. Secure the light string in place using appropriate clips or ties, ensuring not to pinch or damage the wire insulation.
7. Plug the main power plug into a standard 120V AC electrical outlet.



Image: The string of clear mini incandescent lights with green wire is shown laid out, illustrating its length and bulb spacing for setup.

OPERATION

Once properly set up and plugged into a power source, the lights will illuminate. There are no additional controls for these standard incandescent string lights. To turn off, simply unplug the string from the electrical outlet.



Image: A close-up view of several illuminated clear mini incandescent bulbs on a green wire, demonstrating their warm glow during operation.

MAINTENANCE

Bulb Replacement

These lights feature a 'If One Bulb Burns Out, the Others Stay Lit' design. However, it is recommended to replace burnt-out bulbs promptly to maintain optimal performance and extend the life of the string.

1. Unplug the light string from the power outlet.
2. Gently pull the burnt-out bulb straight out from its socket.
3. Insert a new spare bulb (provided) into the empty socket, ensuring it is fully seated.
4. Plug the light string back in to test the new bulb.

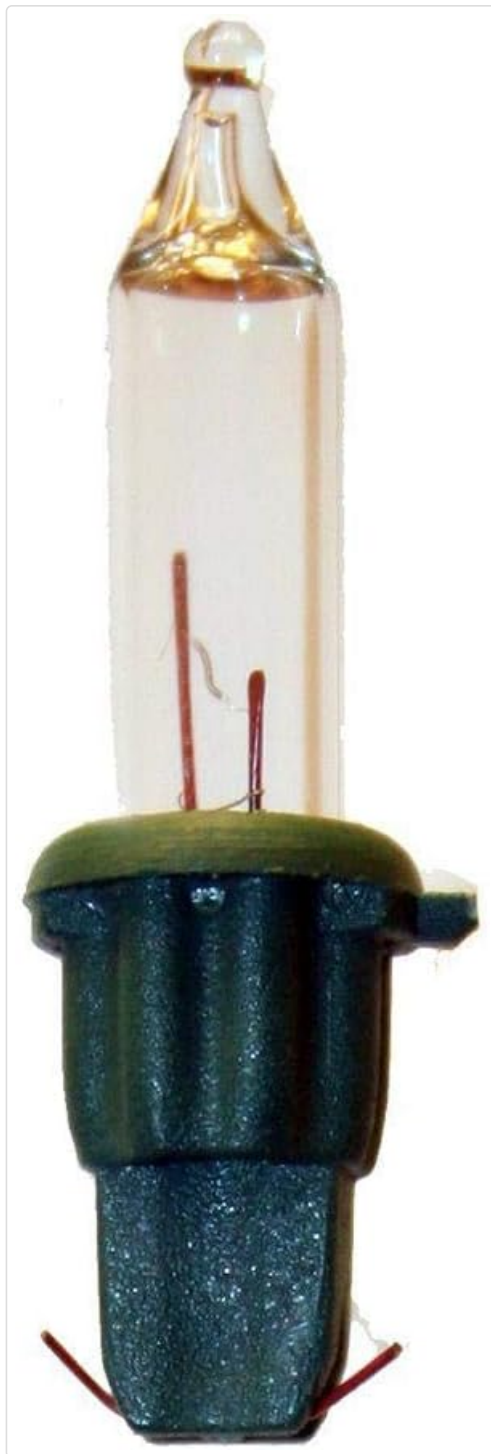


Image: A detailed view of a single clear mini incandescent replacement bulb, showing its base and filament, essential for maintenance.

Fuse Replacement

If the entire string fails to light, check the fuse located in the plug.

1. Unplug the light string.
2. Slide open the fuse access cover on the plug (refer to plug diagram if available).
3. Carefully remove the old fuse(s).
4. Insert new spare fuse(s) of the same type and rating.
5. Close the fuse access cover.
6. Plug the light string back in to test.

Storage

When not in use, carefully coil the light string and store it in a cool, dry place, away from direct sunlight and extreme temperatures. Using the original packaging or a dedicated storage container can help prevent tangling and damage.

TROUBLESHOOTING

- **Lights not illuminating:**
 - Ensure the plug is fully inserted into a working electrical outlet.
 - Check the fuse in the plug and replace if blown (refer to Fuse Replacement section).
 - Inspect for any loose or burnt-out bulbs and replace them.
- **Section of lights not working:**
 - This usually indicates a loose or burnt-out bulb within that section. Systematically check and replace bulbs in the affected area.
 - Ensure all bulbs are securely seated in their sockets.
- **Flickering lights:**
 - Check for loose bulbs or connections.
 - Ensure you have not exceeded the maximum number of connected sets (5 sets).

PRODUCT SPECIFICATIONS

| Specification | Detail |
|----------------------|---------------------------|
| Brand | Home Accents Holiday |
| Model Number | L1100013CU01 |
| Light Type | Incandescent Mini Lights |
| Number of Lights | 100 per set |
| Lighted Length | 22 ft. (approx.) |
| Wire Color | Green |
| Bulb Color | Clear (White Light) |
| Power Source | Corded Electric |
| Voltage | 120 Volts (AC) |
| Wattage | 1 Watt per bulb (approx.) |
| Indoor/Outdoor Usage | Indoor (Water Resistant) |
| Connectable | Up to 5 sets |
| UPC | 192072506259 |

WARRANTY AND CUSTOMER SUPPORT

This product comes with a **1-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from misuse, accident, modification, or unauthorized repair.

For warranty claims, technical assistance, or to purchase replacement parts, please contact Home Accents Holiday customer support. Refer to the product packaging or the retailer's website for current contact information.