

PRITOM TAB 12

PRITOM TAB12 Android 14 Tablet User Manual

Model: TAB 12

1. INTRODUCTION

Thank you for choosing the PRITOM TAB12 Android 14 Tablet. This device is designed to provide a high-performance and versatile user experience. This manual will guide you through the setup, operation, and maintenance of your new tablet.

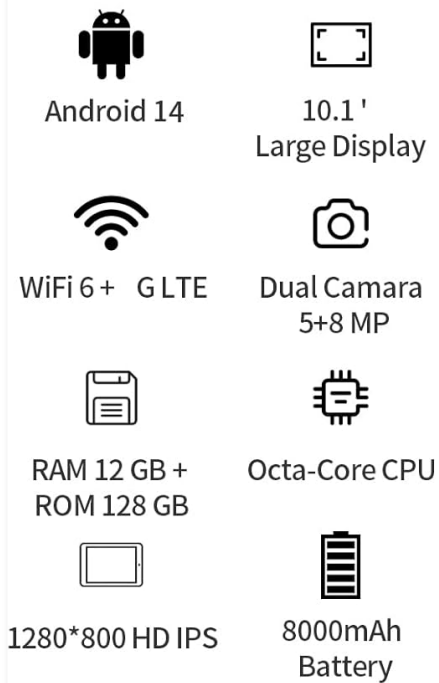 


Image 1.1: PRITOM TAB12 Tablet showcasing Android 14, 10.1" Large Display, WiFi 6 + 4G LTE, Dual Camera (5+8 MP), 12GB RAM + 128GB ROM, Octa-Core CPU, 1280*800 HD IPS, and 8000mAh Battery.

2. What's in the Box

Please check the contents of your package. If any items are missing or damaged, contact customer support.

- PRITOM TAB 12 Tablet
- Type C Charging/Data Cable
- Charger
- HD Film (Pre-installed or included separately)
- User Guide
- Durable Protective Case

TAB12 Tablet comes with a premium PU leather case



Image 2.1: The PRITOM TAB12 Tablet shown alongside its included premium PU leather case.

3. PRODUCT OVERVIEW

Familiarize yourself with the physical components of your PRITOM TAB12 tablet.

3.1 Physical Features

- **10.1-inch HD IPS Display:** Vibrant and clear visual experience.
- **Front Camera:** For video calls and selfies.
- **Rear Camera:** For capturing photos and videos.
- **Power Button:** To turn the device on/off or put it to sleep/wake it up.
- **Volume Buttons:** To adjust the audio volume.
- **USB-C Port:** For charging and data transfer.
- **MicroSD Card Slot:** For expandable storage.
- **SIM Card Slot:** For 4G network connectivity and phone call function.
- **Headphone Jack:** For connecting wired headphones.
- **Dual Box Speakers:** For enhanced audio output.

Video 3.1: An overview of the PRITOM TAB12 Tablet PC, highlighting its design, camera, memory, display, and connectivity features.

4. INITIAL SETUP

4.1 Powering On/Off

- **To Power On:** Press and hold the Power Button until the PRITOM logo appears.
- **To Power Off:** Press and hold the Power Button, then select "Power off" from the options.
- **Sleep/Wake:** Briefly press the Power Button to put the tablet to sleep or wake it up.

4.2 First-Time Use

Upon first power-on, follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.
- Sign in with your Google Account or create a new one. This is essential for downloading apps from the Google Play Store.
- Set up screen lock (PIN, Pattern, Password).

4.3 Inserting SIM/MicroSD Card

Use the provided SIM ejector tool to open the SIM/MicroSD card tray. Carefully place your SIM card(s) and/or MicroSD card into the tray, ensuring correct orientation, then reinsert the tray into the tablet.

5. BASIC OPERATION

5.1 Navigation

The Android 14 operating system provides intuitive navigation:

- **Home Screen:** Swipe left/right to access different pages.
- **App Drawer:** Swipe up from the bottom of the screen to view all installed apps.
- **Notifications/Quick Settings:** Swipe down from the top of the screen to access notifications and quick settings toggles (Wi-Fi, Bluetooth, Brightness, etc.).

5.2 Apps and Google Play Store

Your PRITOM TAB12 is Google Certified, allowing full access to the Google Play Store. You can download thousands of applications, including streaming services, games, and productivity tools.

TAB 12 Tablet with GMS Certification

Got GMS certified, you are easy to access to the games and apps on Play store.



Image 5.1: The PRITOM TAB12 Tablet displaying the Google Play Store and various popular applications, indicating GMS certification.

5.3 Display and Audio

The 10.1-inch HD IPS display offers clear visuals, while the dual box speakers provide an immersive audio experience.

- **Brightness:** Adjust screen brightness via Quick Settings or Display settings.
- **Eye Health Mode:** Reduce blue light for comfortable reading in Display settings.
- **Volume:** Use the physical volume buttons or Quick Settings to adjust sound levels.

1280*800 HD IPS Display

PRITOM TAB 12 meets all your daily, you can use it for work, learn and play, it gives you HD visual experience



Image 5.2: A user enjoying content on the PRITOM TAB12's 1280x800 HD IPS display, highlighting its visual quality.

 
5.4 Camera Usage

The tablet features a 5.0 MP front camera and an 8.0 MP rear camera for capturing moments.

- Open the Camera app from the home screen or app drawer.
- Tap the shutter button to take a photo.
- Switch between photo and video modes as needed.
- Use the camera toggle to switch between front and rear cameras.

Dual Camera

8.0
MP
Rear

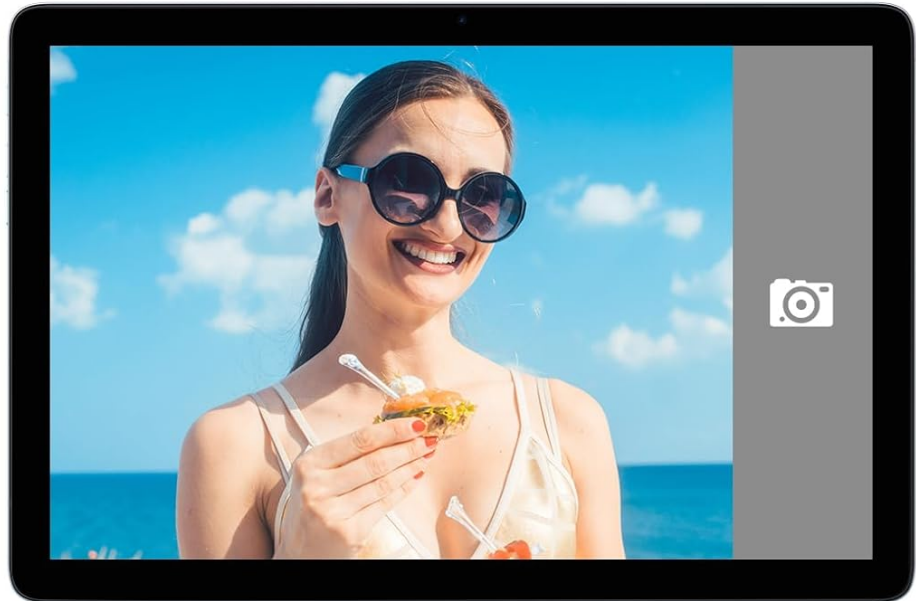

5.0
MP
Front

Image 5.3: Examples of images captured using the PRITOM TAB12's 8.0 MP rear camera and 5.0 MP front camera.

6. CONNECTIVITY

The PRITOM TAB12 supports various connectivity options:

- **Wi-Fi:** Supports 5G & 2.4G dual-band Wi-Fi (802.11ac) for fast internet access.
- **4G Network:** Insert a SIM card to enable 4G mobile data and phone call functions.
- **Bluetooth:** Connect to Bluetooth headphones, speakers, and other accessories.

 
7. BATTERY MANAGEMENT

The tablet is equipped with an 8000mAh Lithium-Cobalt battery.

- **Charging:** Use the provided Type C charging cable and adapter.
- **Battery Life:** Expect up to 12 hours of mixed reading, watching TV shows, or surfing the web, and 2-3

hours of gaming.

- **Tips for Longevity:** Reduce screen brightness, close unused apps, and disable Wi-Fi/Bluetooth when not in use.

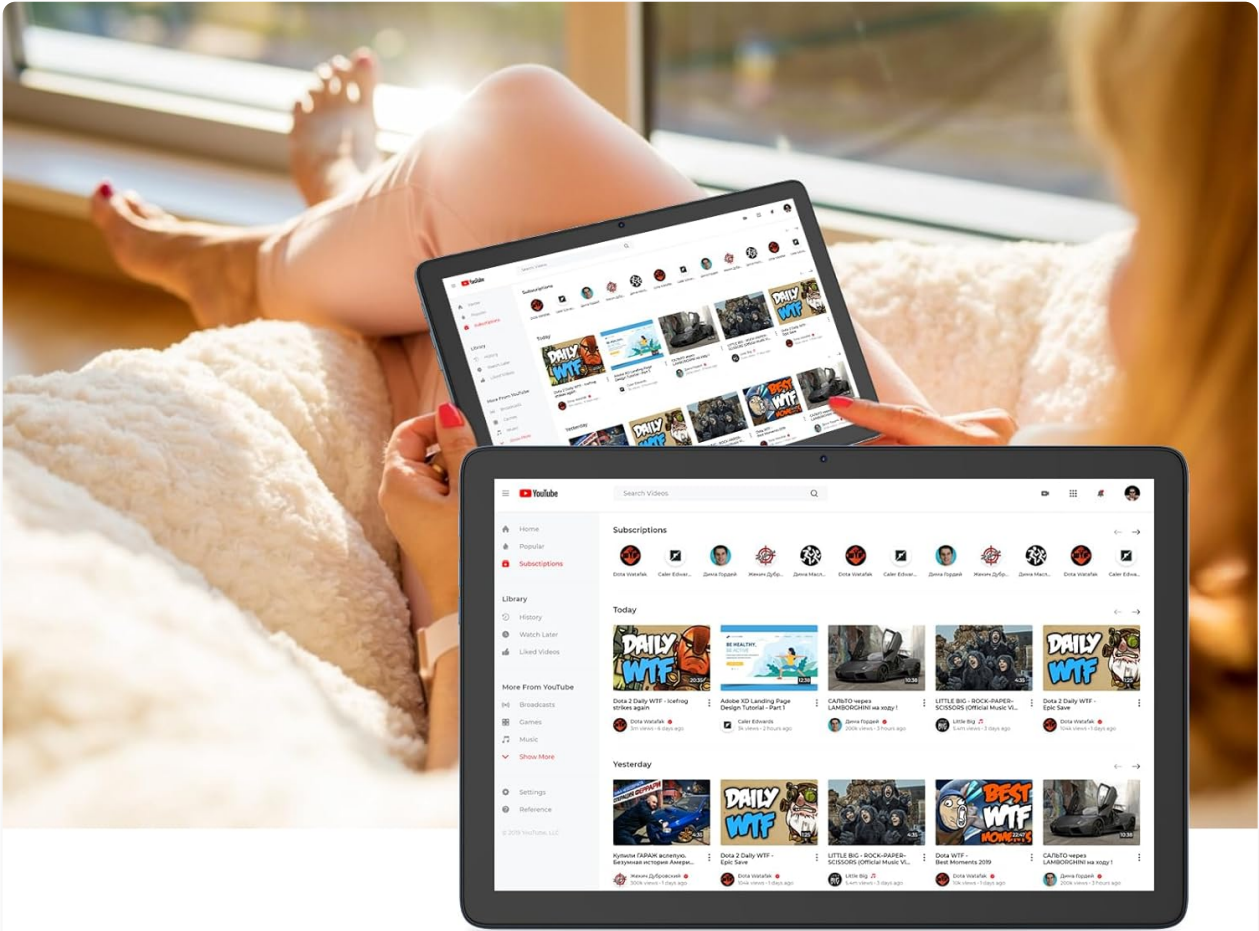

8000 mAh Large Capacity

Mixed use for more than 10 hours, You can download the apps from Play Store, it is great for entertainment and travelling.

Image 7.1: The PRITOM TAB12 Tablet highlighting its 8000 mAh large capacity battery, suitable for extended entertainment and travel.

8. SPECIFICATIONS

Key technical details of the PRITOM TAB12 tablet:

Feature	Specification
Operating System	Android 14
Processor	2.0 GHz Octa-core 64Bit (Unisoc)
RAM	12GB (6GB Virtual Extended)
Internal Storage	128GB Flash Memory
Expandable Storage	MicroSD Card Slot (up to 1TB)

Screen Size	10.1 Inches
Screen Resolution	1280x800 HD IPS
Rear Camera	8.0 MP
Front Camera	5.0 MP
Wi-Fi	5G & 2.4G Dual Band (802.11ac)
Cellular Network	4G (SIM Card Slot)
Bluetooth	Yes
Battery Capacity	8000mAh Lithium-Cobalt
Average Battery Life	12 Hours (mixed use)
Dimensions	9.5 x 6.3 x 0.3 inches
Item Weight	2.4 pounds

9. MAINTENANCE & CARE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid harsh chemicals.
- **Software Updates:** Regularly check for system updates in Settings > System > System update to ensure optimal performance and security.
- **Storage Management:** Periodically clear cache, delete unused apps, and transfer large files to expandable storage to maintain performance.
- **Battery Care:** Avoid extreme temperatures and do not let the battery completely drain frequently.

10. TROUBLESHOOTING

If you encounter issues with your tablet, try the following solutions:

- **Device not responding:** Press and hold the Power Button for 10-15 seconds to force a restart.
- **Wi-Fi connection issues:** Ensure Wi-Fi is enabled, restart your router, or forget and reconnect to the network.
- **Apps crashing:** Clear the app's cache (Settings > Apps > [App Name] > Storage & cache > Clear cache) or reinstall the app.
- **Slow performance:** Close background apps, free up storage space, or perform a factory reset (Settings > System > Reset options > Erase all data (factory reset) - *Note: This will delete all data.*).

11. WARRANTY & SUPPORT

The PRITOM TAB12 Android Tablet comes with a **1-year worry-free guarantee**. If there is a quality issue with the tablet, you may return it for a free replacement.

For further assistance or to claim your warranty, please contact PRITOM customer service via email. The PRITOM team is dedicated to providing reliable customer service and ensuring a pleasant shopping experience.

Contact Information: Refer to the contact details provided in your product packaging or visit the official

