

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TechniSat](#) /

› [TechniSat DIGITRADIO 370 CD IR - Instruction Manual](#)

TechniSat 0000/3949

TechniSat DIGITRADIO 370 CD IR - Instruction Manual

Model: 0000/3949

1. INTRODUCTION

The TechniSat DIGITRADIO 370 CD IR is a versatile audio system designed for comprehensive entertainment. It offers reception of DAB+, FM, and Internet radio, an integrated CD player, and wireless music streaming via Bluetooth. Additional features include USB playback, AUX input, a headphone jack, and an alarm function. This manual provides detailed instructions for setting up, operating, and maintaining your device.

2. SAFETY INFORMATION

- **Power Source:** Use only the specified power adapter. Ensure the voltage matches your local power supply.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the device for proper airflow to prevent overheating.
- **Water and Moisture:** Do not expose the device to rain, moisture, or dripping/splashing liquids. Do not place objects filled with liquids, such as vases, on the device.
- **Heat Sources:** Keep the device away from heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- **Cleaning:** Unplug the device before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **CD Player Safety:** Do not insert foreign objects into the CD tray. Handle CDs by their edges to avoid scratches.

3. PACKAGE CONTENTS

Ensure all items are present in the package:

- TechniSat DIGITRADIO 370 CD IR (Black)
- Remote Control (including 2 AAA batteries)
- Instruction Manual (this document)
- Power Adapter

4. PRODUCT OVERVIEW

4.1 Front Panel

The front panel features the main display, control buttons, volume knob, and CD tray.



Image: Front view of the DIGITRADIO 370 CD IR, showing the central display, control knobs for volume and tuning, mode buttons, and the CD tray.

- **Display:** 2.4-inch color display for information, station names, and track details.
- **Power/Standby Button:** Turns the device on or off.
- **Mode Button:** Switches between DAB+, FM, Internet Radio, CD, Bluetooth, and AUX modes.
- **Volume Knob:** Adjusts the audio output level.
- **Tuning/Enter Knob:** Navigates menus and confirms selections.
- **CD Tray:** Slot for inserting audio CDs.

4.2 Rear Panel

The rear panel provides connection ports for power, USB, and auxiliary input.



Image: Rear view of the DIGITRADIO 370 CD IR, highlighting the telescopic antenna, USB port, and AUX IN jack.

- **Telescopic Antenna:** For DAB+ and FM radio reception. Extend fully for best signal.
- **USB Port:** For playing MP3 files from a USB storage device and charging mobile devices.
- **AUX IN:** 3.5mm jack for connecting external audio sources.
- **Power Input:** Connect the provided power adapter here.

4.3 Remote Control

The remote control allows convenient operation of all functions from a distance.

Inkl. Fernbedienung



CD-Player mit MP3-Funktion

Spielt die Lieblings-CDs rauf und runter.

Image: The remote control for the DIGITRADIO 370 CD IR, showing various buttons for power, mode selection, volume, navigation, and numeric input.

Insert the two AAA batteries into the remote control, observing polarity.

5. SETUP

5.1 Power Connection

1. Connect the power adapter to the DC IN port on the rear of the device.
2. Plug the power adapter into a wall outlet.
3. The device will enter standby mode.

5.2 Antenna Connection

For optimal DAB+ and FM reception, fully extend the telescopic antenna located on the rear panel.

5.3 Initial Setup Wizard

Upon first power-on, the device will guide you through an initial setup wizard:

1. **Language Selection:** Use the Tuning/Enter knob to select your preferred language and press to confirm.
2. **Network Setup (WLAN):**

- The device will scan for available Wi-Fi networks.
- Select your network from the list.
- Enter the Wi-Fi password using the on-screen keyboard and the Tuning/Enter knob.
- Confirm to connect. A successful connection is required for Internet Radio functionality.

3. **Time and Date:** The device can synchronize time and date automatically via DAB+ or Internet. Confirm the settings.

6. OPERATING INSTRUCTIONS

6.1 Basic Operation

- **Power On/Off:** Press the **Power** button on the front panel or remote control.
- **Volume Adjustment:** Rotate the **Volume** knob on the front panel or use the **VOL+** / **VOL-** buttons on the remote control.
- **Mode Selection:** Press the **MODE** button on the front panel or remote control to cycle through available sources (DAB+, FM, Internet Radio, CD, Bluetooth, AUX).

6.2 Radio Modes (DAB+, FM, Internet Radio)



The image shows a young man with short dark hair, wearing dark sunglasses and a dark blue shirt with a white geometric pattern. He is holding a gold saxophone. The background is a solid blue color. To the right of the man, there are three white logos stacked vertically. The top logo is 'dab+' in a rounded rectangle with a plus sign, and 'mehr radio' below it. The middle logo is a globe with a musical note, and 'Internetradio' below it. The bottom logo is 'UKW' above 'FM' with a horizontal line between them.

Radio via DAB+ / Internet / UKW

Digitalradio für volle Programmvielfalt -
auch in digitaler Qualität

Image: The radio's display showing information for a DAB+ station, including station name and program details.

1. **Selecting a Mode:** Press **MODE** until the desired radio mode (DAB+, FM, or Internet Radio) is selected.


2. **Scanning for Stations:**

- In DAB+ or FM mode, the device may automatically scan for stations upon first use or when entering the mode.
- For Internet Radio, navigate through categories (e.g., genre, location) using the Tuning/Enter knob to find stations.

3. **Station Presets:**

- To save a station: Tune to the desired station, then press and hold the **PRESET** button until the 'Save Preset' menu appears. Select a preset number and confirm.
- To recall a station: Press the **PRESET** button briefly, then use the Tuning/Enter knob to select a saved preset and confirm.

6.3 CD Player

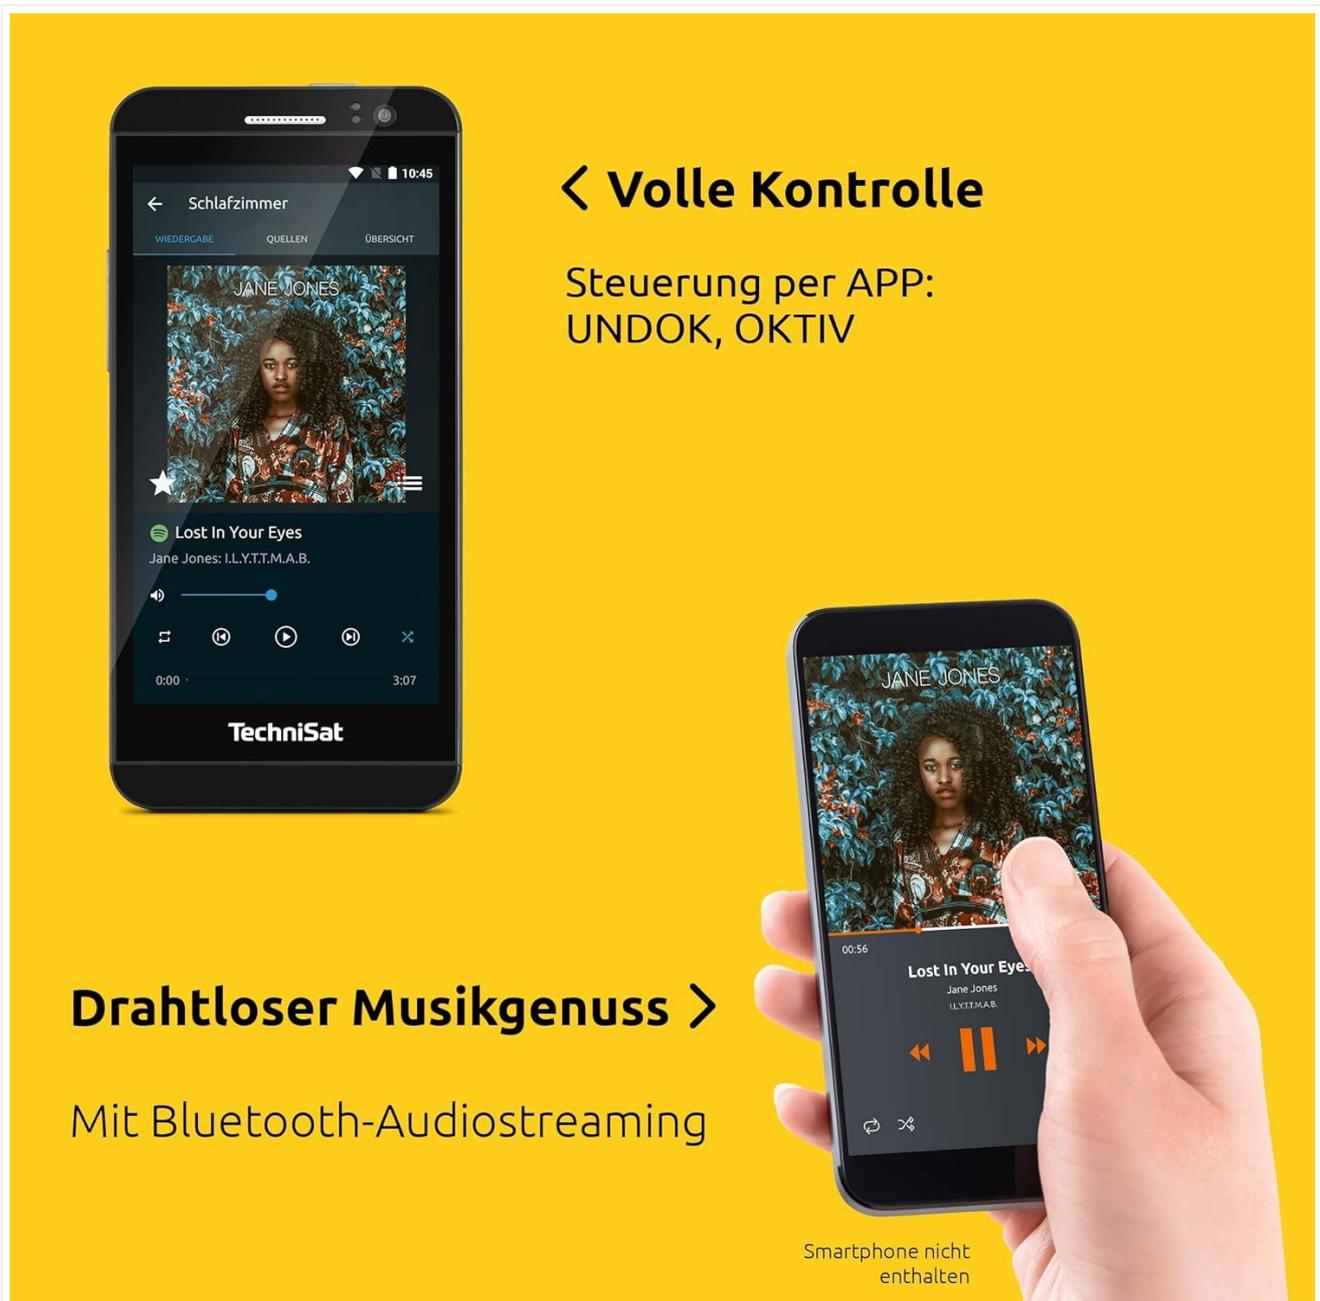

The advertisement features a bright yellow background. On the left, a smartphone displays a music player interface with the album cover for 'Lost In Your Eyes' by Jane Jones. The interface includes a back arrow, the room name 'Schlafzimmer', tabs for 'WIEDERGABE', 'QUELLEN', and 'ÜBERSICHT', a star icon, the song title, artist name, a volume slider, and playback controls. The TechniSat logo is at the bottom. To the right, a hand holds a smartphone showing the same music player interface, with a finger touching the play/pause button. Text on the right reads '< Volle Kontrolle' and 'Steuerung per APP: UNDOK, OKTIV'. At the bottom left, it says 'Drahtloser Musikgenuss >' and 'Mit Bluetooth-Audiostreaming'. At the bottom right, it says 'Smartphone nicht enthalten'.

Image: The CD player tray of the DIGITRADIO 370 CD IR, shown open with a CD inserted.

1. **Inserting a CD:** Gently insert an audio CD (or MP3 CD) into the CD slot on the front panel. The device will automatically switch to CD mode and begin playback.

2. **Playback Controls:** Use the **Play/Pause**, **Skip Forward**, and **Skip Backward** buttons on the front panel or remote

control.

6.4 Bluetooth Streaming



Image: A smartphone screen showing a music playback interface, indicating wireless music enjoyment via Bluetooth audio streaming.

1. **Enable Bluetooth:** Press **MODE** to select Bluetooth mode. The display will show "Pairing".
2. **Pairing:** On your mobile device (smartphone, tablet), enable Bluetooth and search for "DIGITRADIO 370 CD IR". Select it to pair.
3. **Playback:** Once paired, you can stream audio from your mobile device to the radio. Control playback (play/pause, skip) from your mobile device or the radio's controls.

6.5 USB Playback and Charging

The USB port on the rear panel supports MP3 file playback and charging for compatible devices.

1. **USB Playback:** Insert a USB storage device containing MP3 files into the USB port. Select USB mode via the **MODE** button. The device will scan and display playable files. Use the Tuning/Enter knob to navigate and select.
2. **USB Charging:** Connect your mobile device to the USB port using a compatible cable. The device will begin charging.

6.6 AUX Input

Connect external audio sources like an MP3 player or older devices using a 3.5mm audio cable to the AUX IN port on the rear panel. Select AUX mode via the **MODE** button.

6.7 Alarm and Sleep Timer

- **Setting an Alarm:** Access the alarm settings through the system menu. You can set multiple alarms with different sources (e.g., buzzer, radio) and volumes.
- **Sleep Timer:** The sleep timer allows the radio to turn off automatically after a set period. Access this function through the system menu and select the desired duration.

6.8 App Control (TechniSat Connect)

The DIGITRADIO 370 CD IR can be controlled using the TechniSat Connect app on your smartphone or tablet. Download the app from your device's app store and follow the in-app instructions to connect to your radio.

7. MAINTENANCE

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry, lint-free cloth to wipe the exterior surfaces. Do not use abrasive cleaners, waxes, or solvents.
- **CD Player Care:** Keep the CD tray clean and free of dust. Do not touch the lens inside the CD player.
- **Storage:** If storing the device for an extended period, unplug it from the power outlet and store it in a cool, dry place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; power outlet faulty.	Check power cable connection; try a different outlet.
No sound	Volume too low; wrong input mode selected; headphones connected.	Increase volume; select correct mode; disconnect headphones.
Poor radio reception (DAB+/FM)	Antenna not extended; weak signal; interference.	Fully extend antenna; reposition the radio; perform a new station scan.
Cannot connect to Wi-Fi	Incorrect password; router too far; network issues.	Verify password; move radio closer to router; restart router.
Bluetooth pairing fails	Device not in pairing mode; mobile device Bluetooth off.	Ensure radio is in Bluetooth pairing mode; enable Bluetooth on mobile device.
CD not playing	CD inserted incorrectly; CD scratched/dirty; unsupported format.	Reinsert CD correctly; clean CD; ensure it's an audio CD or MP3 CD.

9. SPECIFICATIONS

Brand	TechniSat
Model Number	0000/3949
Connectivity Technology	Auxiliary, Bluetooth, Wi-Fi
Special Features	Bluetooth, Timer, Alarm Function, CD Player, Internet Radio, DAB+, FM
Supported Standards	Bluetooth, CD-R, CD-RW, MP3, USB, AUX
Total USB Ports	1 (for playback and charging)
Speaker Type	Multimedia (2 x 5 Watt RMS stereo speakers)
Display	2.4-inch Color Display
Power Source	Corded Electric
Dimensions (L x W x H)	35 x 21 x 12 centimeters
Item Weight	2.75 Kilograms

10. WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

- **Manufacturer Warranty:** 2 years (as per German law, "2 Jahre Gewährleistung").
- **Spare Parts Availability:** 1 year.
- For technical support or service inquiries, please visit the official TechniSat website or contact their customer service.