

Ikea Solblekt 204.608.64

Ikea Solblekt Rocking Chair User Manual

Model: Solblekt 204.608.64

1. INTRODUCTION

Thank you for choosing the Ikea Solblekt Rocking Chair. This manual provides essential information for the safe and effective use, assembly, and maintenance of your new rocking chair. Please read this manual thoroughly before using the product and retain it for future reference.

The Solblekt rocking chair is designed for outdoor relaxation, featuring a foldable eucalyptus wood frame and a durable, striped polyester fabric seat and backrest.

2. SAFETY INFORMATION

- **Outdoor Use Only:** This rocking chair is designed exclusively for outdoor environments.
- **Weight Capacity:** Do not exceed the maximum weight capacity of **220 lb (100 kg)**. Overloading may cause damage or injury.
- **Stable Surface:** Always place the chair on a flat, stable, and level surface to prevent tipping.
- **Folding Mechanism:** Exercise caution when folding or unfolding the chair to avoid pinching fingers or hands. Ensure the locking mechanism is fully engaged before use.
- **Children:** Keep children away from the folding mechanism. Supervise children when they are near or using the chair.
- **Inspection:** Regularly inspect the chair for any signs of wear, damage, or loose components. Do not use if damaged.

3. PACKAGE CONTENTS

Verify that all components are present before proceeding with setup.

- 1 x Ikea Solblekt Rocking Chair (Folded)
- 1 x Arm Pad (if separate)

4. SETUP AND UNFOLDING INSTRUCTIONS

The Ikea Solblekt Rocking Chair comes pre-assembled in a folded state for convenient transport and storage. Follow these steps to unfold and prepare your chair for use:

1. Place the folded chair on a flat, stable surface.
2. Gently pull the armrests outwards, allowing the seat and backrest to expand.
3. Continue to open the chair until the seat fabric is taut and the frame is fully extended.
4. Ensure that the locking pins or mechanisms on the side of the chair frame are securely engaged. These pins prevent accidental folding during use.



Figure 1: Detail of the folding mechanism. Ensure the pin is securely engaged for safe use.

Before sitting, gently press down on the seat to confirm stability and that all parts are locked into position.

5. OPERATING INSTRUCTIONS

5.1 Using the Rocking Chair

Once unfolded and secured, the Solblekt rocking chair is ready for use. Sit comfortably in the chair and gently push off with your feet to initiate the rocking motion. The chair is designed to provide a smooth, relaxing sway.



Figure 2: The Ikea Solblekt rocking chair in its open, ready-to-use state.



Figure 3: The rocking chair used in an outdoor setting, ideal for relaxation.

5.2 Folding for Storage

To fold the chair for storage or transport:

1. Ensure no one is sitting in the chair.
2. Locate the locking pins or mechanisms on the side of the chair frame (refer to Figure 1).

- 3. Disengage the locking pins by pressing or pulling them as required by the design.
- 4. Gently push the armrests inwards, allowing the chair to collapse into its folded position.
- 5. Secure any straps or fasteners if present to keep the chair compactly folded.

6. MAINTENANCE AND CARE

6.1 Fabric Care

- The durable polyester fabric is removable and machine washable.
- Wash at a maximum temperature of 40°C (104°F) on a normal cycle.
- Do not bleach.
- Tumble dry, low temperature (max 60°C/140°F).
- Iron at a maximum temperature of 150°C (300°F).
- Do not dry clean.

6.2 Wood Frame Care

- The eucalyptus wood frame is naturally durable and resistant to weather.
- Clean the wooden frame with a mild soap solution and a damp cloth. Wipe dry with a clean, dry cloth.
- To maintain the wood's appearance and prolong its lifespan, re-stain or oil the wood regularly, especially if exposed to harsh weather conditions.
- Store the chair in a cool, dry place indoors during off-season or prolonged periods of non-use to protect it from extreme weather.

7. TROUBLESHOOTING

- **Chair feels unstable:** Ensure the chair is fully unfolded and all locking mechanisms are engaged. Verify it is placed on a flat, level surface.
- **Difficulty folding/unfolding:** Check for any obstructions in the mechanism. Ensure locking pins are fully disengaged before attempting to fold. Do not force the mechanism.
- **Squeaking during rocking:** Apply a small amount of silicone-based lubricant to the pivot points of the rocking mechanism if squeaking occurs. Avoid oil-based lubricants on wood.

8. SPECIFICATIONS

Model Name	Solblekt
Model Number	204.608.64
Brand	Ikea
Material (Frame)	Solid Eucalyptus Wood, Acrylic Stain
Material (Fabric)	100% Polyester (Recycled)
Color	Green Stripe

Dimensions (Unfolded)	Width: 60 cm (23 5/8") Depth: 74.9 cm (29 1/2") Height: 109.9 cm (43 1/4")
Seat Dimensions	Seat Width: 45 cm (17 3/4") Seat Depth: 52.1 cm (20 1/2") Seat Height: 46 cm (18 1/8")
Weight Capacity	220 lb (100 kg)
Product Weight	10 kg 500 g
Indoor/Outdoor Usage	Outdoor
Special Feature	Foldable



Figure 4: Key dimensions of the Solblekt rocking chair.

9. WARRANTY AND SUPPORT

For information regarding warranty, returns, or product support, please refer to your purchase documentation or contact Ikea customer service directly. Keep your proof of purchase for any warranty claims.

© 2023 Ikea. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question