Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > ENHANCE /
- > ENHANCE XXL LED Gaming Mouse Pad Instruction Manual

ENHANCE ENPCPXE100MCEW

ENHANCE XXL LED Gaming Mouse Pad Instruction Manual

Model: ENPCPXE100MCEW

Introduction

This manual provides instructions for the setup, operation, and maintenance of your ENHANCE XXL LED Gaming Mouse Pad. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your product.



Image: The ENHANCE XXL LED Gaming Mouse Pad, showcasing its extended size and illuminated RGB edges.

PRODUCT OVERVIEW VIDEO

Watch this video for a visual guide on the features and setup of the ENHANCE XXL LED Gaming Mouse Pad.

Your browser does not support the video tag.

Video: An official product video demonstrating the ENHANCE XXL LED Gaming Mouse Pad's features, including its RGB lighting, water resistance, and non-slip base.

SETUP INSTRUCTIONS

- 1. Unpack the Mouse Pad: Carefully remove the mouse pad from its packaging.
- 2. **Position the Mouse Pad:** Place the mouse pad on a flat, stable surface where you intend to use your keyboard and mouse.
- 3. **Connect the USB Cable:** Locate the USB cable attached to the mouse pad's control module. Plug the standard USB-A end into an available USB port on your computer or a powered USB hub.
- 4. **Connect Micro USB to Controller:** Ensure the micro USB connector from the main cable is securely plugged into the port on the mouse pad's control module.



Image: A hand connecting the micro USB cable to the control module of the mouse pad, illustrating the power connection step.

The LED lighting should illuminate upon successful connection.

OPERATING THE LED LIGHTING

The ENHANCE XXL LED Gaming Mouse Pad features a single control button for managing its lighting effects.

- Power On/Off: Press and hold the control button for approximately 3 seconds to turn the LED lighting on or
 off.
- Change Colors: Short press the control button to cycle through 7 distinct static colors.
- **Change Modes:** Continue short pressing the button after cycling through static colors to activate 3 dynamic lighting modes: Breathing, Shifting, and Wave.
- **Memory Function:** The mouse pad will remember your last selected color or mode setting when powered off and on again.



Image: A finger pressing the single control button on the mouse pad's module, used for changing LED colors and modes.



Image: A visual representation of the 7 available LED colors and the 3 dynamic lighting modes (Breathing, Shifting, Wave) that can be cycled through.

MAINTENANCE

- **Cleaning:** The mouse pad features a water-resistant tracking surface. For minor spills or dust, gently wipe the surface with a damp cloth. Avoid using harsh chemicals or abrasive materials.
- Storage: When not in use for extended periods, store the mouse pad rolled up loosely to prevent creasing.



Image: Water droplets resting on the mouse pad's surface, highlighting its water-resistant properties for easy cleaning.

TROUBLESHOOTING

· LEDs are not lighting up:

- Ensure the USB cable is securely connected to both the mouse pad's control module and a powered USB port on your computer or hub.
- Try connecting the USB cable to a different USB port to rule out a port issue.
- Verify that the control button has been pressed and held for 3 seconds to power on the LEDs.

• LEDs are dim or inconsistent:

- Ensure the USB port provides sufficient power. Try connecting to a different USB port, preferably a direct port on your computer rather than a hub.
- Check for any physical damage to the fiber optic cable along the edges of the mouse pad.

SPECIFICATIONS

Feature	Detail
Model Number	ENPCPXE100MCEW
Dimensions (LxWxH)	32 x 14 x 0.43 inches (81.28 x 35.56 x 1.09 cm)
Weight	1.45 pounds (0.66 kg)
LED Colors	7 Static Colors
LED Modes	3 Dynamic Modes (Breathing, Shifting, Wave)
Surface Material	Water-resistant tracking surface
Base Material	Non-slip rubberized grip



Image: The mouse pad with its dimensions clearly marked as 32 inches in length and 14 inches in width.

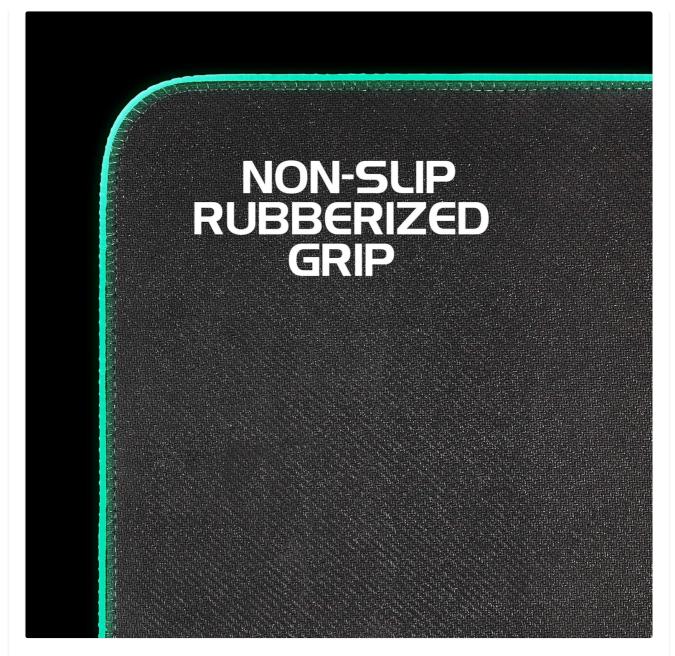


Image: A detailed view of the cross-hatched non-slip rubberized grip on the base of the mouse pad, designed to keep it stable on various desk surfaces.

WARRANTY AND SUPPORT

The ENHANCE XXL LED Gaming Mouse Pad is backed by a**3-Year Manufacturer Warranty**. For warranty claims or technical support, please refer to the contact information provided with your product packaging or visit the official ENHANCE Gaming website.

© 2023 ENHANCE. All rights reserved.

