

BLACK+DECKER BXMZ701E

BLACK+DECKER BXMZ701E 20L Microwave with Grill User Manual

Model: BXMZ701E (Reference: ES9700060B)

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children. This appliance is equipped with a child lock feature.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only use utensils that are suitable for use in microwave ovens.
- The microwave oven is intended for heating food and beverages. Drying of clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- The appliance should be cleaned regularly and any food deposits removed.
- Failure to maintain the appliance in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

2. PRODUCT DESCRIPTION AND COMPONENTS

The BLACK+DECKER BXMZ701E is a 20-liter microwave oven with an integrated grill function, designed for domestic use. It offers various cooking options, including microwave heating, grilling, combined cooking, and defrosting.

Key Features:

- 20L Capacity
- 700W Microwave Power
- 900W Grill Power
- 99-minute Digital Timer with audible alert
- Digital Clock
- 10 Microwave Power Levels
- 6 Auto-Menu Programs
- Defrost Function (by weight or time)
- 2 Combined Cooking Functions (Microwave + Grill)
- Interior Light
- Child Lock

Included Components:

- BLACK+DECKER BXMZ701E Microwave with Grill
- Glass Turntable (245 mm diameter)
- Turntable Ring
- Grill Rack
- Instruction Manual



Figure 1: Front view of the BLACK+DECKER BXMZ701E Microwave with Grill. The microwave is white with a black door and a digital display on the right showing '14:30'. Below the display are various control icons and buttons.



Figure 2: Front view of the microwave, visually indicating its 20L capacity on the door.

3. CONTROL PANEL OVERVIEW

The control panel features a digital display and various buttons and icons for selecting functions and setting cooking parameters.



Figure 3: Close-up of the control panel. It shows a digital clock, icons for various cooking modes (e.g., popcorn, pizza, defrost), power level indicators, and buttons for setting minutes, seconds, and starting/pausing operation.

Control Panel Elements:

- **Digital Display:** Shows time, power level, and cooking status.
- **Auto Menu Icons:** Represent preset cooking programs (e.g., Potatoes, Popcorn, Pizza, Liquids, Frozen Food, Reheat).
- **Power Level Button:** Adjusts microwave power.
- **Grill Button:** Activates grill function.
- **Combined Cooking Button:** Selects combined microwave and grill functions.
- **Defrost Button:** Initiates defrost by weight or time.
- **Time/Weight Adjustment Buttons:** Used to set cooking time or food weight.
- **Start/Pause Button:** Starts or pauses cooking.
- **Stop/Clear Button:** Stops cooking or clears settings.
- **Clock Button:** Sets the current time.

4. SETUP

Unpacking:

1. Remove all packaging materials from inside and outside the microwave oven.
2. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.
3. Ensure all accessories are present: glass turntable, turntable ring, and grill rack.

Placement:

- Place the microwave on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it.
- Allow adequate ventilation space: at least 20 cm above the oven, 10 cm at the rear, and 5 cm on both sides.
- Do not block air vents.
- Keep the microwave away from heat sources and strong magnetic fields.

Electrical Connection:

- Ensure the voltage indicated on the rating label matches your household power supply.
- Plug the microwave into a properly grounded wall outlet. Do not use extension cords or adapters.

5. OPERATING INSTRUCTIONS

5.1 Setting the Clock

1. Press the 'Clock' button.
2. Use the time adjustment buttons to set the hour.
3. Press the 'Clock' button again.
4. Use the time adjustment buttons to set the minutes.
5. Press the 'Clock' button one last time to confirm.

5.2 Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the door.
3. Press the 'Power Level' button repeatedly to select the desired power level (1-10).
4. Use the time adjustment buttons to set the cooking time (up to 99 minutes).
5. Press the 'Start/Pause' button to begin cooking.

5.3 Grill Cooking

The grill function is ideal for browning and crisping food. Use the provided grill rack for best results.



Figure 4: A pie or similar food item placed on the grill rack inside the microwave for grilling.

1. Place food on the grill rack, then place the rack on the glass turntable.
2. Close the door.
3. Press the 'Grill' button.
4. Use the time adjustment buttons to set the grilling time.
5. Press the 'Start/Pause' button to begin grilling.

5.4 Combined Cooking (Microwave + Grill)

This microwave offers 2 combined functions for versatile cooking.

1. Place food in a suitable container on the grill rack or turntable.
2. Close the door.
3. Press the 'Combined Cooking' button to cycle through the available combinations.
4. Use the time adjustment buttons to set the cooking time.
5. Press the 'Start/Pause' button to begin.

5.5 Defrost Function

The defrost function allows you to defrost food by weight or by time.

Defrost by Weight:

1. Place frozen food on the turntable.
2. Press the 'Defrost' button.
3. Use the weight adjustment buttons to select the food weight.
4. Press the 'Start/Pause' button.

Defrost by Time:

1. Place frozen food on the turntable.
2. Press the 'Defrost' button twice.
3. Use the time adjustment buttons to set the defrosting time.
4. Press the 'Start/Pause' button.

5.6 Auto Menu Programs

The microwave includes 6 preset programs for common food items:

- Potatoes (230g slice)
- Popcorn (99g)
- Pizza (150-450g)
- Liquids (200ml)
- Frozen Foods (250-500g)
- Reheat (200-800g)

1. Place food in the microwave.
2. Press the corresponding Auto Menu icon/button for your desired food item.
3. Adjust the quantity/weight if prompted.
4. Press the 'Start/Pause' button.

5.7 Child Lock

To activate the child lock, press and hold the 'Stop/Clear' button for 3 seconds. The display will show an indicator (e.g., 'LOCK'). To deactivate, press and hold the 'Stop/Clear' button again for 3 seconds.

6. CLEANING AND MAINTENANCE

Regular cleaning helps maintain the performance and longevity of your microwave oven.

Exterior Cleaning:

- Wipe the exterior with a damp cloth and mild detergent.
- Avoid abrasive cleaners or scouring pads.

Interior Cleaning:

- Clean the interior cavity after each use with a damp cloth.
- For stubborn food splatters, place a bowl of water with lemon slices inside and microwave on high for 2-3 minutes. The steam will loosen the residue, making it easier to wipe clean.
- The interior coating is designed for easy cleaning.

Turntable and Ring:

- The glass turntable and turntable ring can be removed and washed in warm soapy water or in a dishwasher.
- Ensure they are completely dry before placing them back in the oven.

Grill Rack:

- Clean the grill rack with warm soapy water.
- Do not use abrasive materials that could scratch the surface.

7. TROUBLESHOOTING

If you encounter issues with your microwave, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven will not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is securely in outlet; Close door firmly; Check household fuse or reset circuit breaker.
Food not heating	Incorrect cooking time or power level set; Door not closed properly.	Adjust cooking time/power; Ensure door is fully closed.
Turntable not rotating	Turntable or ring not correctly placed; Obstruction under turntable.	Reposition turntable and ring; Remove any obstructions.
Excessive steam inside door	Cooking high-moisture foods.	This is normal for some foods and does not indicate a fault. Wipe clean after use.
Oven light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.

8. TECHNICAL SPECIFICATIONS

Specification	Value
Brand	BLACK+DECKER

Specification	Value
Model Number	BXMZ701E (ES9700060B)
Capacity	20 Liters
Product Dimensions (D x W x H)	36.1 x 44.6 x 24.3 cm
Weight	11.22 kg
Microwave Power	700 Watts
Grill Power	900 Watts
Voltage	240 Volts (AC)
Color	White
Material	Plastic
Installation Type	Freestanding
Special Features	Defrost Function, Digital Clock, Child Lock
Turntable Diameter	245 mm

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official BLACK+DECKER website. Keep your purchase receipt as proof of purchase for any warranty claims.