

Tribit BTH92-S1

Tribit FlyBuds 3 Wireless Earbuds User Manual

Model: BTH92-S1

INTRODUCTION

Thank you for choosing Tribit FlyBuds 3 Wireless Earbuds. This manual provides essential information for setting up, operating, and maintaining your earbuds to ensure optimal performance and longevity. Please read this manual thoroughly before use.

PRODUCT OVERVIEW

Package Contents

- Tribit FlyBuds 3 Wireless Earbuds (Left and Right)
- Charging Case
- Ear Tips (various sizes)
- USB Charging Cable
- User Manual

Key Features

- **Extended Playtime:** Up to 7 hours of music playback on a single charge, with an additional 103 hours provided by the charging case, totaling approximately 110 hours.
- **Quick Charge:** 10 minutes of charging provides 1.5 hours of listening time.
- **Bluetooth 5.2 Connectivity:** Ensures stable and efficient wireless connection up to 10 meters.
- **IPX8 Waterproof Rating:** Designed to withstand sweat and rain, suitable for workouts and outdoor activities.
- **Touch Control:** Intuitive touch sensors for managing playback, calls, and voice assistant.
- **Deep Bass Sound:** Equipped with 6mm drivers and Bass Up™ technology for enhanced bass response.

- **Hall Switch:** Earbuds automatically connect when the charging case is opened.
- **Power Bank Functionality:** The 2600mAh charging case can provide emergency power to other devices.
- **Customizable Fit:** Unique earfins ensure a secure and comfortable fit, preventing accidental falls during activity.
- **Tribit App Support:** Personalize your audio experience with multiple EQ settings via the Tribit App.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. The charging case has a built-in 2600mAh battery.

- Place the earbuds into the charging case. Ensure they are properly seated.
- Connect the USB charging cable to the charging port on the case and to a power source.
- The LED indicators on the charging case will show the charging status. A full charge takes approximately 2 hours.



Image: Tribit FlyBuds 3 earbuds inside their charging case, with one earbud shown outside the case. This illustrates the product and its charging method.

110Hrs
Playtime

103hrs
cycle playtime

15 times
recharge

7 hrs
music playtime



Image: Graphic illustrating the 110 hours of total playtime, breaking it down into 7 hours for the earbuds and 103 hours from the charging case's recharges.

Power Supply in Emergency



**Built-in 2000mAh rechargeable
lithium-ion battery**

Image: The Tribit FlyBuds 3 charging case connected via a USB cable to a smartphone, demonstrating its power bank functionality.

2. Pairing with Your Device

- Open the charging case. The earbuds will automatically enter pairing mode.
- On your device (smartphone, tablet, etc.), enable Bluetooth.
- Search for "Tribit FlyBuds 3" in the list of available Bluetooth devices and select it to connect.
- Once connected, the earbuds will indicate successful pairing.
- For re-pairing or connecting to a new device, long press the MFB button on the charging case for 10 seconds to enter re-pairing mode.

MFB Button Hall Switch

Thanks to Hall Switch, FlyBuds 3 will be automatically connected once open the case.



Image: The Tribit FlyBuds 3 charging case with an arrow pointing to the Multi-Function Button (MFB), detailing its functions: short press for battery, long press for re-pairing, and press to output power.


3. Choosing the Right Fit

The Tribit FlyBuds 3 come with unique earfins and multiple ear tip sizes to ensure a secure and comfortable fit. Experiment with different sizes to find the best seal for optimal sound quality and stability.

- Gently insert the earbud into your ear canal.
- Rotate the earbud slightly until the earfin sits comfortably and securely in your outer ear.
- A proper fit will provide better bass response and passive noise isolation.

Unique Earfins

for Customizable Fit

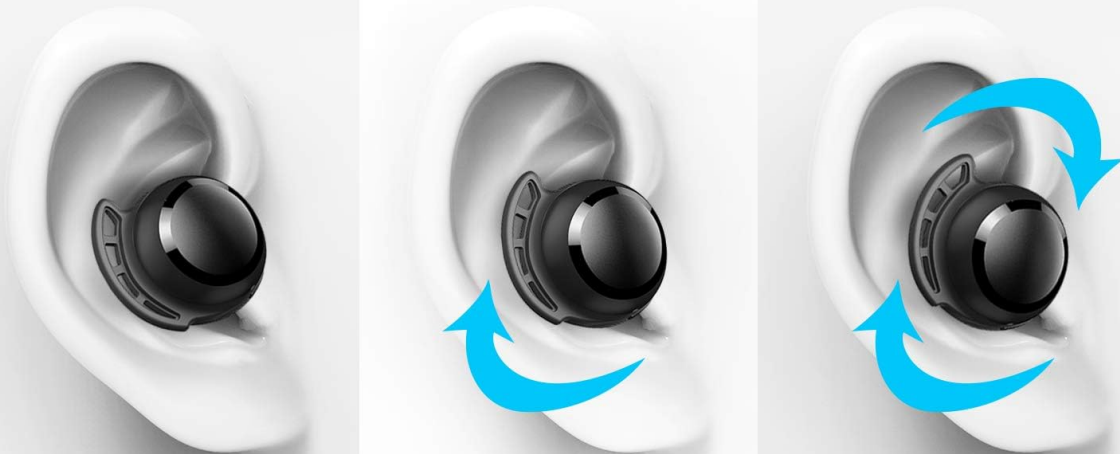

No falling out. Just move as you want.

Image: A diagram showing how the Tribit FlyBuds 3 earbuds with their unique earfins fit securely into the ear, illustrating the customizable fit and stability.

OPERATING INSTRUCTIONS

Touch Controls

Action	Function
Single Tap	Play/Pause music, Answer/End call
Double Tap (Right Earbud)	Next Track
Double Tap (Left Earbud)	Previous Track
Triple Tap	Activate Voice Assistant
Long Press (Right Earbud)	Volume Up
Long Press (Left Earbud)	Volume Down
Long Press (Incoming Call)	Reject Call

Using the Tribit App

Enhance your listening experience by downloading the Tribit App. The app allows you to customize EQ settings, update firmware, and access additional features. Ensure you have the latest version of FlyBuds 3SC (Model: BTH92SC) for full app compatibility.

- Download the "Tribit" app from your device's app store.
- Open the app and ensure your FlyBuds 3 are connected via Bluetooth.
- Explore various preset EQ options or create your own custom sound profile.

Listen to what you want to hear

Personalize your music style via Tribit App



Note: Tribit FlyBuds 3 series wireless earbuds only support the latest version of FlyBuds 3SC(Model: BTH92SC) to use the Tribit APP, please pay attention to the difference between the old and new versions.

Image: A screenshot of the Tribit App interface on a smartphone, showing equalizer settings and various sound profiles like Preset EQ, Default EQ Sound, ACG, Jazz, and Bass.

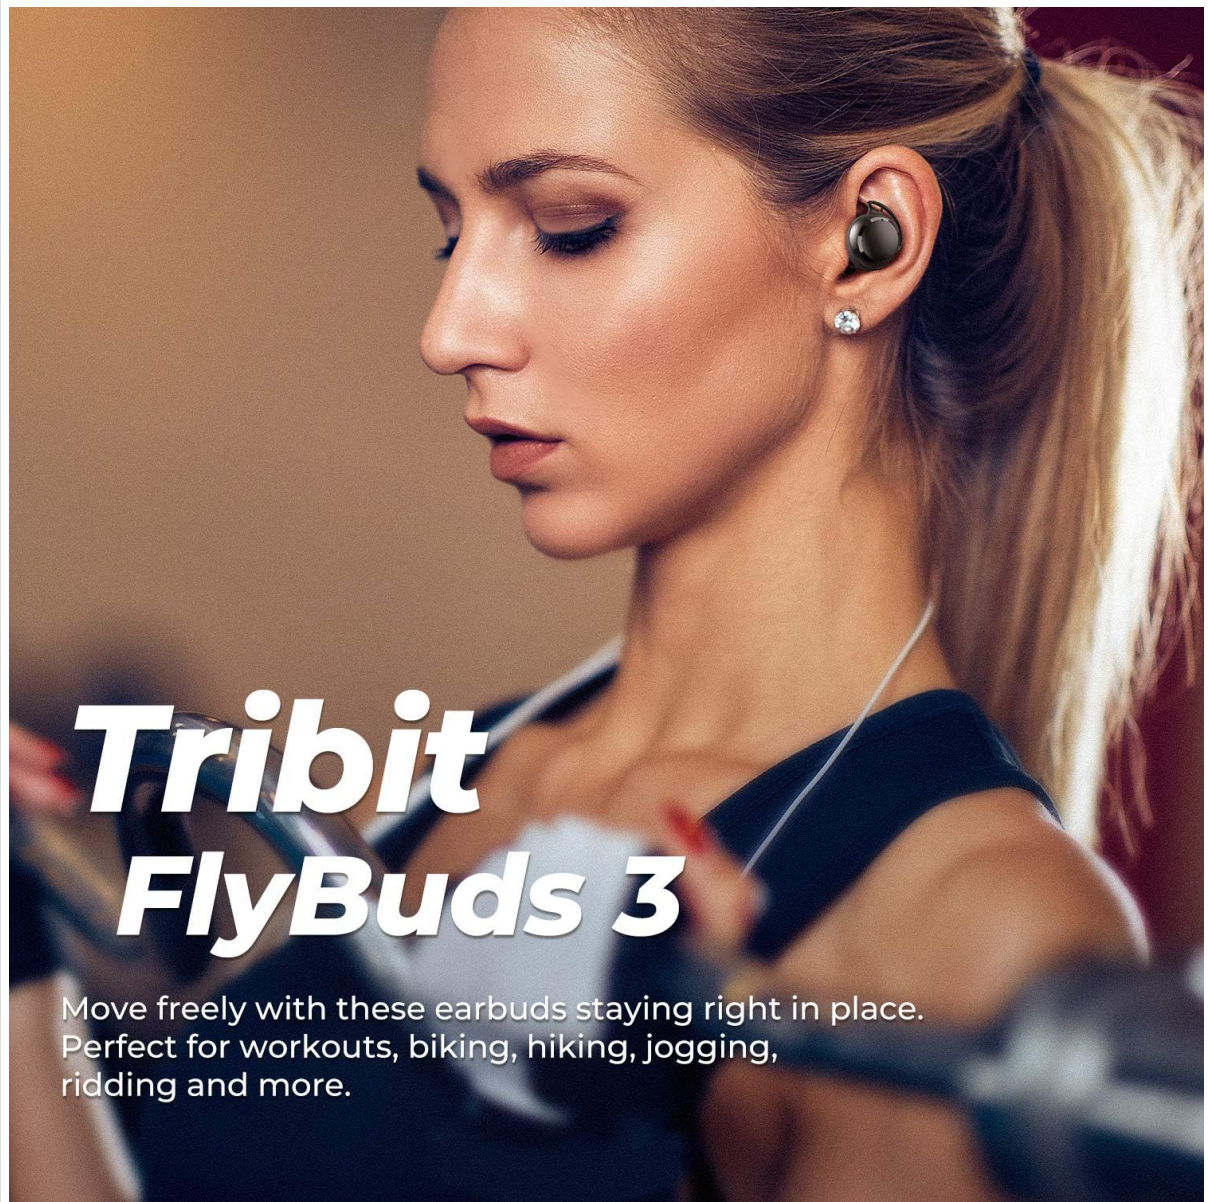


Image: A woman wearing Tribit FlyBuds 3 earbuds during a workout, highlighting their secure fit and suitability for active use.

MAINTENANCE

Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove ear tips and clean them with mild soap and water, then dry thoroughly before reattaching.
- Do not use abrasive cleaners or solvents.
- Ensure charging contacts on both earbuds and case are clean and dry.

Storage

- Store the earbuds in their charging case when not in use to protect them and keep them charged.
- Avoid storing in extreme temperatures or high humidity.

TROUBLESHOOTING

Problem	Solution
Earbuds not pairing	Ensure earbuds are charged. Place them in the case, close, then open. Long press the MFB button on the case for 10 seconds to enter re-pairing mode. Check your device's Bluetooth settings.
No sound from one earbud	Ensure both earbuds are charged and properly seated in the case. Try resetting the earbuds by placing them in the case, closing it, and then opening it again. Re-pair if necessary.
Low volume or poor sound quality	Adjust volume on both your device and the earbuds. Ensure ear tips provide a good seal in your ear canal. Clean ear tips and earbud grilles.
Charging case not charging	Check the USB cable and power adapter. Ensure the charging port is clean and free of debris.
Earbuds falling out	Try different sizes of ear tips and earfins to find the most secure and comfortable fit for your ears.

SPECIFICATIONS

Feature	Detail
Model Name	FlyBuds 3 (BTH92-S1)
Connectivity	Bluetooth 5.2
Bluetooth Range	Up to 10 meters (33 feet)
Earbud Battery Life	Up to 7 hours
Total Playtime (with case)	Up to 110 hours
Charging Case Battery	2600mAh Lithium Ion
Charging Time	Approx. 2 hours (case)
Water Resistance	IPX8
Control Method	Touch
Driver Size	6mm Dynamic Drivers
Product Dimensions	3.94 x 3.94 x 0.79 inches
Item Weight	3.75 ounces (106.2 grams)

WARRANTY AND SUPPORT

Tribit products come with a standard manufacturer's warranty. For detailed warranty information, product support, or technical assistance, please visit the official Tribit website or contact their customer service. Keep your purchase receipt for warranty claims.

Official Tribit Store: [Tribit Amazon Store](#)

