

[Manuals.plus](#) /

› [CubiCubi](#) /

› CubiCubi Computer Desk TS-HD-47W 47-inch with Storage Shelves Instruction Manual

CubiCubi TS-HD-47W

CubiCubi Computer Desk TS-HD-47W 47-inch with Storage Shelves Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your CubiCubi Computer Desk TS-HD-47W. Designed for home and office use, this 47-inch desk features integrated storage shelves to enhance your workspace organization.



Image: The CubiCubi Computer Desk TS-HD-47W in a typical office setup, showcasing its design and functionality.

SETUP AND ASSEMBLY

The CubiCubi Computer Desk is designed for straightforward assembly. All necessary accessories and tools are included and organized for quick identification. Please follow the steps below for proper setup.

Package Contents

- Desk components (desktop, frame, shelves)
- Assembly hardware (screws, bolts, Allen wrench)
- Instruction manual

Assembly Steps

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list in the included manual.

2. **Assemble Frame:** Attach the metal frame components using the provided hardware. Ensure all connections are secure but do not overtighten initially.
3. **Install Shelves:** Position and secure the storage shelves to the frame. Note the reversible design allows for shelf placement on either the left or right side of the desk to suit your room layout.
4. **Attach Desktop:** Place the desktop onto the assembled frame and secure it with the designated screws.
5. **Final Tightening:** Once all components are in place, fully tighten all screws and bolts to ensure stability.

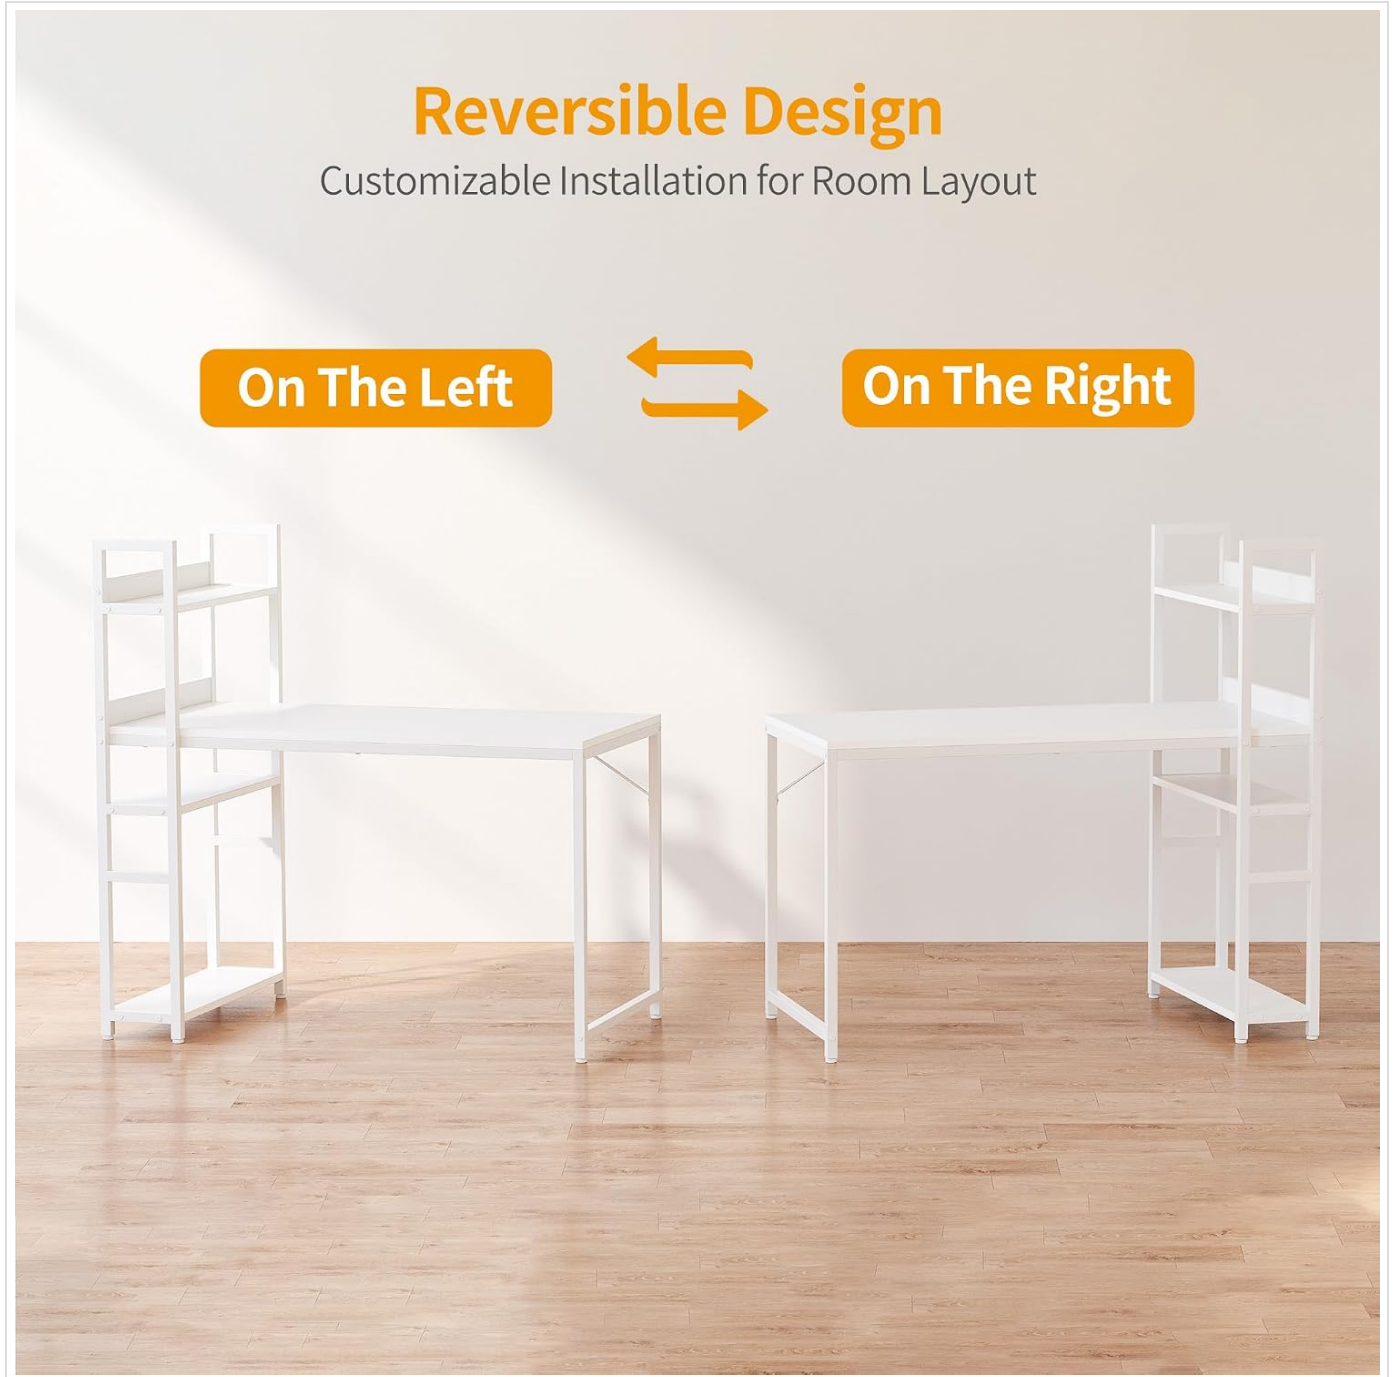 


Image: Illustration of the desk's reversible design, allowing the storage shelves to be installed on either the left or right side.

 
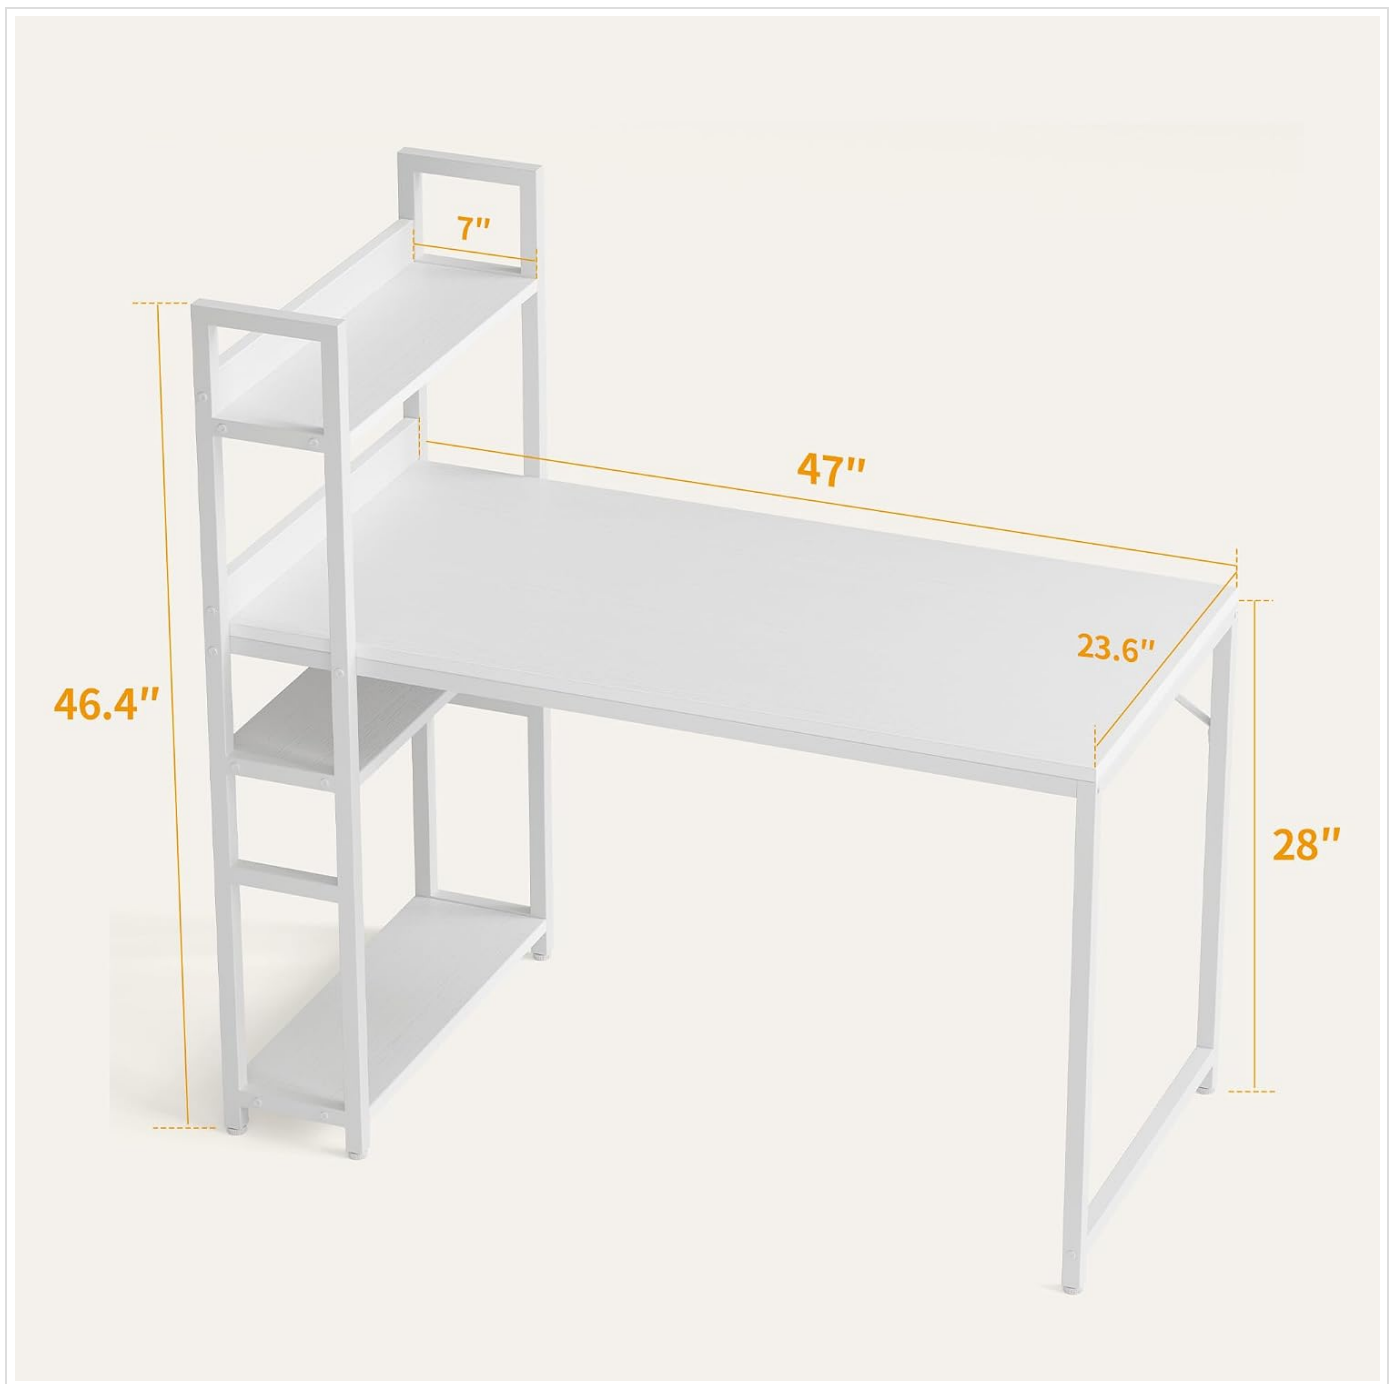 


Image: Detailed dimensions of the CubiCubi Computer Desk, including the desktop and shelf unit measurements.

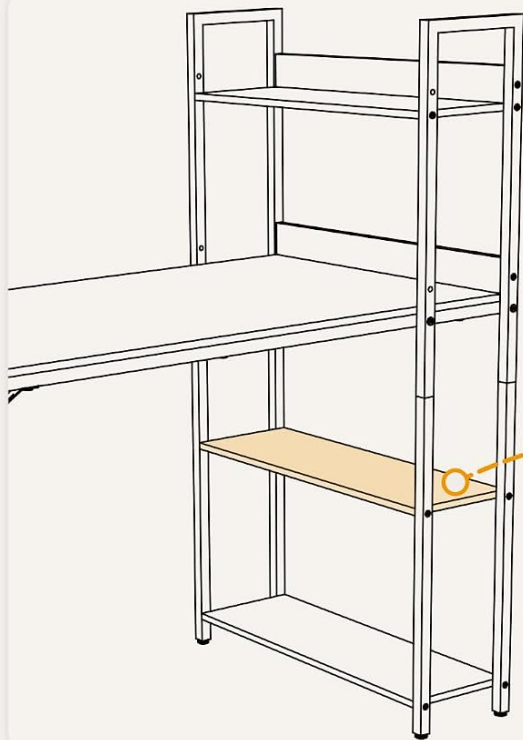

Removable Middle Shelf

Suitable for various needs



Image: A diagram demonstrating the removable middle shelf, which can be adjusted or removed to accommodate larger items like a computer tower.

OPERATING AND USAGE

The CubiCubi Computer Desk provides a spacious and functional workspace. Its 47-inch by 23.6-inch surface offers ample room for various activities, while the integrated 4-tier storage shelves help keep your essentials organized and within reach.

Key Features

- **Spacious Desktop:** Accommodates monitors, keyboards, mice, and other work accessories.
- **Integrated Storage:** Four tiers of shelves provide efficient storage for books, documents, office supplies, or decorative items.
- **Sturdy Construction:** Built with a metal frame and MDF board for stability and durability.
- **Modern Aesthetic:** The simple style and white finish complement various interior designs.



Image: The desk in use, demonstrating its capacity for a computer setup and organized storage.



Image: A detailed view of the storage shelves, highlighting their capacity for organizing various items.

CARE AND MAINTENANCE

To ensure the longevity and appearance of your CubiCubi Computer Desk, follow these simple care and maintenance guidelines.

Cleaning Instructions

- **Regular Cleaning:** Wipe the desktop and frame regularly with a soft, damp cloth to remove dust and spills.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, strong detergents, or solvents, as these can damage the finish.
- **Spill Management:** Immediately wipe up any liquid spills to prevent staining or damage to the engineered wood surface.

General Care

- **Protect Surface:** Use coasters for drinks and desk pads for writing or heavy objects to prevent scratches and marks.
- **Avoid Extreme Conditions:** Keep the desk away from direct sunlight, excessive heat, or high humidity to prevent warping or discoloration.
- **Check Connections:** Periodically inspect and tighten all screws and bolts to maintain the desk's stability.

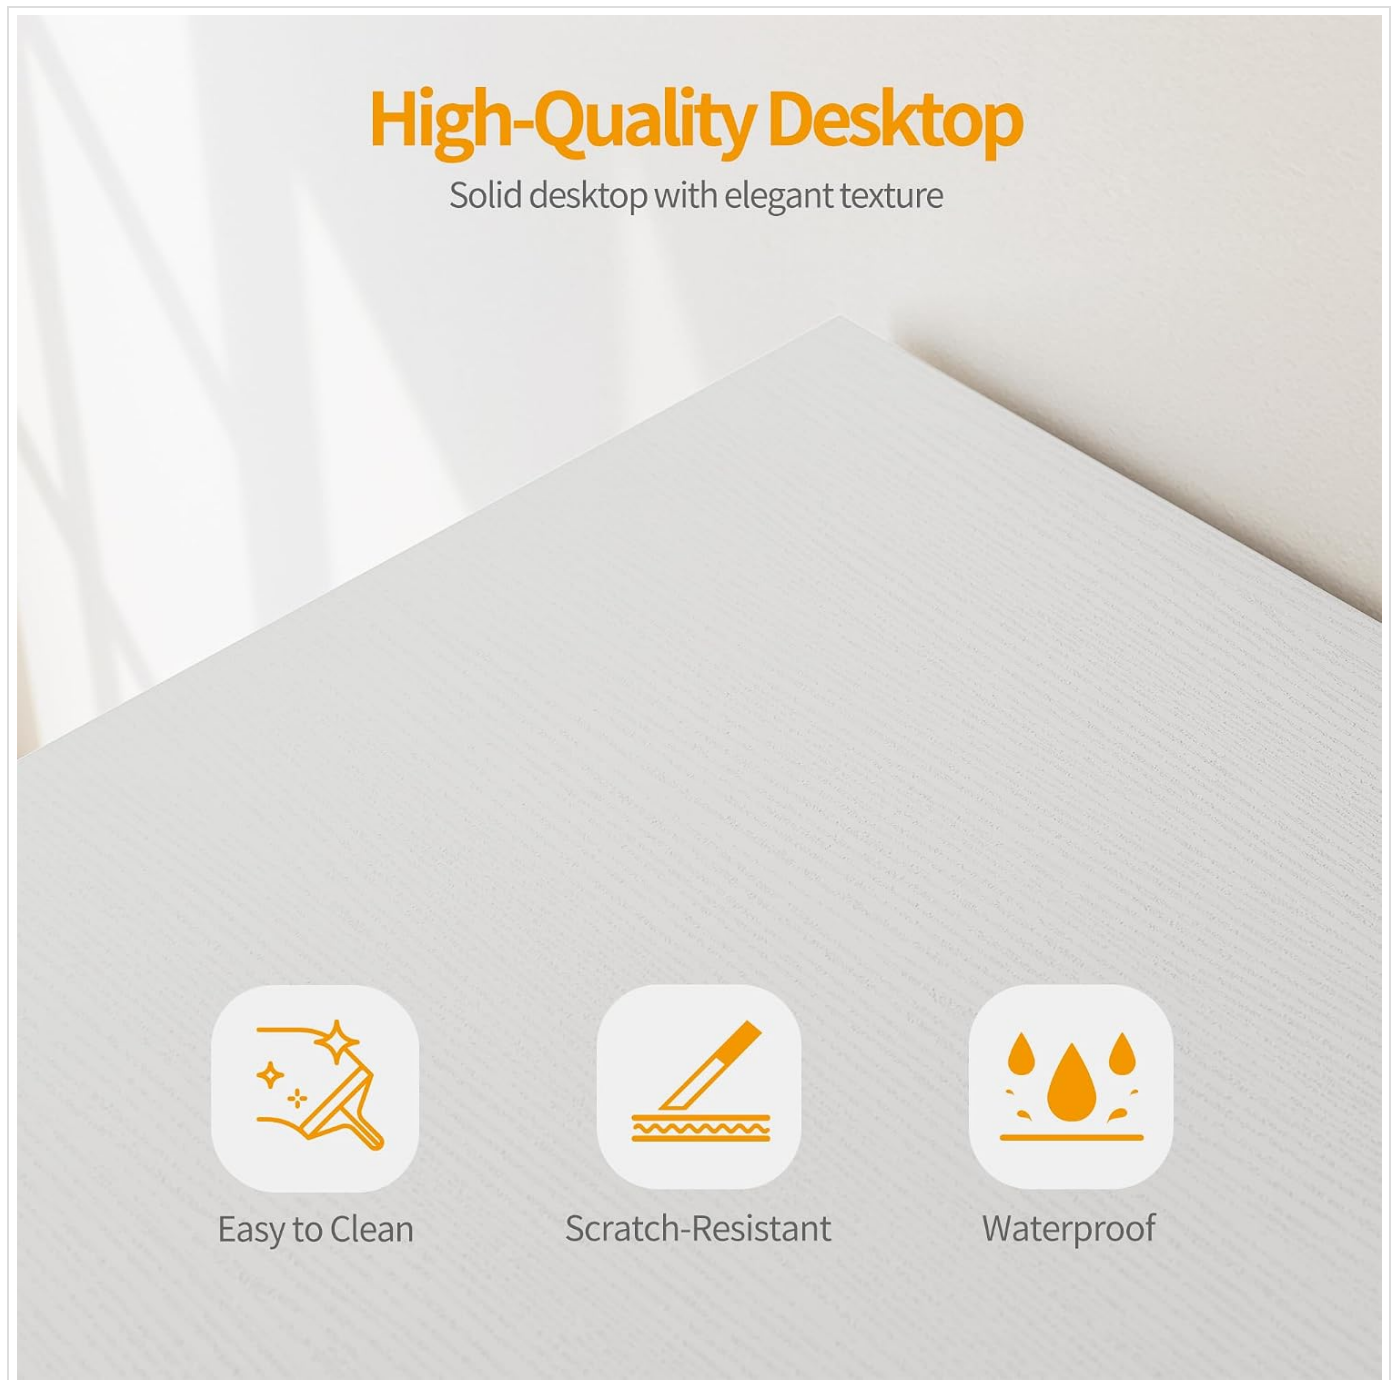 


Image: Visual representation of the desktop's easy-to-clean, scratch-resistant, and waterproof properties.

TROUBLESHOOTING

This section addresses common issues you might encounter with your CubiCubi Computer Desk.

Desk Wobbles After Assembly

- **Check All Connections:** Ensure all screws and bolts are fully tightened. Loose connections are a common cause of instability.

- **Level Surface:** Verify that the desk is placed on a flat, level surface. Uneven flooring can cause wobbling.
- **Adjust Leveling Feet:** If your desk includes adjustable leveling feet, use them to compensate for uneven floors.

Missing Parts or Damaged Components

- **Review Parts List:** Double-check the package contents against the parts list in the manual.
- **Contact Customer Service:** If parts are genuinely missing or damaged, refer to the Customer Support section for contact information.

Difficulty During Assembly

- **Re-read Instructions:** Carefully review the assembly manual, paying close attention to diagrams and step-by-step instructions.
- **Do Not Force Parts:** If parts do not fit easily, re-check the orientation and ensure you are using the correct components for that step.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	CubiCubi
Model Number	TS-HD-47W
Shape	Rectangular
Desk Design	Computer Desk
Colour	White
Style	Modern
Base Material	Engineered Wood, Metal
Top Material Type	Engineered Wood
Finish Type	Matte, Powder Coated
Item Dimensions (L x W x H)	120 x 60 x 117 Centimeters (approx. 47 x 23.6 x 46.4 inches)
Item Weight	19.14 Pounds
Number Of Shelves	4
Assembly Required	Yes
Maximum Weight Recommendation	110 Kilograms
UPC	723849624052

WARRANTY INFORMATION

The CubiCubi Computer Desk TS-HD-47W comes with a limited warranty. Additionally, every order includes a 30-day risk-free guarantee.

For specific details regarding the terms and conditions of the limited warranty, please refer to the documentation included

with your product or contact CubiCubi customer service.

CUSTOMER SUPPORT

For any inquiries, assistance with assembly, or to report missing/damaged parts, please contact CubiCubi customer service. Our team is committed to providing efficient and professional support. Please have your model number (TS-HD-47W) and purchase information ready when contacting support to facilitate a quicker resolution. Contact information can typically be found on the product packaging or the official CubiCubi website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question