

## SUPERLEX Cordless Handheld Vacuum Cleaner

# SUPERLEX Cordless Handheld Vacuum Cleaner Instruction Manual

Model: Cordless Handheld Vacuum Cleaner

## 1. INTRODUCTION

---

Thank you for choosing the SUPERLEX Cordless Handheld Vacuum Cleaner. This versatile and portable vacuum is designed for efficient cleaning in both your home and car. To ensure optimal performance and safety, please read this instruction manual thoroughly before using the appliance and keep it for future reference.

## 2. SAFETY INSTRUCTIONS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Do not allow the vacuum cleaner to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust cup and/or filters in place.
- Exercise extra care when cleaning on stairs.
- Do not charge the unit outdoors.
- Use only the charger supplied by the manufacturer.
- Store the vacuum cleaner indoors. Put it away after use to prevent accidents.

### **3. PACKAGE CONTENTS**

---

Please check the package for the following items:

- SUPERLEX Cordless Handheld Vacuum Cleaner Unit
- Rechargeable Battery (integrated)
- Charging Dock
- Extension Hose
- Upholstery Tool
- Crevice Brush
- User Manual

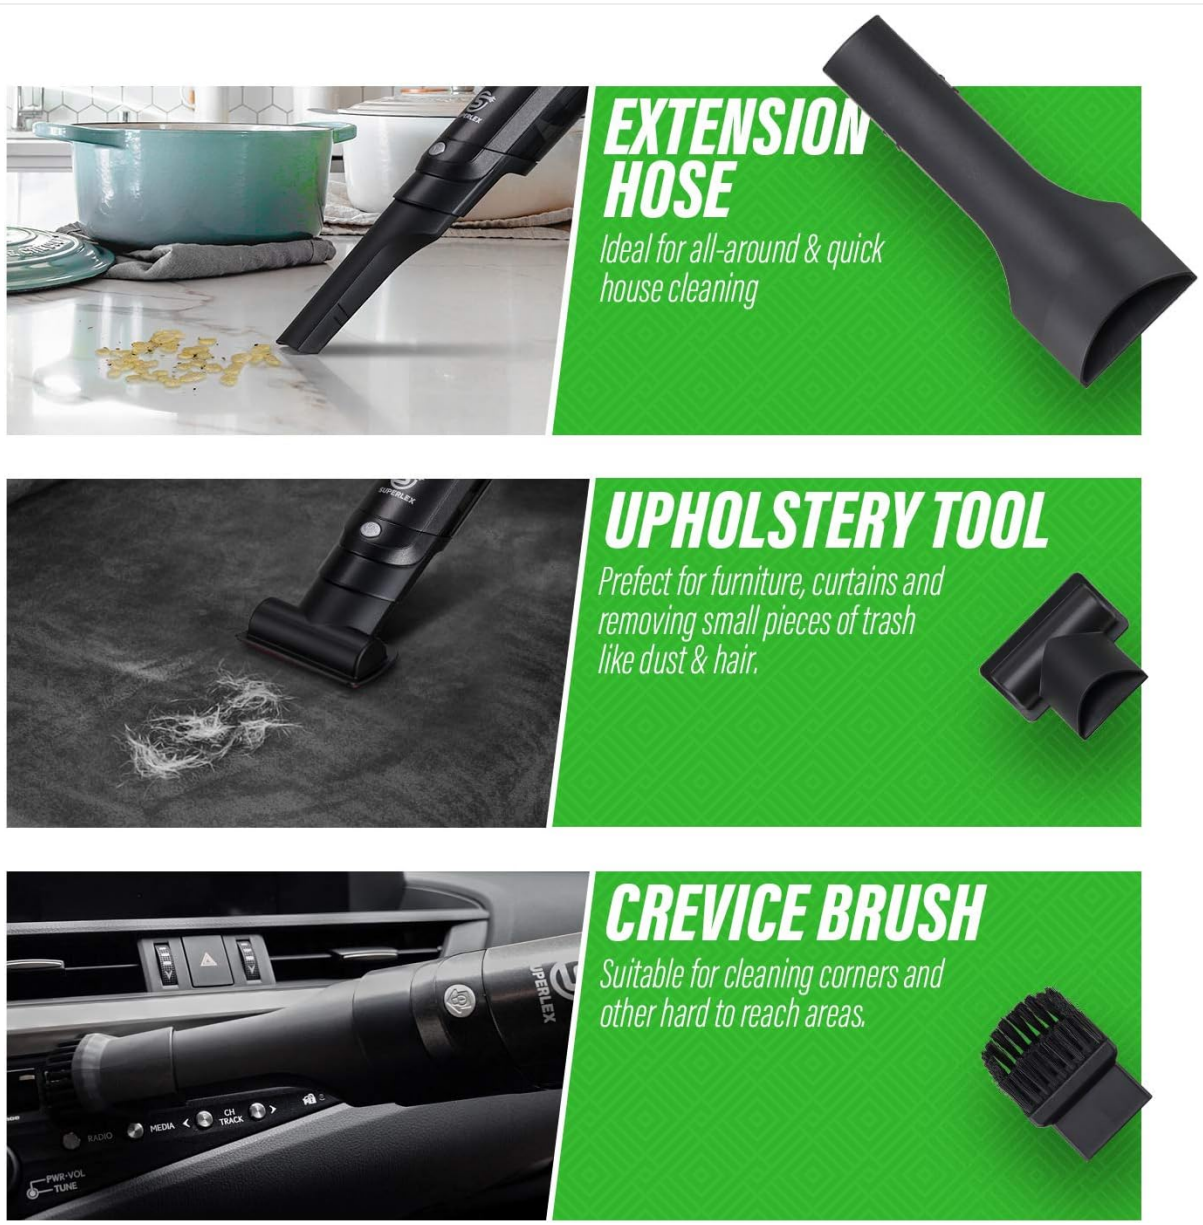


Figure 3.1: Included Accessories - Extension Hose, Upholstery Tool, and Crevice Brush.

## 4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your vacuum cleaner.

- **Power Button:** Turns the vacuum on and off.
- **Mode Button:** Switches between normal and turbo suction modes.
- **Dust Cup:** Collects debris and dust.
- **Filter Assembly:** Includes a washable stainless steel mesh filter and a HEPA filter.
- **Charging Port:** Connects to the charging dock.
- **Charging Indicator Lights:** Display charging status and battery level.



Figure 4.1: Main Unit of the SUPERLEX Cordless Handheld Vacuum Cleaner.

## 5. SETUP AND CHARGING

---

### 5.1 Initial Setup

1. Unpack all components from the box.
2. Ensure the dust cup and filter are correctly installed in the main unit.
3. Select the appropriate attachment (Extension Hose, Upholstery Tool, or Crevice Brush) for your cleaning task and firmly attach it to the vacuum's nozzle.

### 5.2 Charging the Vacuum Cleaner

Before first use, fully charge the vacuum cleaner. The unit is powered by a 2500 mAh Lithium-ion battery.

1. Place the vacuum cleaner onto the charging dock. Ensure the charging contacts align.
2. Connect the charging dock to a power outlet.
3. The charging indicator light will flash red while charging.
4. A full charge takes approximately 5 hours. Once fully charged, the indicator light will turn solid blue.
5. Always ensure the vacuum cleaner is turned off before placing it on the charging dock.



Figure 5.1: Charging the Vacuum Cleaner and Indicator Lights.

## 6. OPERATION

Your SUPERLEX Cordless Handheld Vacuum Cleaner offers two suction modes for various cleaning needs.

### 6.1 Powering On/Off

- Press the Power Button once to turn on the vacuum cleaner in Normal Power mode.
- Press the Power Button again to turn off the vacuum cleaner.

### 6.2 Selecting Suction Mode

- While the vacuum is on, press the Mode Button to switch between Normal Power and Turbo Boost modes.
- **Normal Power Mode:** Provides standard suction for everyday cleaning tasks. Offers up to 30 minutes of continuous run time.
- **Turbo Boost Mode:** Provides maximum suction for tougher messes. Offers up to 15 minutes of continuous run time.

### 6.3 Using Attachments

- **Extension Hose:** Ideal for reaching tight spaces, corners, and under furniture in both home and car.

- **Upholstery Tool:** Perfect for cleaning fabric surfaces like sofas, car seats, and curtains, effectively removing dust and pet hair.
- **Crevice Brush:** Suitable for cleaning narrow gaps, edges, and other hard-to-reach areas.



Figure 6.1: Effective Cleaning of Various Debris.

**CORDLESS**  
VACUUM CLEANER

**650g**  
Lightweight

**Unlimited**  
Working Space

**Portable**  
To Clean

**Tidy**  
Storage

**NORMAL**  
VACUUM CLEANER

Over 1KG Weights

6m  
Cleaning Range  
Within 6m radius

Bound Feet

Messy Wires

Hard to Reach

Tight Space

Carpets

Figure 6.2: Versatility and Portability of the Cordless Vacuum.

## 7. MAINTENANCE

Regular maintenance ensures your vacuum cleaner operates efficiently and prolongs its lifespan.

### 7.1 Emptying the Dust Cup

1. Ensure the vacuum cleaner is turned off.
2. Locate the dust cup release button (refer to Product Overview if needed).
3. Press the release button and carefully detach the dust cup from the main unit.
4. Empty the contents of the dust cup into a waste bin.

### 7.2 Cleaning the Filter

The vacuum features a durable stainless steel mesh filter and a HEPA filter. Regular cleaning is crucial for maintaining strong suction.

1. After emptying the dust cup, remove the filter assembly.
2. Separate the stainless steel mesh filter from the HEPA filter.
3. Rinse both filters under running water until clean. Do not use detergents or hot water.

4. Allow both filters to air dry completely for at least 24 hours before reassembling and placing them back into the dust cup. Do not use the vacuum with wet filters.
5. Periodically check the HEPA filter for wear and tear. Replace if damaged or if suction power significantly decreases even after cleaning.

## 7.3 General Cleaning

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure all openings are clear of debris.

## 8. TROUBLESHOOTING

---

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the vacuum cleaner fully.
Weak suction power.	Dust container is full.	Empty the dust container.
Weak suction power.	HEPA filter is blocked.	Clean the HEPA filter after each use. Ensure it is completely dry before reinserting.
Weak suction power.	Air inlet or attachment is blocked.	Disconnect the attachment and clear any blockage from the nozzle or hose.
Charging indicator not working.	Charger not properly connected or faulty.	Ensure charger is securely connected to both the dock and power outlet. Try a different outlet.

# When Suction Isn't Strong Enough?



Figure 8.1: Troubleshooting Guide for Suction Issues.

## 9. SPECIFICATIONS

Technical details of your SUPERLEX Cordless Handheld Vacuum Cleaner.

Feature	Detail
Brand	SUPERLEX
Model	Cordless Handheld Vacuum Cleaner
Special Feature	Cordless
Filter Type	Cartridge (with washable stainless steel mesh)
Surface Recommendation	Carpet, Hard Floors, Upholstery
Power Source	Battery Powered

Feature	Detail
Voltage	11.1 Volts
Battery Capacity	2500 mAh Lithium-ion
Included Components	Rechargeable Battery, Charging Dock, Attachments
Item Weight	1.52 Kilograms
Noise Level	80 Decibels
Run Time	Up to 30 minutes (Normal Mode), Up to 15 minutes (Turbo Mode)
Charging Time	Approx. 5 hours
Form Factor	Handheld
Color	Grey
Control Type	Push Button
Motor Life	Over 500 hours
ASIN	B087TSRX7K
GTIN/UPC	782937305563

## 10. WARRANTY AND SUPPORT

---

SUPERLEX products are manufactured to high-quality standards. This product is covered by a standard manufacturer's warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, warranty inquiries, or replacement parts, please contact your retailer or the SUPERLEX customer service department. Contact information can typically be found on the product packaging or the official SUPERLEX website.