

[Manuals.plus](#) /

> [IRIS OHYAMA](#) /

> IRIS OHYAMA Home Bakery Bread Maker IBM-020-B - 19 Menus, 1lb/2lb Capacity

## IRIS OHYAMA IBM-020-B

# IRIS OHYAMA Home Bakery Bread Maker

Model: IBM-020-B

## INTRODUCTION

---

The IRIS OHYAMA Home Bakery Bread Maker IBM-020-B is designed to simplify your baking experience, allowing you to easily prepare a variety of fresh breads, doughs, and other delicious items at home. This appliance features 19 versatile menu options, catering to diverse culinary needs from basic bread to specialty items like rice flour bread, pizza dough, udon, pasta dough, jam, and mochi. Enjoy the convenience of freshly baked goods with minimal effort.



タイマー  
最大 **13** 時間

1斤・2斤  
対応

レシピ付き  
取扱説明書

Present!

ミトン 

## ホームベーカリー IBM-020-B

Image: The IRIS OHYAMA Home Bakery Bread Maker IBM-020-B, showcasing its sleek black design and a selection of delicious items that can be made, including bread, pizza, and mochi. Key features like 19 menus, 13-hour timer, and 1lb/2lb capacity are highlighted.

### SETUP

Before first use, ensure all packaging materials are removed. Place the bread maker on a stable, flat, heat-resistant surface. Follow these steps to prepare for baking:

- Remove the Bread Pan:** Open the lid and carefully lift the bread pan out of the main unit using its handle.
- Attach the Kneading Blade:** Insert the kneading blade onto the shaft at the bottom of the bread pan. Ensure it is securely in place.
- Add Ingredients:** Add liquid ingredients first, followed by dry ingredients. For most recipes, the order is water, strong flour, sugar, salt, skim milk, butter, and finally, dry yeast. Place the dry yeast in a small indentation on top of the flour, away from liquids.
- Insert Bread Pan:** Place the bread pan back into the main unit, ensuring it clicks into position. Close the lid securely.

# 材料を入れてボタンを押すだけで 簡単に作れる



1  
本体からパン焼きケースを取り出し、  
パン羽根を取り付ける。



2  
①水 ②小麦粉  
③バター・砂糖・塩・スキムミルク  
④ドライイーストの順で材料を入れる。



3  
パンのメニューを選び、  
サイズ・焼き色・でき上がり時間を  
設定し、スタートボタンを押す。



完成  
「焼く」工程が終了し、  
ピーと10回鳴ったら焼き上がり!

Image: A visual guide demonstrating the setup process, from removing the bread pan and attaching the kneading blade to adding ingredients in the correct order and placing the pan back into the unit.

## OPERATING INSTRUCTIONS

The IRIS OHYAMA Home Bakery features a user-friendly control panel for easy operation. After adding ingredients and closing the lid:

- Select Menu:** Use the 'Menu Select' button to choose from the 19 available programs. The selected menu number will appear on the LCD screen.
- Select Size:** Use the 'Size Select' button to choose between 1lb or 2lb loaf sizes, depending on your recipe and needs.
- Adjust Crust Color:** Use the 'Crust Color Select' button to choose your preferred crust darkness: Light, Medium, or Dark.
- Set Delay Timer (Optional):** For bread menus, you can set a delay timer for up to 13 hours in 10-minute increments. This allows you to wake up to freshly baked bread. Use the '+' and '-' buttons to adjust the time.
- Start Baking:** Press the 'Start/Stop' button to begin the baking process. The LCD screen will display the remaining time. You can monitor the process through the viewing window on the lid.

The bread maker will automatically perform kneading, rising, and baking cycles according to the selected menu. A beep will sound when the process is complete.

Your browser does not support the video tag.

Video: This video demonstrates the bread maker in operation, showing the kneading process, the finished bread being removed from the pan, and a brief glimpse of mochi preparation.

## 使いやすい操作パネル

わかりやすいシンプルな操作ボタンと、  
焼き色選択や調理中の工程が一目でわかる液晶画面。



Image: A detailed view of the bread maker's control panel, highlighting the intuitive buttons for menu selection, size, crust color adjustment, and the LCD screen displaying current settings and time.

## MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your bread maker. The design allows for easy cleaning of key components:

- **Removable Kneading Blade:** The kneading blade, which can accumulate dough residue, is easily detachable for thorough cleaning.
- **Washable Bread Pan and Kneading Blade:** Both the bread pan and the kneading blade are designed to be fully washable. After each use, remove them from the unit and wash with warm, soapy water. Rinse thoroughly and dry completely before reassembling or storing.
- **Exterior Cleaning:** Wipe the exterior of the main unit with a soft, damp cloth. Do not immerse the main unit in water.

Always ensure the appliance is unplugged and cooled down before cleaning.

## TROUBLESHOOTING

---

If you encounter any issues with your IRIS OHYAMA Home Bakery, please refer to the following common troubleshooting tips:

- **Bread does not rise:** Ensure the yeast is fresh and active. Check that the water temperature is appropriate (not too hot or cold). Verify that the correct amount of ingredients has been used according to the recipe.
- **Bread is too dense or crumbly:** This can be due to incorrect ingredient ratios, especially flour and water. Ensure precise measurements. Over-kneading or under-kneading can also affect texture.
- **Kneading blade stuck in bread:** Allow the bread to cool slightly before attempting to remove it from the pan. If the blade remains, use a non-metallic utensil to gently dislodge it.
- **Unusual noise during operation:** Some noise during kneading is normal. If the noise is excessive or unusual, ensure the bread pan is correctly seated in the unit and the kneading blade is properly attached.
- **Display shows an error code:** Consult the full user manual for a list of error codes and their corresponding solutions. If the issue persists, contact customer support.

## SPECIFICATIONS

---

<b>Brand</b>	IRIS OHYAMA
<b>Model Number</b>	IBM-020-B
<b>Product Dimensions (W x D x H)</b>	Approx. 24.9 cm x 36.2 cm x 29.4 cm
<b>Product Weight</b>	Approx. 4.2 kg
<b>Power Supply</b>	AC100V (50/60Hz)
<b>Power Consumption</b>	550 W
<b>Number of Menus</b>	19 (10 Bread types, 9 Other types)
<b>Size Selection</b>	1 lb / 2 lb
<b>Crust Color Settings</b>	3 levels (Light, Medium, Dark)
<b>Delay Timer</b>	Up to 13 hours (in 10-minute increments)
<b>Power Cord Length</b>	Approx. 1.4 m
<b>Main Materials</b>	Polypropylene, Aluminum, Steel
<b>Color</b>	Black
<b>Accessories</b>	Mitten (pair)

## WARRANTY AND SUPPORT

---

Your IRIS OHYAMA Home Bakery Bread Maker IBM-020-B comes with a manufacturer's warranty to

ensure your peace of mind.

- **Warranty Period:** This product is covered by a **1-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.
- **Extended Protection Plans:** Additional protection plans, such as a 5-year accident protection plan, may be available for purchase separately. Please check with your retailer for details.
- **Customer Support:** For any questions, technical assistance, or warranty claims, please contact IRIS OHYAMA customer support. Refer to the contact information provided in your product packaging or on the official IRIS OHYAMA website.

Always refer to the complete user manual for detailed warranty terms and conditions.