

[Manuals.plus](#) /

› [Alcatel](#) /

› Alcatel Go Flip 4 4056W (T-Mobile) Flip Phone User Manual

Alcatel 4056W

Alcatel Go Flip 4 4056W User Manual

Model: 4056W

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your Alcatel Go Flip 4 4056W flip phone. Please read this manual thoroughly before operating your device to ensure proper functionality and to understand all features.

2. WHAT'S IN THE BOX

Verify that all items are present in your product packaging:

- Alcatel Go Flip 4 4056W Phone
- Power Adapter
- USB Cable

Note: The actual contents may vary slightly depending on your region or retailer.

3. DEVICE OVERVIEW

Familiarize yourself with the physical components of your Alcatel Go Flip 4 4056W.



Figure 3.1: Front view of the Alcatel Go Flip 4 4056W in the open position, displaying the internal screen and the full keypad with large, backlit buttons.



Figure 3.2: Front view of the Alcatel Go Flip 4 4056W in the closed position, featuring the external display that shows time and notifications.

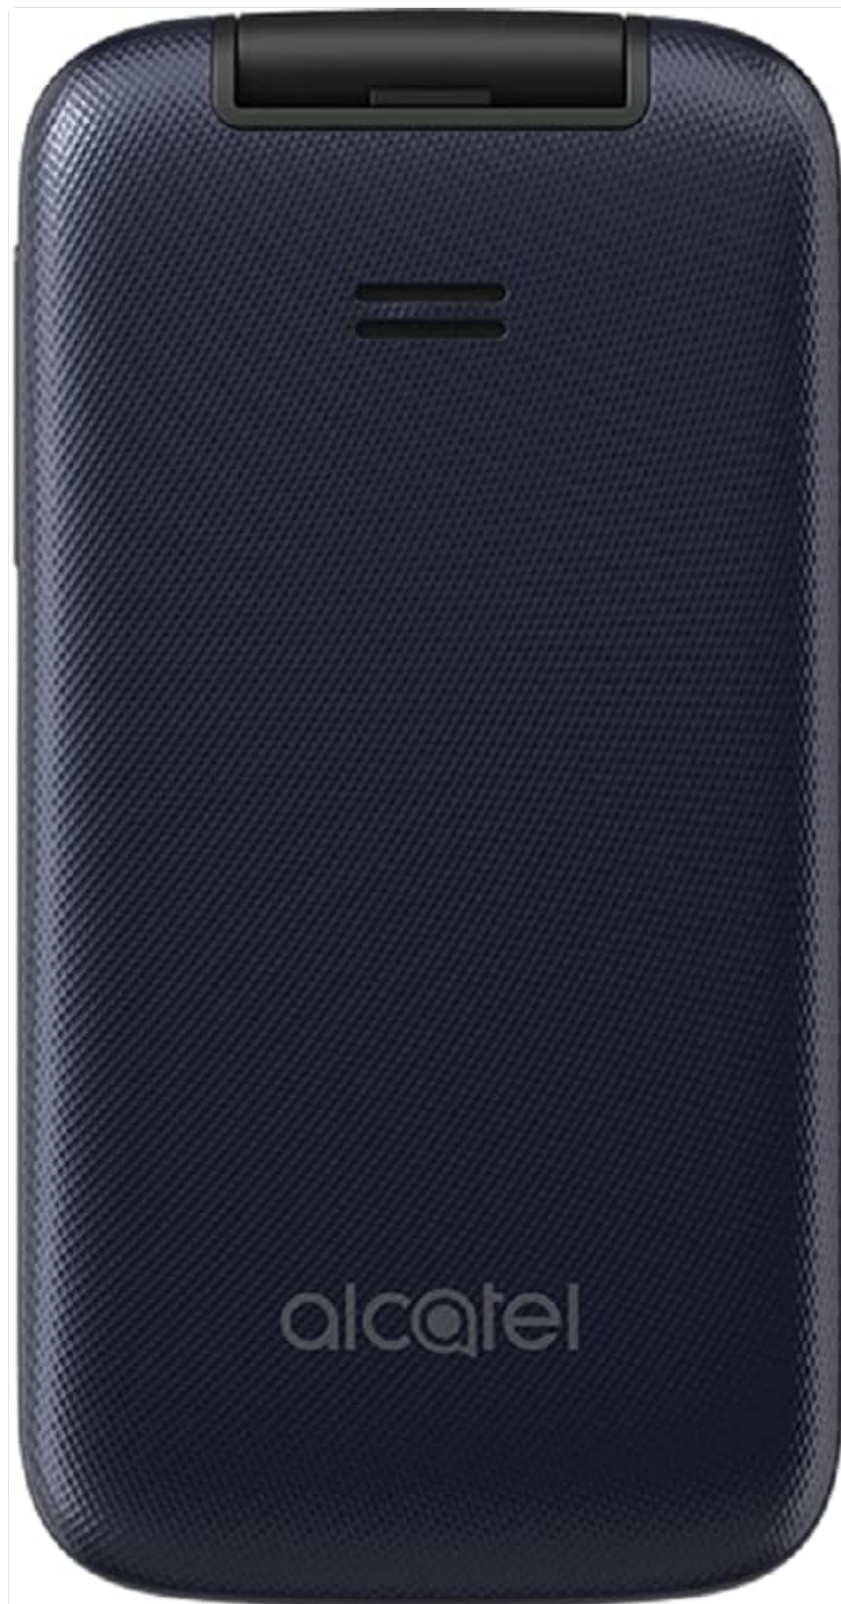


Figure 3.3: Rear view of the Alcatel Go Flip 4 4056W in the closed position, highlighting the textured back panel and the Alcatel logo.



Figure 3.4: An angled view showing both the open and closed states of the Alcatel Go Flip 4 4056W, illustrating its compact design.



Figure 3.5: A composite image displaying various perspectives of the Alcatel Go Flip 4 4056W, including front, side, and back views, showcasing its overall form factor.

4. SETUP

4.1. Installing the Battery

1. Carefully remove the back cover of the phone.
2. Insert the Lithium Ion battery (1700 mAh) into its compartment, ensuring the gold contacts align with the phone's terminals.
3. Replace the back cover until it clicks securely into place.

4.2. Inserting the SIM Card

1. With the back cover removed, locate the SIM card slot.
2. Insert your T-Mobile compatible SIM card into the slot with the gold contacts facing down and the cut corner aligned as indicated.
3. Ensure the SIM card is fully seated.

4.3. Charging the Phone

1. Connect the USB cable to the phone's charging port.
2. Connect the other end of the USB cable to the power adapter.
3. Plug the power adapter into a wall outlet.
4. Allow the phone to charge completely before first use. The battery icon on the screen will indicate charging status.

4.4. Powering On/Off

- **To Power On:** Press and hold the Power/End Call button until the screen illuminates.
- **To Power Off:** Press and hold the Power/End Call button, then select "Power Off" from the options on the screen.

5. BASIC OPERATION

5.1. Making and Receiving Calls

- **Making a Call:** Enter the phone number using the keypad and press the Green Call button.
- **Answering a Call:** When the phone rings, open the flip and press the Green Call button.
- **Ending a Call:** Press the Red End Call button or close the flip.
- The phone supports 4G LTE speeds, Voice over LTE (VoLTE), HD Voice, and Voice over Wi-Fi (VoWiFi) for clear call quality.

5.2. Sending and Receiving Messages

- Access the messaging application using the dedicated text button or through the main menu.
- Compose new messages using the keypad. The large backlit keys facilitate easy typing.

5.3. Managing Contacts

- Navigate to the "Contacts" application from the home screen or main menu.
- You can add, edit, and delete contact entries.

5.4. Using the Camera

- Access the camera application using the dedicated camera button or through the main menu.
- The phone features both front and rear cameras.
- Press the "OK" button to capture photos.

5.5. Display and Navigation

- The internal display is 2.8 inches with a resolution of 320 x 240 pixels.
- Use the directional pad and "OK" button for menu navigation.

6. ADVANCED FEATURES

6.1. Mobile Hotspot

The Alcatel Go Flip 4 4056W can share its 4G LTE internet connection with other devices.

- Navigate to the Hotspot settings in the phone's menu.
- Enable the mobile hotspot feature.
- You can connect up to 10 devices to your phone's hotspot.

6.2. Wi-Fi Connectivity

Connect your phone to available Wi-Fi networks for internet access and to utilize Voice over Wi-Fi (VoWiFi).

- Go to the Wi-Fi settings in the phone's menu.
- Select an available network and enter the password if required.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's exterior. Avoid harsh chemicals or abrasive materials.
- **Protection:** The compact and durable design helps protect buttons and screens. Keep the phone in a protective case or pouch when not in use to prevent scratches and damage.
- **Battery Care:** To prolong battery life, avoid exposing the phone to extreme temperatures. Charge the battery regularly, but avoid overcharging.
- **Software Updates:** Periodically check for software updates through the phone's settings menu to ensure optimal performance and security.

8. TROUBLESHOOTING

If you encounter issues with your phone, try the following basic troubleshooting steps:

- **Phone Not Responding:** Try restarting the phone by holding the Power/End Call button. If unresponsive, remove and reinsert the battery (if removable), then power on.
- **Cannot Make/Receive Calls:** Ensure your SIM card is properly inserted and you have network coverage. Check your account status with T-Mobile.
- **Battery Drains Quickly:** Reduce screen brightness, close unused applications, and limit background data usage. Ensure the battery is fully charged.
- **Charging Issues:** Verify that the USB cable and power adapter are securely connected and undamaged. Try a different outlet or charging accessory.
- **Poor Call Quality:** Move to an area with better network reception. If using VoWiFi, ensure your Wi-Fi connection is stable.

For more complex issues, refer to the official Alcatel support resources or contact your service provider.

9. SPECIFICATIONS

Feature	Detail
Model	Alcatel Go Flip 4 4056W (also known as GO Flip V, model 4051S)
Dimensions	0.73 x 2.08 x 4.13 inches
Weight	4.2 ounces
Operating System	Android 4.4
Internal Display	2.8 Inches, 320 x 240 resolution
Memory Storage Capacity	4 GB (expandable via microSD card slot)
RAM	128 MB
Battery Type	1 Lithium Ion battery required
Battery Capacity	1700 Milliampere Hour (mAh)
Phone Talk Time	Up to 12 Hours
Wireless Communication	Cellular (4G LTE), Wi-Fi, Bluetooth
Connectivity Technologies	Wi-Fi, GPS
Camera Features	Front, Rear
Audio Jack	3.5 mm
Form Factor	Foldable Case (Flip Phone)
Human Interface Input	Buttons (Large backlit keys, dedicated text and camera buttons)

10. WARRANTY AND SUPPORT

This product is offered as an Amazon Renewed item. Amazon Renewed products are inspected, tested, and refurbished to be fully functional.

- **Return Policy:** Your purchase is eligible for Amazon Renewed coverage in conjunction with Amazon's Return Policy, typically offering a 30-day return/replacement period. Please refer to Amazon's official return policy for the most current details.
- **Technical Support:** For technical assistance, please refer to the official Alcatel support website or contact your service provider (T-Mobile).

For specific warranty details regarding renewed products, please consult the Amazon Renewed program terms and conditions.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question